


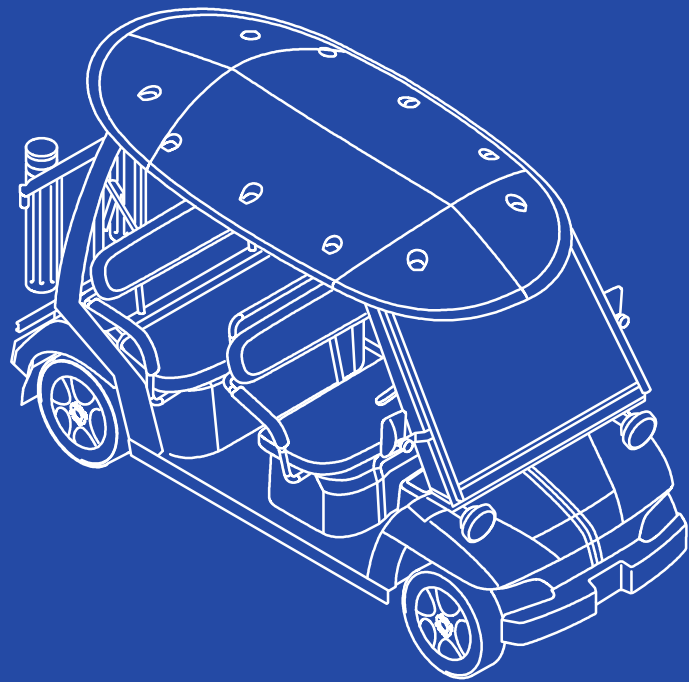

머 리 말

CT&T c-ZONE 제품을 이용해 주시는 고객님께 감사드립니다.

본 부품 카달로그는 고객 차량의 정비를 위한 보수용 부품 정보를 수록하였습니다. 부품이 필요할 경우 해당 부품의 부품 번호와 부품 명칭을 정확하게 찾아서 신청하시면 원하시는 부품을 신속하게 구입할 수 있습니다.

CT&T에서 제공하는 차량 보증과 전기 자동차 및 부품의 성능과 품질을 유지하기 위해서는 순정 부품을 꼭 사용하여 주시기 바랍니다.

본 부품 카달로그에 수록되어 있는 모든 정보 (부번, 도안)는 부품 카달로그를 발행할 당시 생산된 차량에 적용되어 있는 부품을 기준으로 하고 있으며, 차량의 품질 및 성능 향상을 위하여 예고없이 사양 및 구조 변경을 할 수 있으니 양해해 주시기 바랍니다.

본 발간물 내용의 일부 혹은 전체를 서면 동의 없이 무단으로 인쇄, 복사, 기록 등의 방법을 이용하여 어떠한 형태로도 복제, 재생, 배포하는 것을 금합니다.



FOREWORD

Thank you for using the products of CT&T c-ZONE.

This Parts Catalog contains information on vehicle parts for efficient maintenance and service of the customers' vehicles. You can promptly purchase parts when you precisely locate the numbers and names of the required parts, and place orders them with the company.

It is necessary to use only genuine parts approved by CT&T to ensure the warranty of the vehicles provided by CT&T, and to keep the capabilities and quality of the electric vehicles and the parts intact.

All the information (Part Number, Design) contained in this Catalog are based on the parts applied to the vehicles produced as of the publication date of this catalog. Please note that the specifications and structures of the parts may be subject to change without any notice for improvement of the quality and capabilities of the vehicles.

It is strictly prohibited to duplicate, reproduce or distribute the whole or a part of this publication by making use of such methods as printing, copying and recording without obtaining written approval from the manufacturer in advance.




목차 / CONTENTS

100. 일반 정보 / GENERAL INFORMATION.....	2
230. 리덕션 기어 / REDUCTION GEAR	8
310. 프런트 액슬 & 서스펜션 / FRT AXLE & SUSPENSION.....	10
350. 리어 액슬 & 서스펜션 / RR AXLE & SUSPENSION.....	14
410 / 420. 스티어링 시스템 / STEERING SYSTEM.....	18
470. 모터 브레이크 / MOTOR BRAKE.....	20
480. 액셀 페달 / ACCEL PEDAL.....	22
551 / 552. 브레이크 페달 / BRAKE PEDAL.....	24
560. 브레이크 파이핑 / BRAKE PIPNG.....	26
571 / 572. 파킹 브레이크 / PARKING BRAKE	28
611. 메인 프레임 / MAIN FRAME.....	30
613. 리어 프레임 / REAR FRAME	32
615. 배터리 / BATTERY.....	34
616. 플로어 / FLOOR	36
617. 시트 백 프레임 / SEAT BACK FRAME	38
618. 시트 / SEAT	40
621 / 622. 프런트 범퍼 / FRT BUMPER.....	42
623. 노이즈 프로텍터 / NOISE PROTECTOR	44
631. 플로워 매트 / FLOOR MAT.....	46
711. 윈드 쉴드 FIX / WINDSHIELD FIX.....	48
712. 윈드 쉴드 TILT / WINDSHIELD TILT.....	50
713. 대쉬 사이드 / DASH SIDE.....	52
714. 필라 / PILLAR.....	54
715. 크러쉬 패드 / CRASH PAD.....	56
716. 프런트 후드 / FRONT HOOD	58
717. 리어 캡 / REAR CAB.....	60
718. 리어 휠 하우스 / REAR WHEEL HOUSE	64
719. 루프 / ROOF.....	66
720. 골프 백 캐리어 / GOLF BAG CARRIER.....	68
733. 리어 팩키지 / REAR PACKAGE	72
735. 리어 데크 & 트렁크 / REAR DECK & TRUNK	74

755. 리어 로워 바스켓 / REAR LOWER BASKET.....	76
761. 어시스트레이 / ASHTRAY.....	78
763. 사이드 미러 / SIDE MIRROR	80
764. 프론트 포켓 / FRONT POCKET.....	82
770. 핀틀 훅 / PINTLE HOOK.....	84
771. 스탠드 스톱 와치 / STAND STOP WATCH.....	86
791. 빈 플레이트 / VIN PLATE.....	88
810. 오토 가이드 / AUTO GUIDE.....	90
860. 악세사리 / ACCESSORIES	92
911. 메인 와이어링 / MAIN WIRING.....	94
912. 와이어링 어셈블리 컨트롤러 / WIRING ASS'Y CONTROLLER.....	96
913 / 914. 와이어링 어셈블리 IPW, 옵션 와이어링 / WIRING ASS'Y IPW, OPTION WIRING....	98
915. 와이어링 어셈블리 컨택터 & 충전기 / WIRING ASS'Y CONTACTOR & CHARGER	100
918. 배터리 케이블 / BATTERY CABLE.....	102
919. 모터 케이블 / MOTOR CABLE.....	104
921. 프론트 램프 / FRONT LAMP	106
923. INST 파워 & 컨트롤 시스템 / INST POWER & CONTROL SYSTEM.....	108
925. 리어 램프 / REAR LAMP	110
926. 라이선스 램프 어셈블리 / LICENSE LAMP ASS'Y.....	112
929. 리플렉터 / REFLECTOR.....	114
932. 스위치 어셈블리 / SWITCH ASS'Y	116
941. 클러스터 어셈블리 / CLUSTER ASS'Y.....	118
942. 인디케이터 / INDICATER.....	120
944. 센서 / SENSOR	122
945. 마그네틱 센서 / MAGNET SENSOR.....	124
947. 백업 버저 / BACKUP BUZZER.....	126
951. 릴레이 / RELAY.....	128
972. 충전기 / CHARGER	130
980. 워셔 탱크 / WASHER TANK.....	132
991. DECAL(국문).....	134
992. DECAL(영문).....	136

1. 카달로그 보는 법

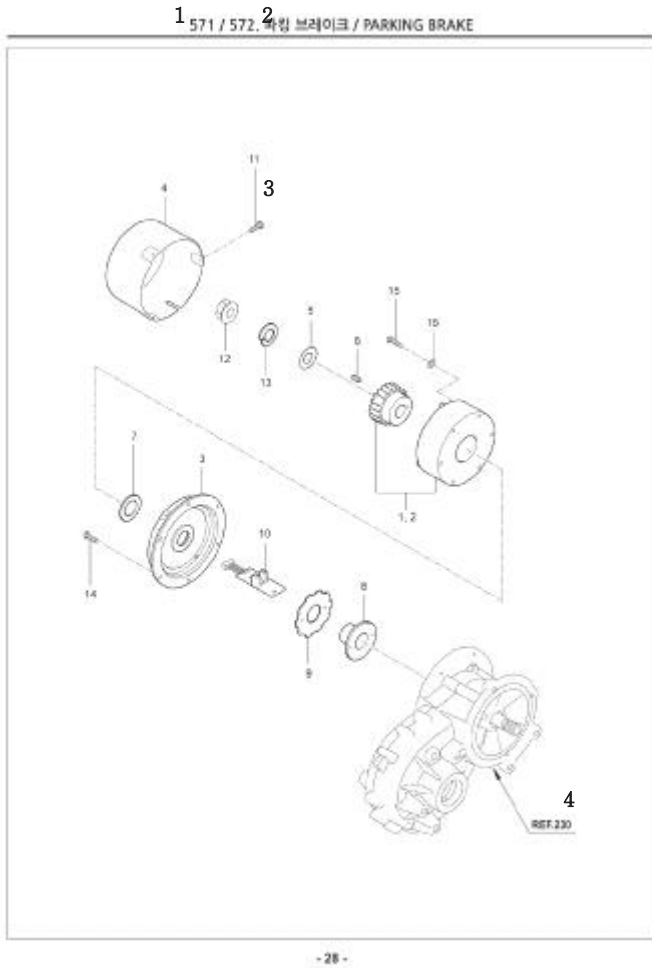

571 / 572. 파킹 브레이크 / PARKING BRAKE

번호 (일련번호) NO. (Serial No.)	부품명칭 PART NAME	부품 번호 PART NUMBER	7 QTY						9	비고 REMARK
			CU2	CU6	CA6	CN2	CN6			
1 (201012-)	전기식 주차브레이크 작동장치 ELECTRIC BRAKE ASSY	57110-C5100a	1	1	1					
2 (201012-)	전기식 주차브레이크 작동장치 - 72V ELECTRIC BRAKE ASSY - 72V	38110-C2000				1	1			
3 (201012-)	주차용 - 전기식 주차브레이크 PARKING - ELECTRIC BRAKE	57121-C5100b	1	1	1	1	1			
4 (201012-)	수동 - 전기식 주차브레이크 CDUTY - ELECTRIC BRAKE	57131-C5100	1	1	1	1	1			
5 (201012-)	주차용 - 수동 PARKING - MANUAL	57142-C5100	1	1	1	1	1			
6 (201012-)	기 - 주차용 기 - PARKING	57143-C5100	1	1	1	1	1			
7 (201012-)	주차용 - 수동 PARKING - MANUAL	57144-C5100a	1	1	1	1	1			
8 (201012-)	수동용 - 수동 MANUAL - MANUAL	57211-C5200a				1	1	1		
9 (201012-)	수동용 - 수동 MANUAL - MANUAL	57212-C5200				1	1	1		
10 (201012-)	수동용 - 수동 MANUAL - MANUAL	57230-C5200				1	1	1		
11 (201012-)	수동용 - 수동 MANUAL - MANUAL	57231-C5200	3	3	1	3	3			
12 (201012-)	수동용 - 수동 MANUAL - MANUAL	57232-C5200	1	1	1	1	1			
13 (201012-)	수동용 - 수동 MANUAL - MANUAL	57233-C5200	1	1	1	1	1			
14 (201012-)	수동용 - 수동 MANUAL - MANUAL	57234-C5200	6	6	6	6	6			
15 (201012-)	수동용 - 수동 MANUAL - MANUAL	57235-C5200	3	3	1	3	3			
16 (201012-)	수동용 - 수동 MANUAL - MANUAL	57236-C5200	3	3	1	3	3			

- 29 -

1) 그룹번호

- 그룹은 일반적으로 3자리 숫자로 구성되어 있습니다.

2) 그룹명칭

- 해당그룹의 대표적인 부품 명칭이나 기능을 설명한 내용을 표시합니다.

3) 부품구성표시

- 부품의 구성관계를 표시 하기 위하여 그림상에 박스나 선 등으로 부품의 친자 관계를 표시 합니다.

4) 참조표시

부품의 조립상 해당 그룹과 밀접한 관계가 있더라도 그 기능이 전체적인 기능과 연관이 적은 경우 동 그룹에는 부품의 형상만 표시 하였고, 그 특성이나 부품번호는 유사 기능의 부품을 모아둔 그룹으로 분류 하였습니다. 따라서 해당 부품의 번호나 특성을 알아보기 위해서는 참조 표시의 그룹으로 이동하여야 합니다.

5) PNC 및 적용시점

그림란에 있는 분해도에 주어진 부품번호 코드 및 해당부품이 실차에 적용되는 기간을 나타 냅니다.


6) 부품명칭

각 부품에 대한 명칭으로 주명칭이 앞에 나오고, 설명어는 뒤에 오는 것을 원칙으로 합니다.
약어로 표현되기도 합니다.

7) 차종 구분

CU2 : GOLF CART 2인승 / UTILITY 2인승
CU6 : GOLF CART 6인승 수동 / UTILITY 6인승
CA6 : GOLF CART 6인승 자동유도
CN2 : NEV 2인승
CN6 : NEV 6인승

1. How To Read This Catalog

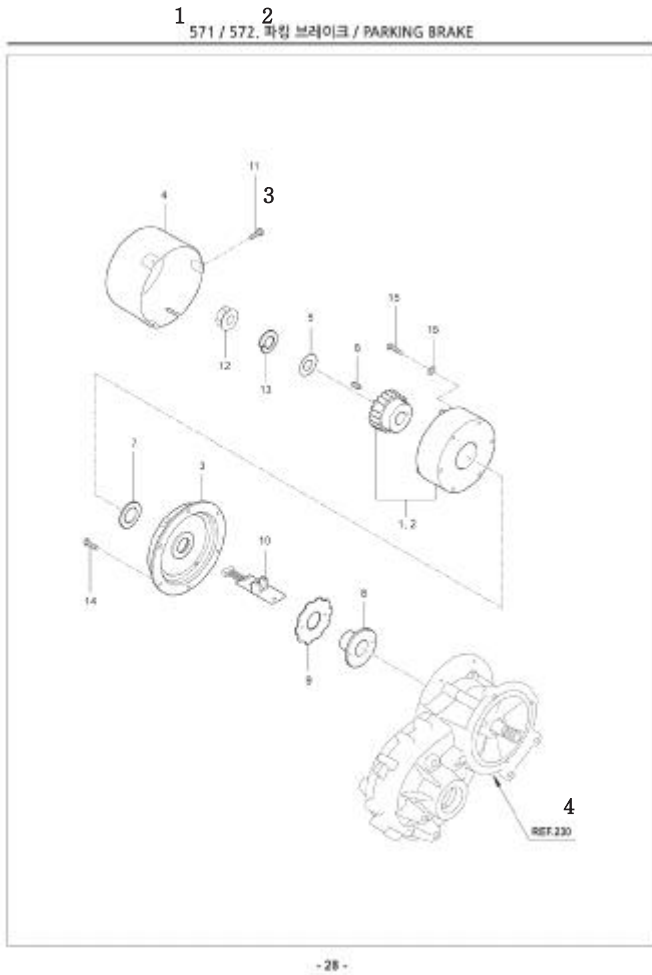

571 / 572. 파킹 브레이크 / PARKING BRAKE

5	6	7	QTY					9	10
			CU2	CU6	CA6	CN2	CN6		
1	전기식 주차브레이크 작동장치 ELECTRIC BRAKE ASSY	57110-C5100A	1	1	1				
2	전기식 주차브레이크 작동장치 - 72V ELECTRIC BRAKE ASSY - 72V	38110-C2000				1	1		
3	과압용 - 전기식 주차브레이크 OVERPRESS - ELECTRIC BRAKE	57121-C5100B	1	1	1	1	1		
4	스프링 - 전기식 주차브레이크 SPRING - ELECTRIC BRAKE	57131-C5100	1	1	1	1	1		
5	플래시 플레이트 FLASH PLATE	57142-C5100	1	1	1	1	1		
6	핀 - 패시브 PIN - PASSIVE	57143-C5100	1	1	1	1	1		
7	과압용 - 전기식 주차브레이크 OVERPRESS - ELECTRIC BRAKE	57144-C5100A	1	1	1	1	1		
8	지지대 - 센서 플레이트 SUPPORT - SENSOR PLATE	57211-C5200B				1	1	1	
9	센서 플레이트 - 엔코더 SENSOR PLATE - ENCODER	57212-C5200				1	1	1	
10	엔코더 플레이트 - 엔코더 ENCODER PLATE - ENCODER	57230-C5200				1	1	1	
11	리프트 스크류 LIFT SCREW	42201-C2000Y	3	3	1	3	3		
12	나사 NUT - HEX HD	42106-C2000Y	1	1	1	1	1		
13	와셔 WASHER - SPRING BALL	43400-C2000Y	1	1	1	1	1		
14	볼트 BOLT - HEX HD - 5/16 - 18 - 1.5 - 1.5 - 1.5	41245-08200Y	6	6	6	6	6		
15	볼트 BOLT - SOCKET HEAD	41203-08400Y	3	3	1	3	3		
16	와셔 - 스프링용 WASHER - SPRING BALL	43400-08200Y	3	3	1	3	3		

- 29 -

1) Group Number

- A group is typically indicated with a three-digit number.

2) Group Name

- The representative part name or function of the group is indicated.

3) Part Configuration

- The super-ordinate and subordinate relationships of the parts are indicated with boxes or lines on the figure to show the configuration of the parts.

4) Reference Indication

When the function of the part is not significantly relevant to the functions of the group even if a part is affiliated with the group for assembly, the apparent shape of the part is only indicated on the group. The features and/or the number of the part are classified into a group of parts with similar functions. Therefore, you have to move the group indicated by a reference to identify the number or the features of the part.

5) PNC and Applicable Timing

The part number code and name in the disassembly drawing indicates the period in which the part is applied in the actual vehicle.

6) Part Name

In principle, the main name of the part is indicated first, and its description follows.

The name may be indicated by an abbreviation.

7) VEHICLE TYPE

CU2 : GOLF CART 2PASSENGERS / UTILITY 2PASSENGERS

CU6 : GOLF CART 6PASSENGERS STD / UTILITY 6PASSENGERS

CA6 : GOLF CART 6PASSENGERS AGV

CN2 : NEV 2PASSENGERS

CN6 : NEV 6PASSENGERS

100. 일반 정보 / GENERAL INFORMATION

8) 부품번호

해당 부품의 부품번호를 표시합니다.

부품번호 타입

1	2	3	4	5	-	C	5	1	0	0	a
①			②			③	④	⑤	⑥		⑦

번호	내 용	번호	내 용
①	UPG GROUP NO.	⑤	수동, 자동 구분 CORD (1 : 수동 / 2 : 자동)
②	- DRAWING SERIAL NO. (PART NO.)	⑥	과생차종 구분 CORD
③	차종 구분 CODE (C : c-ZONE / E : e-ZONE)	⑦	REVISIONS CODE
④	승차 정원 구분 CORD (2 : 2인승 / 5 : 5인승)		

9) 수량

해당 그룹에서 필요한 수량을 표시하며 차량 1대당 필요한 수량과는 다를수 있습니다.

10) REMARK & 적용차종

참조 사항을 표시합니다.

SHAPE (형상) / SPEC (규격) / MATERIAL (재료) / SIZE (치수)

MANUFACTURE (제조업체) / ETC (기타)

RHD (우측핸들) / LHD (좌측핸들)

2. 차대번호

K	L	P	A	B	T	2	3	D	A	C	D	A	0	0	0	1
①			②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫			

번호	내 용
①	건설교통부장관이 자동차의 종별 등에 따라 제작자에게 배정한 부호
②	경형 승용자동차
③	승용자동차 해치백형
④	중저속 승용자동차 (60km 이하)
⑤	2개조
⑥	5KW MOTOR
⑦	내수용
⑧	2010년
⑨	충청남도
⑩	DOOR TYPE
⑪ / ⑫	순차적 번호 적용

100. 일반 정보 / GENERAL INFORMATION

8) Part Number

Part of the part number is this played.

Part number types

1	2	3	4	5	-	C	5	1	0	0	a
①			②			③	④	⑤	⑥		⑦

No.	Description
①	UPG GROUP NO.
②	DRAWING SERIAL NO. (PART NO.)
③	VEHICLE MODEL CODE (C: c-ZONE / E: e-ZONE)
④	PASSENGER NUMBER CODE (2: Two-Passenger Vehicle / 5: Five-Passenger Vehicle)

No.	Description
⑤	MANUAL / AUTOMATIC CODE (1: Manual / 2: Automatic)
⑥	DERIVED VEHICLE MODEL CODE
⑦	REVISIONS CODE

9) Quantity

The quantity of parts required for a group is indicated. The quantity may differ from the quantity required for a single vehicle.

10) Remarks & Applicable Vehicle Models

The reference is indicated.

SHAPE / SPEC / MATERIAL / SIZE

MANUFACTURE / ETC

RHD (Right Steering Wheel) / LHD (Left Steering Wheel)

2. Body Number

K	L	P	A	B	T	2	3	D	A	C	D	A	0	0	0	1
①			②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	⑪	⑫			

No.	Description
①	Code assigned to the manufacturers by the Minister of Construction and Transportation dependent upon the vehicle classification
②	Light-Weight Passenger Car
③	Hatchback Passenger Car
④	Low- And Medium-Speed Passenger Car (Slower Than 60km/Hr)
⑤	Two Locations
⑥	5kw Motor
⑦	For Domestic Markets
⑧	2010
⑨	Chungcheongnam-Do
⑩	Door Type
⑪ / ⑫	Applying sequential numbers

3. 약어표 / Abbreviation Index

ACCEL	: ACCELERATOR	HDL	: HANDLE
ACCUM	: ACCUMULATOR	HMSL	: HIGH MOUNTED STOP LAMP
ADJ	: ADJUST, -ING	HMS	: HIGH MOUNTED STOP
AL	: ALUMINUM	HORIZ	: HORIZONTAL
AMPR	: AMPLIFIER	HSG	: HOUSE, -ING
ANT	: ANTENNA	HTD	: HEATED
ASS'Y	: ASSEMBLY	HTR	: HEATER
A/C	: AIR CONDITIONING	H/LAMP	: HEADLAMP
A/REST	: ARMREST	H/LING	: HEADLINING
A/VENT	: AIR VENTILATOR	H/REST	: HEADREST
&	: AND	H/T	: HIGH TENSION
BAL	: BALANCE	IDENT	: IDENTIFICATION
BPR	: BUMPER	ILLUM	: ILLUMINATION
BRG	: BEARING	INR	: INNER
BRK	: BRAKE	INSTL	: INSTALLER, -ATION
BRKT	: BRACKET	INTER	: INTERMEDIATED
CHK	: CHECK	INTMT	: INTERMITTENT
CHNL	: CHANNEL	I/S	: INSIDE
CLR	: CLEAR	KPH	: KILOMETER PER HOUR
COL	: COLUMN	L	: LENGTH
COMB	: COMBINATION	LCD	: LIQUID CRYSTALDISPLAY
COMPL	: COMPLETE	LH	: LEFT HAND
COMPT	: COMPARTMENT	LHD	: LEFT HAND DRIVE
CONN	: CONNECTOR, -ING	LNKG	: LINKAGE
CONT	: CONTROL	LOCKG	: LOCKING
CTRL	: CENTRAL	LVLG	: LEVELING
CUSH	: CUSHION	LVR	: LEVEL
CVR	: COVER, -ING	LWR	: LOWER
C/LTR	: CIGARETTE LIGHTER	L/COMPT	: LUGGAGE COMPARTMENT
C/MBR	: CROSSMEMBER	L/G	: LIGHT GREEN
C/PAD	: CRASH PAD	L/LEVER	: LESS LEVER
C/PLR	: CENTER PILLAR	L/PLATE	: LICENSE PLATE
DECAL	: DECALCOMANIA	MAB	: MAINAIR BLEED
DECO	: DECORATION	MBR	: MEMBER
DEFR	: DEFROSTER	MED	: MEDIUM
DIA	: DIAMETER	MIR	: MIRROR
DIFF	: DIFFERENTIAL	MLDG	: MOUDLING
DLX	: DELUXE	MNL	: MANUAL
DR	: DOOR	MPH	: MILE PER HOUR
DRV	: DRIVER	MTG	: MOUNTING
D/SHF	: DRIVE SHAFT	MTR	: MOTOR
ELEC	: ELECTRONIC	MY	: MODELYEAR
EQLZR	: EQUALIZER	M/CYL	: MASTER CYLINDER
EQMNT	: EQUIPMENT	NLR	: NON LOCKING RETRACTOR
ETR	: ELECTRONIC TUNER	NO.	: NUMBER
EVAP	: EVAPORATION, -OR	NOZ	: NOZZLE
EXC	: EXCEPT	OPNG	: OPENING
EXTN	: EXTENSION	OS	: OVER SIZE
FIC	: FLOOR	OTR	: OUTER
FLR	: FENDER	OVM	: OWNERS VEHICLE MAINTENANCE
FNDR	: FENDER	O/S	: OUTSIDE
FR	: FRONT	O/T	: OVERTOP
FRM	: FRAME	PASS	: PASSENGER
FWD	: FORWARD	PED	: PEDAL
G/BOX	: GLOVE BOX	PK	: PARKING
GLA	: GLASS	PKG	: PACKAGE

100. 일반 정보 / GENERAL INFORMATION

PLR : PILLAR
 PNL : PANEL
 POSN : POSITION
 PREM : PREMIUM
 PRESS : PRESSURE
 PT : POINT
 PVC : POLYVINYLCHLORIDE
 PWR : POWER
 P/S : POWER STEERING
 P/SHF : PIVOT SHAFT
 P/WDO : POWER WINDOW
 QDRT : QUADRANT
 QTR : QUARTER

REG : REGULATOR
 REINF : REINFORCEMENT
 REL : RELEASE
 REM : REMOTE
 RET : RETAINER, -ING
 RETR : RETRACTOR
 REV : REVERSE
 RH : RIGHT HAND
 RHD : RIGHT HAND DRIVE
 RHEO : RHEOSTAT
 RPTR : REPEATER
 RR : REAR
 RTN : RETURN
 R/REFL : REFLEX REFLECTOR

SDA : SOUND DIMENSIONALARRAY
 SECDY : SECONDARY
 SEP : SEPARATE, -OR
 SHF : SHAFT
 SHLF : SHELF
 SIA : SERVICE INASS'Y
 SIAR : SERVICE INAREA
 SIK : SERVICE IN KIT
 SIR : SERVICE IN ROLL
 SIS : SERVICE IN SET
 SPEEDO : SPEEDOMETER
 SPKR : SPEAKER
 SPR : SUPER
 SPRG : SPRING
 SRVC : SERVICE
 STD : STANDARD
 STNR : STRAINER
 STRG : STEERING
 SUPT : SUPPORT
 SUSP : SUSPENSION
 SW : SWITCH
 SYNC : SYNCHRONIZER
 S/BACK : SEAT BACK
 S/BELT : SEAT BELT
 S/MKR : SIDE MARKER
 S/RPTR : SIDE REPEATER

T : THICKNESS
 TEMP : TEMPERATURE
 THERM : THERMOSTAT
 TNL : TUNNEL
 TNTD : TINTED
 TR : TRANSISTOR


T/F : TRANSFER
 T/GATE : TAILGATE
 T/LID : TRUNK LID
 T/ROOM : TRUNK ROOM
 T/SIG : TURN SIGNAL

UPR : UPPER
 US : UNDER SIZE

VENT : VENTILATOR
 VERT : VERTICAL


WDO : WINDOW
 WHL : WHEEL
 WIRG : WIRING
 WPR : WIPER
 W/ : WITH
 W/LINE : WAISTLINE
 W/O : WITHOUT
 W/S : WINDSHIELD
 W/SHLD : WINDSHIELD
 W/STRIP : WEATHERSTRIP
 W/WPR : WINDSHIELD WIPER

Z/TEMP : ZONE TEMPERED

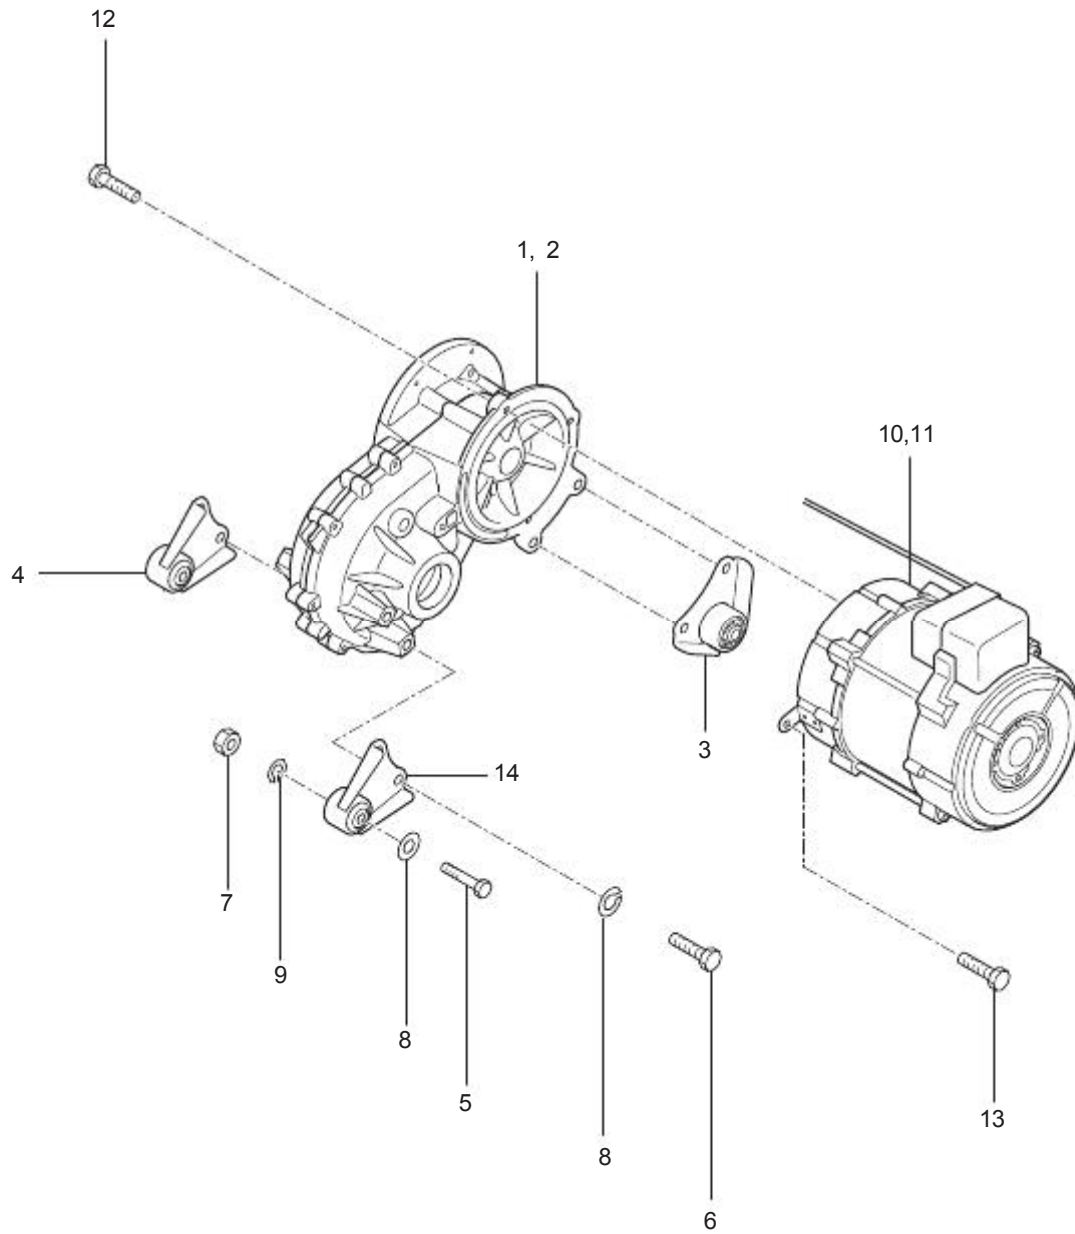


230. 리덕션 기어 / REDUCTION GEAR

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리덕션 기어 박스 어셈블리 REDUCTION GEAR BOX ASS'Y	23100	C5110A	1	1	1		
2 (201012 -)	리덕션 기어 박스 어셈블리 REDUCTION GEAR BOX ASS'Y	43100	E2001				1	1
3 (201012 -)	스테이 어셈블리 - R.G.B 프런트 STAY ASS'Y- R.G.B. FRT	23200	N2000A	1	1	1	1	1
4 (201012 -)	스테이 어셈블리 - R.G.B. 리어 좌측 STAY ASS'Y- R.G.B. RR, L/H	23300	N2000A	1	1	1	1	1
5 (201012 -)	볼트 BOLT-HEX HD, 10T	H1208	1270Y		3	3	3	3
6 (201012 -)	볼트 BOLT-HEX HD, 10T	H1208	1230Y		6	6	6	6
7 (201012 -)	너트 NUT-HEX, 8T	H3106	1200Y		3	3	3	3
8 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3510	1200Y		3	3	3	3
9 (201012 -)	와셔 - 스프링 WASHER-SPRING	H3603	1200Y		6	6	6	6
10 (201012 -)	모터 - 트랙션 MOTOR-TRACTION	97510	C5142		1	1		
11 (201012 -)	모터 - 트랙션 MOTOR-TRACTION	97500	E2001B					
12 (201012 -)	볼트 BOLT-HEX HD,SEM'S(S/W+P/W), PC	H1250	0825Y		1	1	1	1
13 (201012 -)	볼트 BOLT-HEX HD,SEM'S(S/W+P/W), PC	H1250	0835Y		3	3	3	3
14 (201012 -)	스테이 어셈블리 - R.G.B. 리어 우측 STAY ASS'Y- R.G.B. RR, R/H	23220	N2000A		1	1	1	

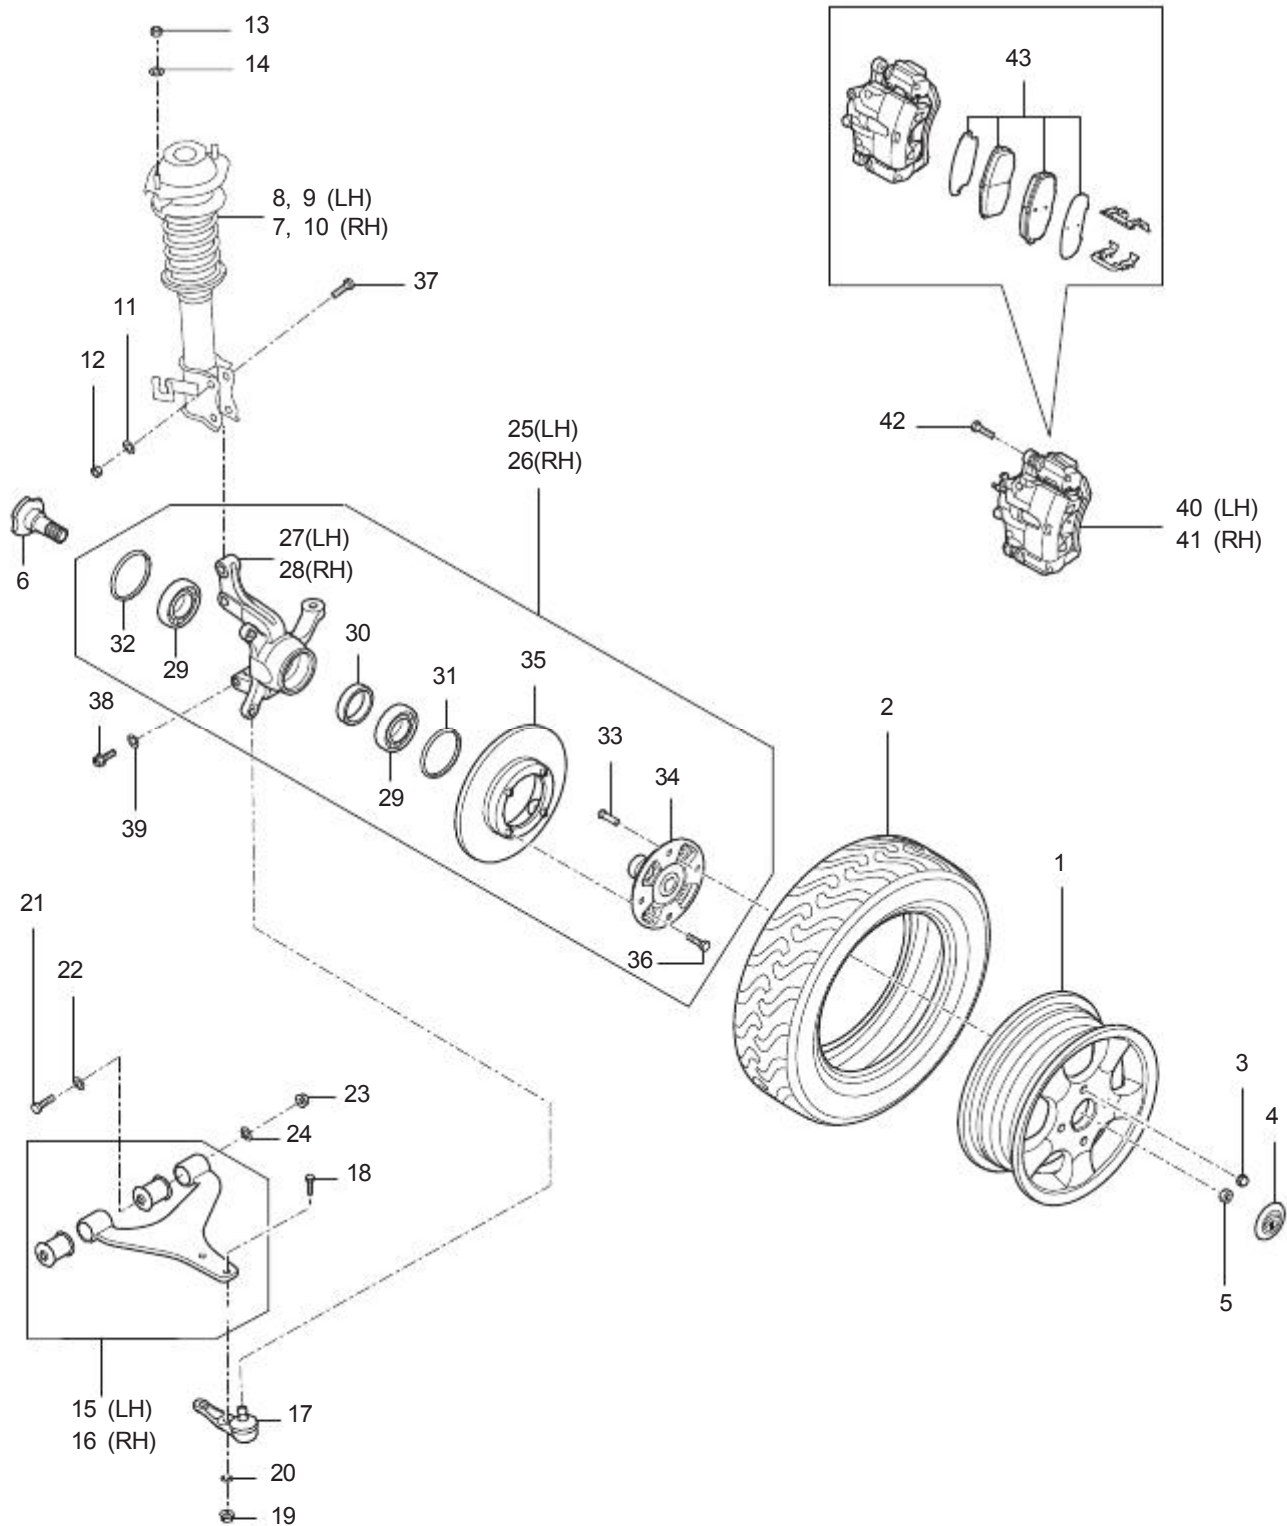


310. 프런트 액슬 & 서스펜션 / FRT AXLE & SUSPENSION

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	휠-알루미늄 13", 골프 WHEEL-ALUMINUM 13", GOLF	31110	C5101	2	2	2	2	2
2 (201012 -)	타이어 TIRE-155/65R13	31120	C5103	2	2	2	2	
3 (201012 -)	너트 NUT-WHEEL, AL	31141	C5101	2	2	2	2	
4 (201012 -)	휠 캡-알루미늄 WHEEL CAP-ALUMINUM	31160	C5101A	2	2	2	2	2
5 (201012 -)	너트 NUT-PHI (M18x1.5)	31331	C5100	2	2	2	2	2
6 (201012 -)	스핀들 어셈블리 - 프런트 SPINDLE ASS'Y-FRT	31340	C5100	2	2	2	2	
7 (201012 -)	프런트 스트럿 & 스프링 어셈블리 - 우측 FRT STRUT & SPRING ASS'Y-R/H	33100	C5100		1	1		1
8 (201012 -)	프런트 스트럿 & 스프링 어셈블리 - 좌측 FRT STRUT & SPRING ASS'Y-L/H	33100	C2000	1			1	
9 (201012 -)	프런트 스트럿 & 스프링 어셈블리 - 좌측 FRT STRUT & SPRING ASS'Y-L/H	33200	C5100		1	1		1
10 (201012 -)	프런트 스트럿 & 스프링 어셈블리 - 우측 FRT STRUT & SPRING ASS'Y-R/H	33200	C2000	1			1	
11 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3116	1200Y	2	2	2	2	2
12 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603	1200Y	2	2	2	2	2
13 (201012 -)	너트 NUT-HEX HD(M8x1.25)	H3116	0800Y	4	4	4	4	4
14 (201012 -)	와셔 - 스프링 WASHER-SPRING (M8)	H3603	0800Y	4	4	4	4	
15 (201012 -)	로워 암 어셈블리 - 프런트, 좌측 LWR ARM ASS'Y-FRT, L/H	33300	C5101a	1	1	1	1	1
16 (201012 -)	로워 암 어셈블리 - 프런트, 우측 LWR ARM ASS'Y-FRT, R/H	33400	C5101a	1	1	1	1	1
17 (201012 -)	볼 조인트 어셈블리 - 로워 암 B/JOINT ASS'Y-LWR ARM	33350	C5100	2	2	2	2	2
18 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x40L)	H1208	1240Y	4	4	4	4	4
19 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3106	1200Y	4	4	4	4	4
20 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603	1200Y	4	4	4	4	4
21 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x90L)	H1208	1290Y	4	4	4	4	4
22 (201012 -)	와셔 - 플레인 WASHER-PLAIN (M12)	H3510	1200Y	4	4	4	4	4
23 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3106	1200Y	4	4	4	4	4
24 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603	1200Y	4	4	4	4	4
25 (201012 -)	너클 어셈블리 - 프런트, 좌측 KNUCKLE ASS'Y-FRT, L/H	33510	C5101	1	1	1	1	1
26 (201012 -)	너클 어셈블리 - 프런트, 우측 KNUCKLE ASS'Y-FRT, R/H	33520	C5101	1	1	1	1	1
27 (201012 -)	너클 - 프런트_왼쪽 KNUCKLE-FRT_LH	33511	C5101B	1	1	1	1	1
28 (201012 -)	너클 - 프런트_우측 KNUCKLE-FRT_RH	33512	C5101B	1	1	1	1	1
29 (201012 -)	허브 베어링 HUB BEARING	31311	C5100B	4	4	4	4	4

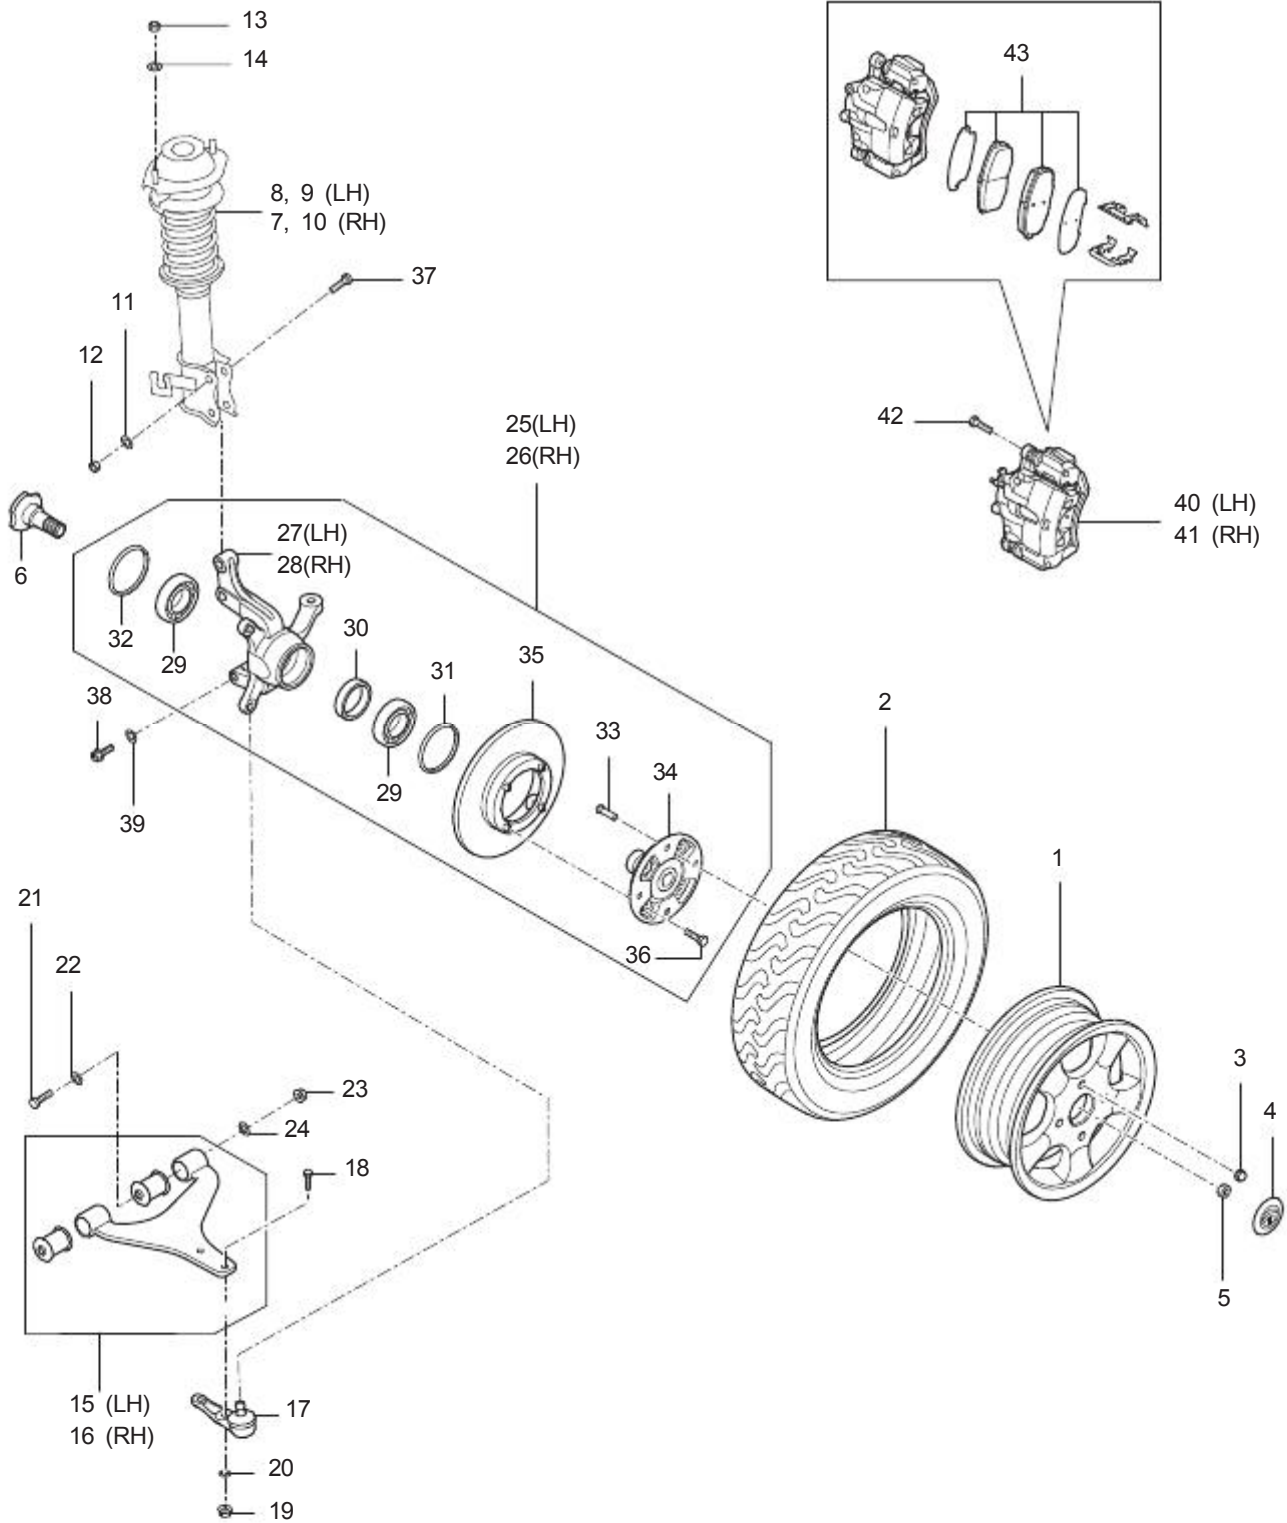


310. 프런트 액슬 & 서스펜션 / FRT AXLE & SUSPENSION

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
30 (201012 -)	스페이서 - 허브 베어링 SPACER -HUB BEARING	31314	C5100E	2	2	2	2	2
31 (201012 -)	더스트 씬 DUST SEAL	31316	C5100		2	2	2	2
32 (201012 -)	샤프트 - 휠 베어링, 오일 SEAL-WHL BEARING, OIL	31317	C5100	2	2	2	2	2
33 (201012 -)	허브 어셈블리 - 휠 HUB ASS'Y -WHEEL	31320	C5100		2	2	2	2
34 (201012 -)	허브 볼트 HUB BOLT-M12x1.25x38	31322	C5100	8	8	8	8	8
35 (201012 -)	디스크 - 브레이크 DISK-BRAKE	53131	C5100a		2	2	2	2
36 (201012 -)	볼트 - 브레이크 디스크 BOLT-BRAKE DISC	53136	C5100		8	8	8	8
37 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x55L)	H1208-1	255Y	4	4	4	4	4
38 (201012 -)	볼트 BOLT-HEX HD (M10x1.25x40L)	H1208-1	040Y	2	2	2	2	2
39 (201012 -)	와셔 - 스프링 WASHER-SPRING (M10)	H3603-1	000Y	2	2	2	2	2
40 (201012 -)	캘리퍼 어셈블리 - 디스크 브레이크, 좌측 CALIPER ASS'Y-D/BRAKE, L/H	53110	C5100	1	1	1	1	1
41 (201012 -)	캘리퍼 어셈블리 - 디스크 브레이크 우측 CALIPER ASS'Y-D/BRAKE, R/H	53120	C5100	1	1	1	1	1
42 (201012 -)	볼트 - 브레이크 캘리퍼 BOLT-BRAKE CALIPER	53135	C5100		4	4	4	4
43 (201012 -)	디스크 - 브레이크 패드 DISK-BRAKE PAD	310A2	C5100		2	2	2	2
	2							

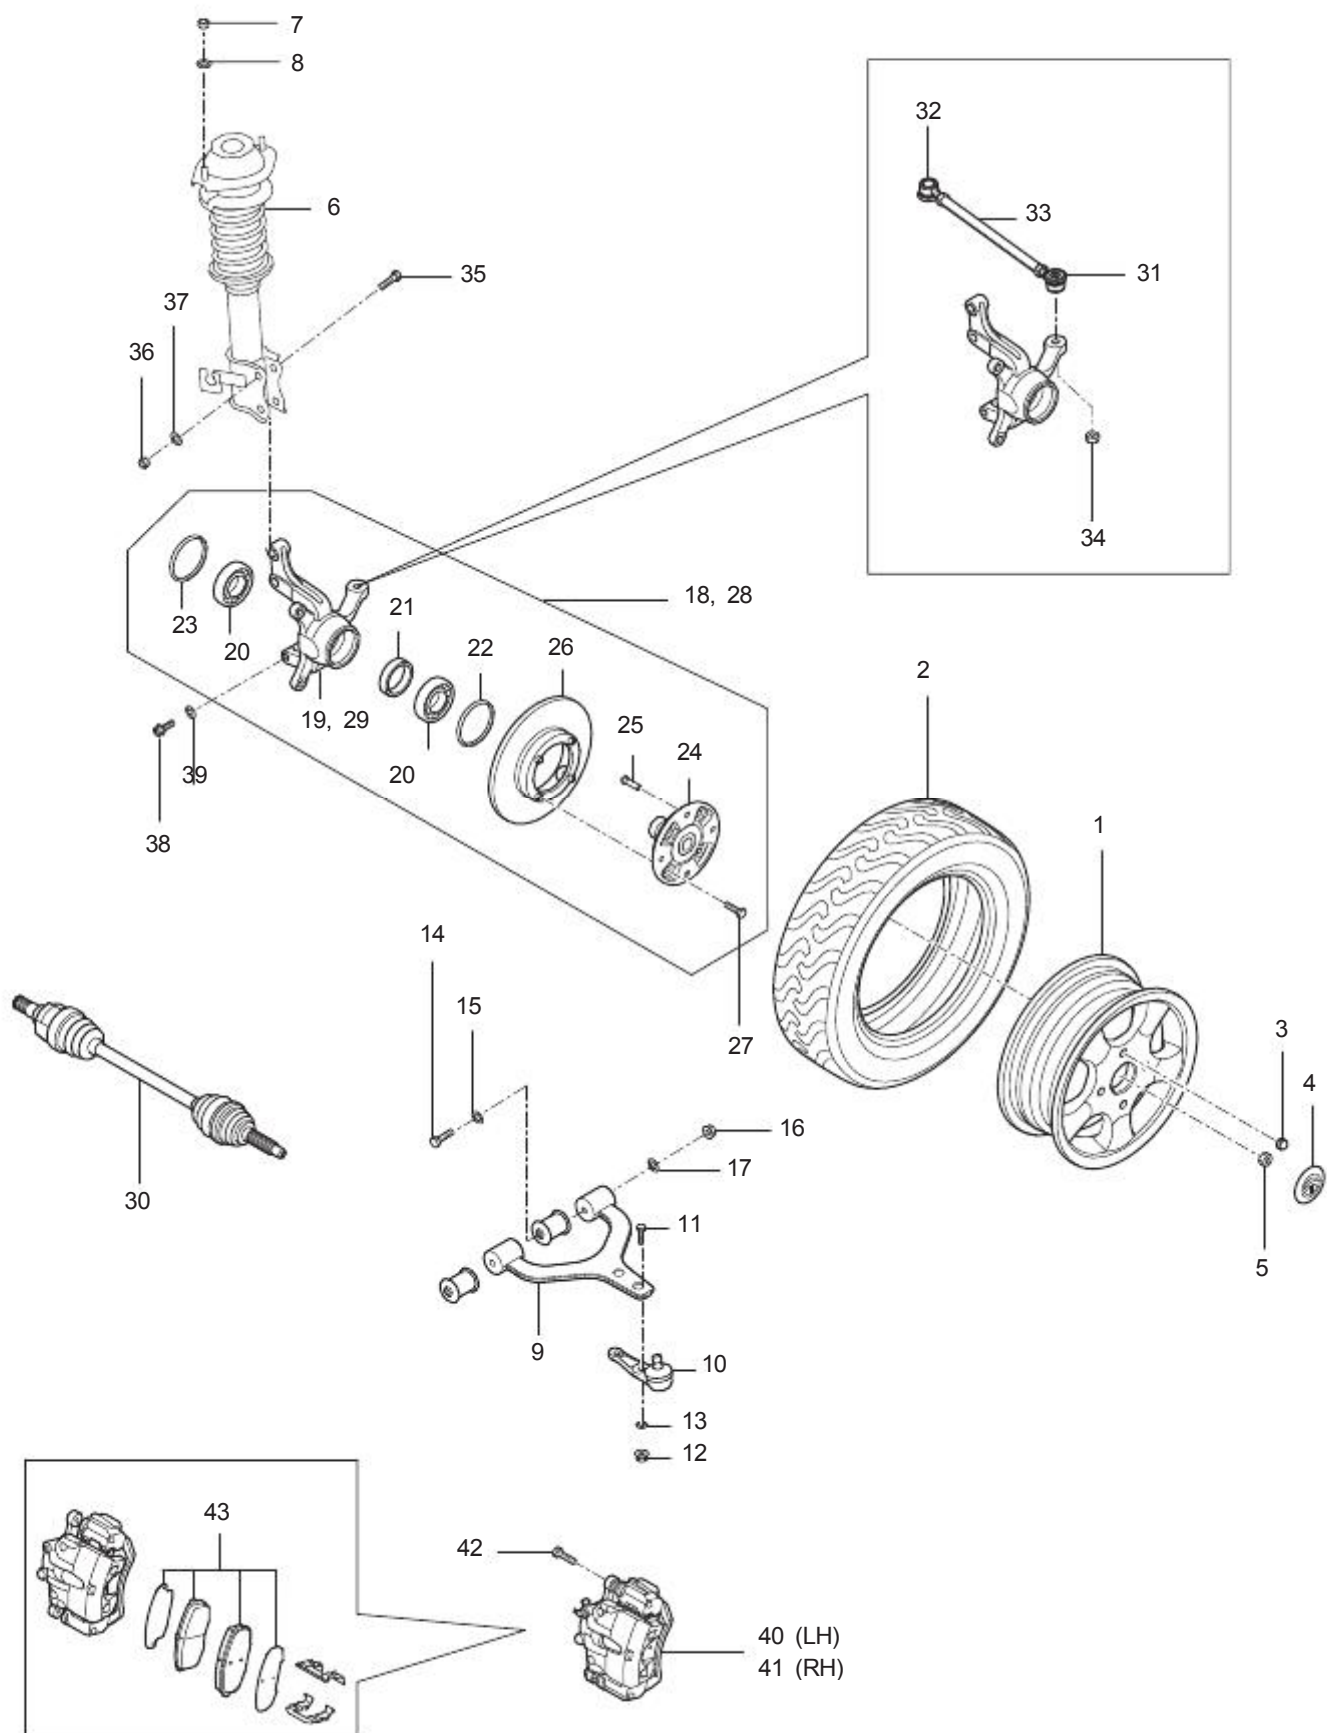


350. 리어 액슬 & 서스펜션 / RR AXLE & SUSPENSION

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	휠 -알루미늄 13", 골프 WHEEL-ALUMINUM 13", GOLF	31110-C5101		2	2	2	2	2
2 (201012 -)	타이어 - 155/65R13 TIRE-155/65R13	31120-C5103			2	2	2	2
3 (201012 -)	너트 - 휠, AL NUT-WHEEL, AL	31141-C5101			2	2	2	2
4 (201012 -)	휠 캡 - 알루미늄 WHEEL CAP-ALUMINUM	31160-C5101A		2	2	2	2	2
5 (201012 -)	너트 - 파이 NUT-PHI (M18x1.5)	31331-C5100			2	2	2	2
6 (201012 -)	리어 스트럿 & 스프링 어셈블리 RR STRUT & SPRING ASS'Y	35100-C5100 2			2	2		
		35100-C2000 2	2					
7 (201012 -)	너트 NUT-HEX HD(M8x1.25)	H3116-0800Y		4	4	4	4	4
8 (201012 -)	와셔 - 스프링 WASHER-SPRING (M8)	H3603-0800Y			4	4	4	4
9 (201012 -)	로워 암 어셈블리 - 리어 LOWER ARM ASS'Y-RR	34100-C5130			2	2	2	2
10 (201012 -)	볼 조인트 어셈블리 - 로워 암 B/JOINT ASS'Y-LWR ARM	33350-C5100		2	2	2	2	2
11 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x40L)	H1208-1240Y		4	4	4	4	4
12 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3106-1200Y		4	4	4	4	4
13 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603-1200Y		4	4	4	4	4
14 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x90L)	H1208-1290Y		4	4	4	4	4
15 (201012 -)	와셔 - 플레인 WASHER-PLAIN (M12)	H3510-1200Y		4	4	4	4	4
16 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3106-1200Y		4	4	4	4	4
17 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603-1200Y		4	4	4	4	4
18 (201012 -)	너클 어셈블리 - 리어, 좌측 KNUCKLE ASS'Y-RR, LH	35180-C5100		1	1	1	1	1
19 (201012 -)	너클 - 리어, 좌측 KNUCKLE-RR, LH	35173-C5100C			1	1	1	1
20 (201012 -)	허브 베어링 HUB BEARING	31311-C5100B			4	4	4	4
21 (201012 -)	스페이서 - 허브 베어링 SPACER -HUB BEARING	31314-C5100E		2	2	2	2	2
22 (201012 -)	더스트 실 DUST SEAL	31316-C5100			2	2	2	2
23 (201012 -)	실 - 휠 베어링, 오일 SEAL-WHL BEARING, OIL	31317-C5100		2	2	2	2	2
24 (201012 -)	허브 - 휠 HUB-WHEEL	31321-C5100			2	2	2	2
25 (201012 -)	허브 볼트 HUB BOLT-M12x1.25x38	31322-C5100		8	8	8	8	8
26 (201012 -)	디스크 - 브레이크 DISK-BRAKE	53131-C5100a			2	2	2	2
27 (201012 -)	볼트 BOLT-BRAKE DISC	53136-C5100			4	4	4	4
	4							

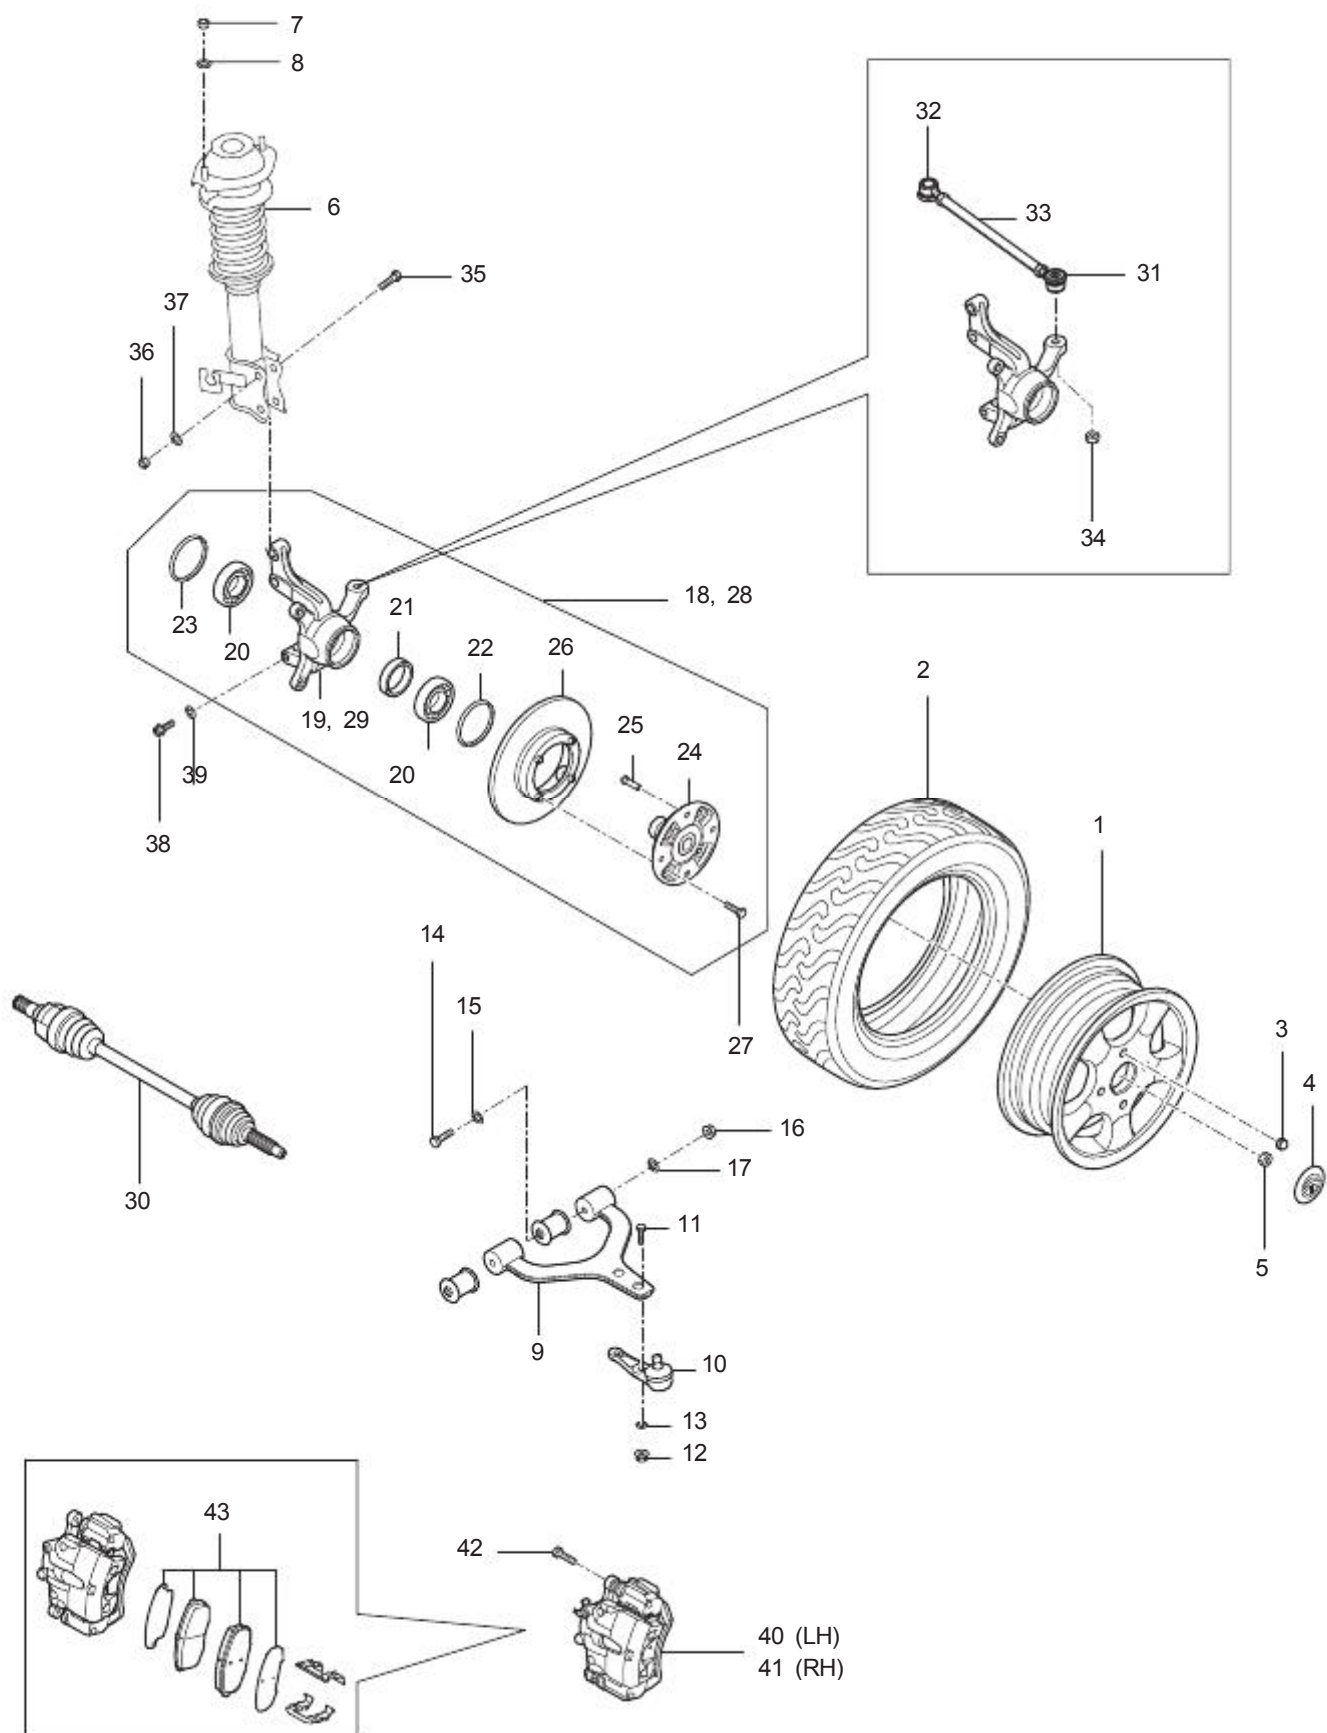


350. 리어 액슬 & 서스펜션 / RR AXLE & SUSPENSION

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
28 (201012 -)	너클 어셈블리 - 리어, 우측 KNUCKLE ASS'Y-RR, RH	35170-C5100	1	1	1	1	1	
29 (201012 -)	너클 - 리어, 우측 KNUCKLE-RR, RH	35171-C5100C	1	1	1	1	1	
30 (201012 -)	드라이브 샤프트 어셈블리 DRIVE SHAFT ASS'Y	35210-C5100D	2	2	2	2	2	
31 (201012 -)	엔드 어셈블리 - 타이(우측) END ASS'Y-TIE(RH)	41681-C5100	2	2	2	2	2	
32 (201012 -)	엔드 어셈블리 - 타이(좌측) END ASS'Y-TIE(LH)	41682-C5100	2	2	2	2	2	
33 (201012 -)	타이 로드 TIE ROD	41683-C5100a	2	2	2	2	2	
34 (201012 -)	너트 - 록(나일론) NUT-LOCK (NYLON)	H3264-1200Y	4	4	4	4	4	
35 (201012 -)	볼트 BOLT-HEX HD (M12x1.25x55L)	H1208-1255Y	4	4	4	4	4	
36 (201012 -)	너트 NUT-HEX HD (M12x1.25)	H3106-1200Y	4	4	4	4	4	
37 (201012 -)	와셔 - 스프링 WASHER-SPRING (M12)	H3603-1200Y	4	4	4	4	4	
38 (201012 -)	볼트 BOLT-HEX HD (M10x1.25x40L)	H1208-1040Y	2	2	2	2	2	
39 (201012 -)	와셔 - 스프링 WASHER-SPRING (M10)	H3603-1000Y	2	2	2	2	2	
40 (201012 -)	캘리퍼 어셈블리-디스크 브레이크, 좌측 CALIPER ASS'Y-D/BRAKE, L/H	53110-C5100	1	1	1	1	1	
41 (201012 -)	캘리퍼 어셈블리-디스크 브레이크, 우측 CALIPER ASS'Y-D/BRAKE, R/H	53120-C5100	1	1	1	1	1	
42 (201012 -)	볼트 - 브레이크 캘리퍼 BOLT-BRAKE CALIPER	53135-C5100	4	4	4	4	4	
43 (201012 -)	디스크 - 브레이크 패드 DISK-BRAKE PAD	310A2-C5100	2	2	2	2	2	

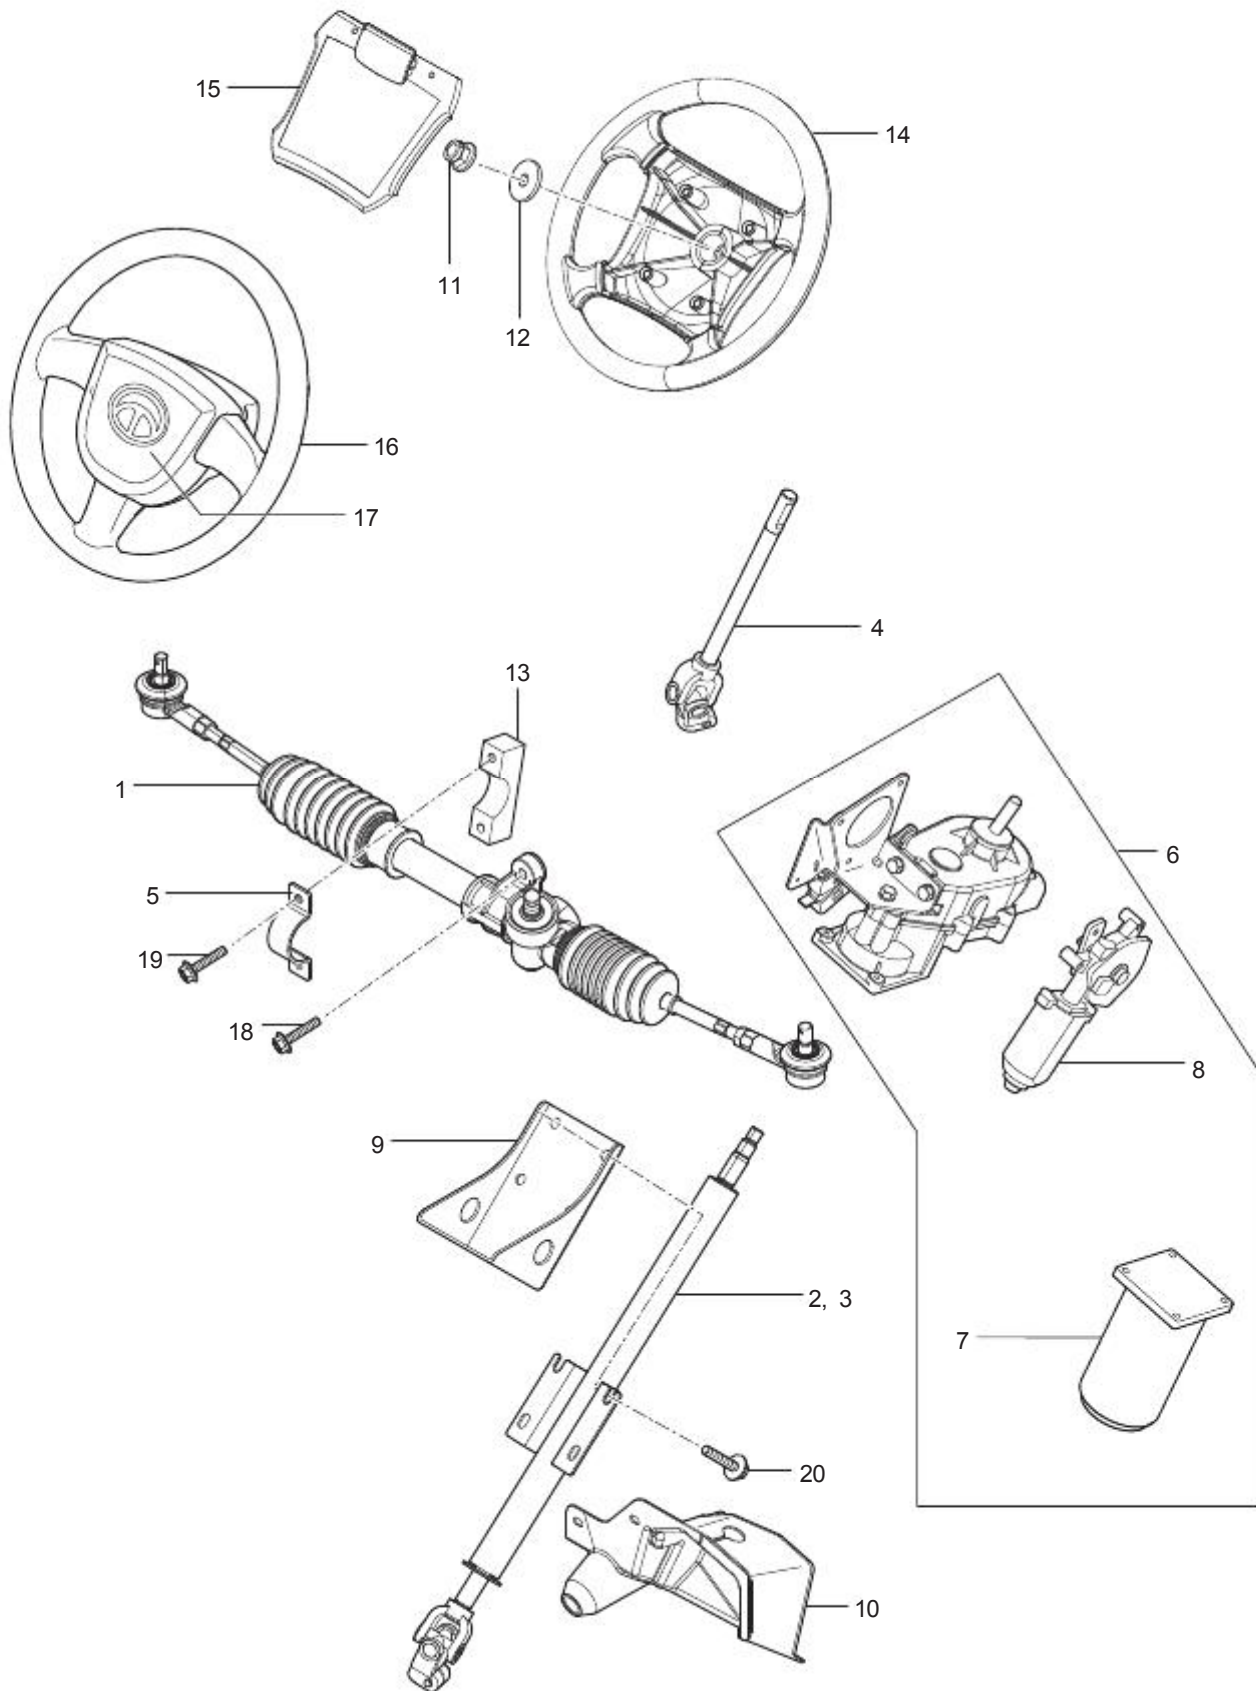


410 / 420. 스티어링 시스템 / STEERING SYSTEM

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	스티어링 기어 박스 어셈블리 STEERING GEAR BOX ASS'Y		41100-C5101B	1	1	1	1	1
2 (201012 -)	스티어링 컬럼 어셈블리 STEERING COLUMN ASS'Y		41300-C5101A					
3 (201012 -)	스티어링 컬럼 어셈블리 - UTL STEERING COLUMN ASS'Y-UTL		41300-U5000	1	1		1	
4 (201012 -)	샤프트 어셈블리 - 인터 SHAFT ASS'Y-INTERM		41400-C5101		1	1		1
5 (201012 -)	클램프 - 랙 사이드 CLAMP-RACK SIDE		41713-C5101		1	1	1	
6 (201012 -)	오토 기어 박스 어셈블리 AUTO GEAR BOX ASS'Y		42100-C5201E					
7 (201012 -)	모터 - 스티어링 MOTOR-STEERING		95600-C5200					
8 (201012 -)	모터 ¹ 클러치 MOTOR-CLUTCH		95700-C5210					
9 (201012 -)	힌지 어셈블리 - 컬럼 마운트 HINGE ASS'Y-COLUMN MOUNT		42220-C5201B	1	1	1	1	1
10 (201012 -)	오토 기어 박스 커버 AUTO GEAR BOX COVER		42241-C5200					
11 (201012 -)	너트 ¹ NUT-HEX HEAD (M12x1.25)		H3110-1200Y	1	1	1	1	1
12 (201012 -)	와셔 - 스프링 (M12) WASHER-SPRING (M12)		H3602-1200Y	1	1	1	1	1
13 (201012 -)	블록 BLOCK -S.G.B MTG		61742-E2000		1	1	1	
14 (201012 -)	휠 어셈블리(ST) WHEEL ASS'Y(ST)		41510-c5100		1	1		
15 (201012 -)	휠 커버 WHEEL COVER		41521-c5100		1			
16 (201012 -)	스티어링 휠 바디-어셈블리 STEERING WHEEL BODY - ASS'Y		35910-E2000				1	1
17 (201012 -)	커버 - STRG 휠 COVER - STRG WHEEL		35951-E2000					
18 (201012 -)	볼트 BOLT-HEX HD, SEM'S(S+P), P.C		H1250-0820Y	8	8	8	8	8
19 (201012 -)	볼트 BOLT-HEX HD, SEM'S(S+P), P.C		H1255-0820Y	2	2	2	2	2
20 (201012 -)	볼트 BOLT-HEX HD, SEM'S(S+P), P.C		H1250-0820Y	2	2	2	2	2

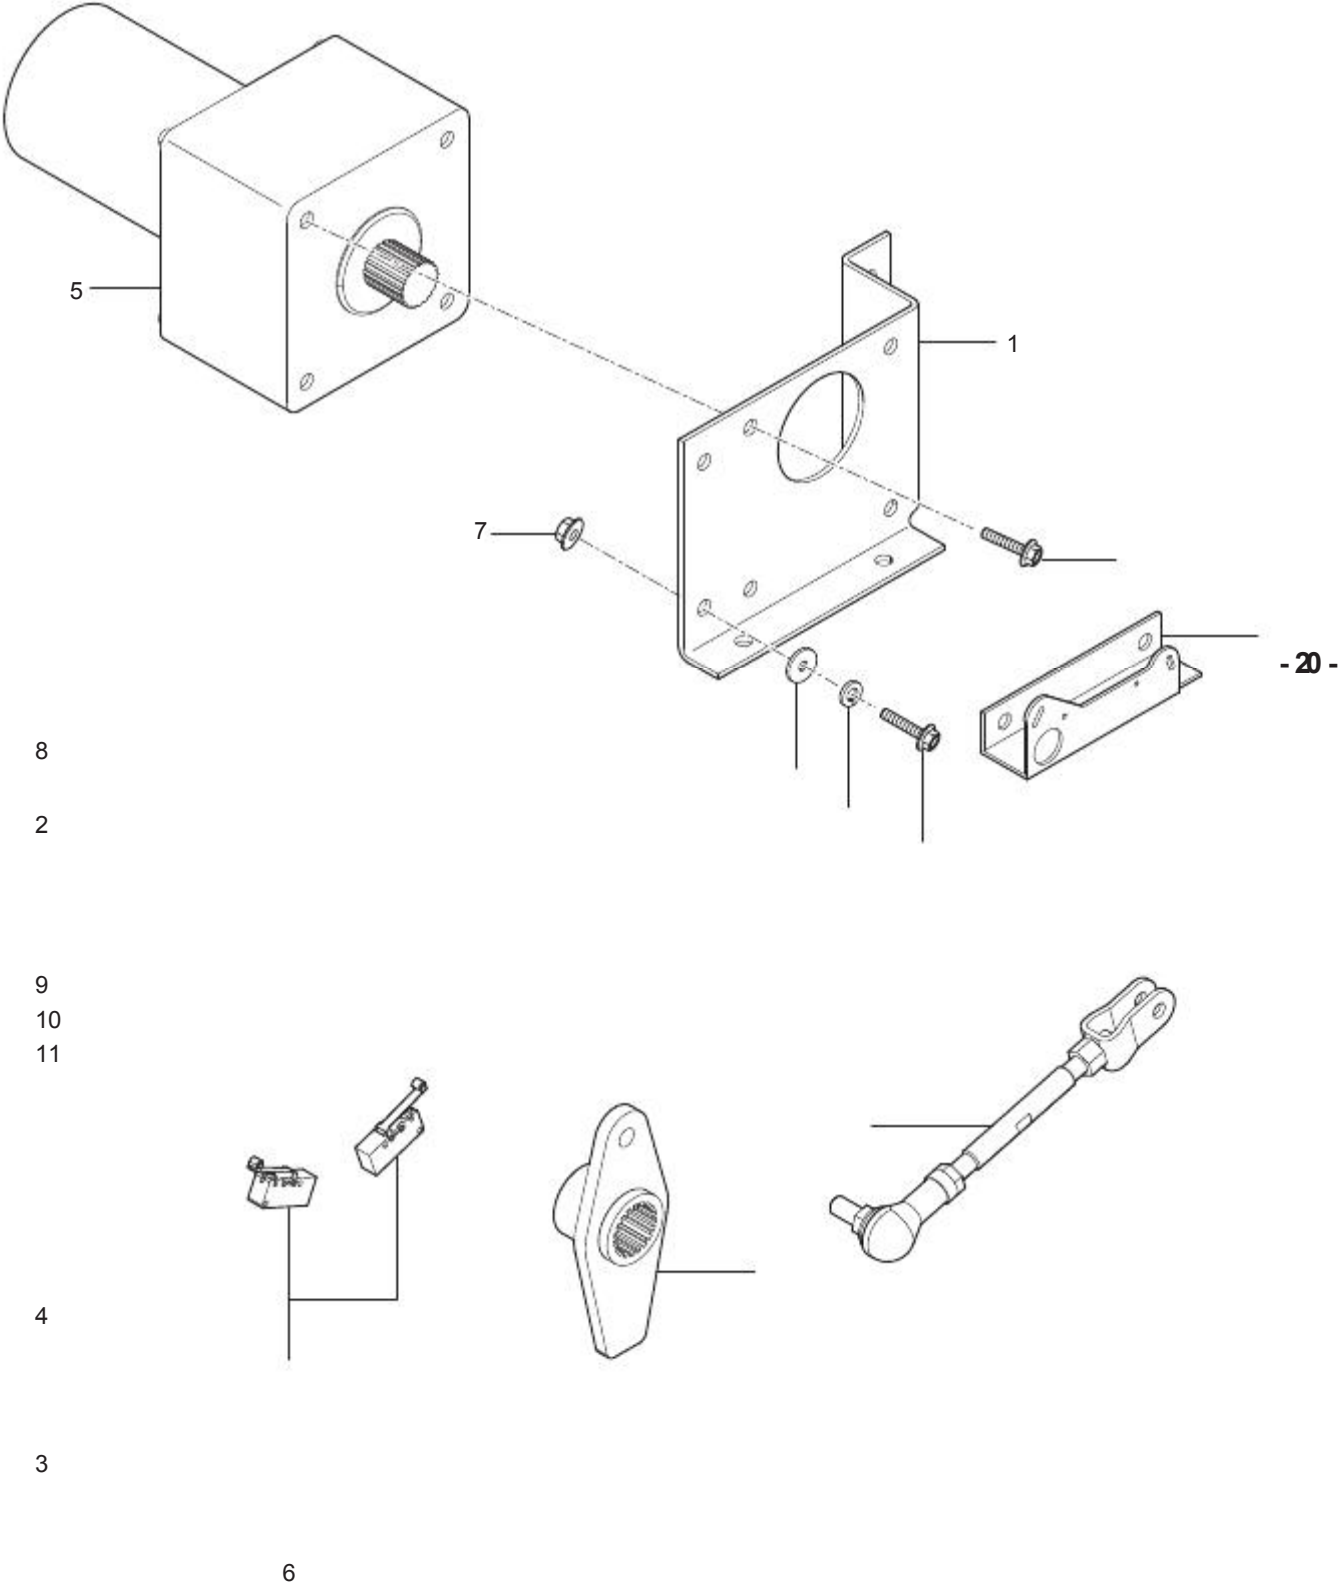


470. 모터 브레이크 / MOTOR BRAKE

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	스태이 어셈블리 모터 STAY ASS'Y-MOTOR		47110-C5200					
2 (201012 -)	스태이 스위치 STAY SWITCH		47121-C5200b					
3 (201012 -)	레버 어셈블리-모터 브레이크 LEVER ASS'Y-MOTOR BRAKE		47130-C5200c					
4 (201012 -)	링크 로드 어셈블리-모터 브레이크 LINK ROD ASS'Y-MOTOR BRAKE		47140-C5200C			1		
5 (201012 -)	브레이크 모터 어셈블리 BRAKE MOTOR ASS'Y		95500-C5200					
6 (201012 -)	리미트 스위치 LIMIT SWITCH		93700-C5200					
7 (201012 -)	너트 2 NUT-HEX HD		H3101-1000Y					
8 (201012 -)	볼트 4 BOLT-HEX HD, SEM'S (S/W+P/W),P.C		H3101-1000Y			4		
9 (201012 -)	와셔-플레인 WASHER-PLAIN		H3602-0800Y					
10 (201012 -)	와셔-스프링 WASHER-SPRING		H3602-0800Y					
11 (201012 -)	볼트-스프링 BOLT-HEX HD		H1200-0820Y					
	4							

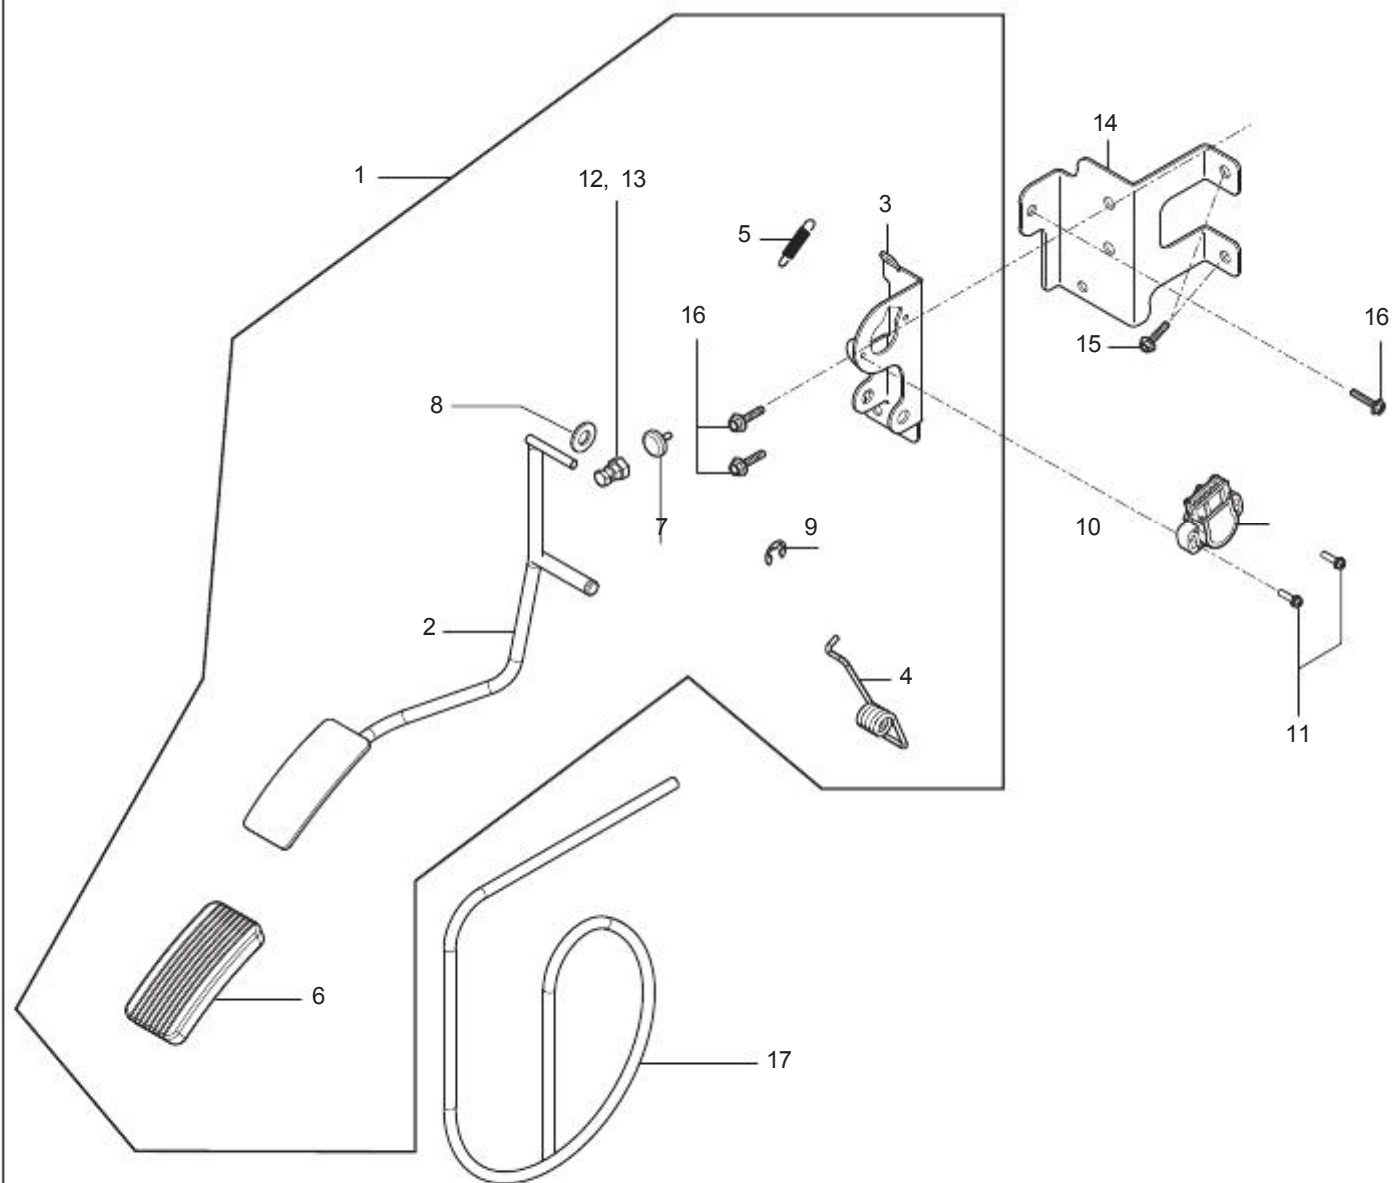


480. 악셀 페달 / ACCEL PEDAL

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	악셀 페달 어셈블리 ACCEL PEDAL ASS'Y		48100-C5100F		1	1	1	
2 (201012 -)	암 어셈블리 - 악셀 페달 ARM ASS'Y - ACCEL PEDAL		48110-C5100D		1	1	1	1
3 (201012 -)	하우징 - 악셀 페달 HOUSING - ACCEL PEDAL		39121-E2002B		1	1	1	
4 (201012 -)	리턴 스프링 - 악셀 페달 RETURN SPRING - ACCEL PEDAL		39151-E2002A	1	1	1	1	1
5 (201012 -)	AID 스프링 - 악셀 페달 AID SPRING - ACCEL PEDAL		39152-E2002		1	1	1	1
6 (201012 -)	패드 - 페달 PAD - PEDAL		55163-C5100		1	1	1	1
7 (201012 -)	스톱퍼 STOPPER		55165-C5100		1	1	1	
8 (201012 -)	와셔 - 홀레인 WASHER - PLAIN		H3510-1000B		1	1	1	1
9 (201012 -)	링 - 스냅 RING - SNAP(E-TYPE)		H4611-0900B		1	1	1	
10 (201012 -)	센서 - 악셀 페달 SENSOR - ACCEL PEDAL		94811-C5100		1	1	1	1
11 (201012 -)	머신 스크류 M.SCREW - PAN HEAD, SEM'S		H2291-0414Y	2	2	2	2	2
12 (201012 -)	볼트 BOLT - HEX HEAD		H1200-0616Y		1	1	1	1
13 (201012 -)	너트 NUT - HEX HEAD		H3100-0600Y		1	1	1	1
14 (201012 -)	브라켓 - 악셀 페달 BRKT - ACCEL PEDAL		48151-C5100C		1	1	1	1
15 (201012 -)	볼트 BOLT - HEX HD, SEM'S, P.C		H1250-0820Y	3	3	3	3	3
16 (201012 -)	볼트 BOLT - HEX HD, SEM'S, P.C		H1250-0620Y	3	3	3	3	3

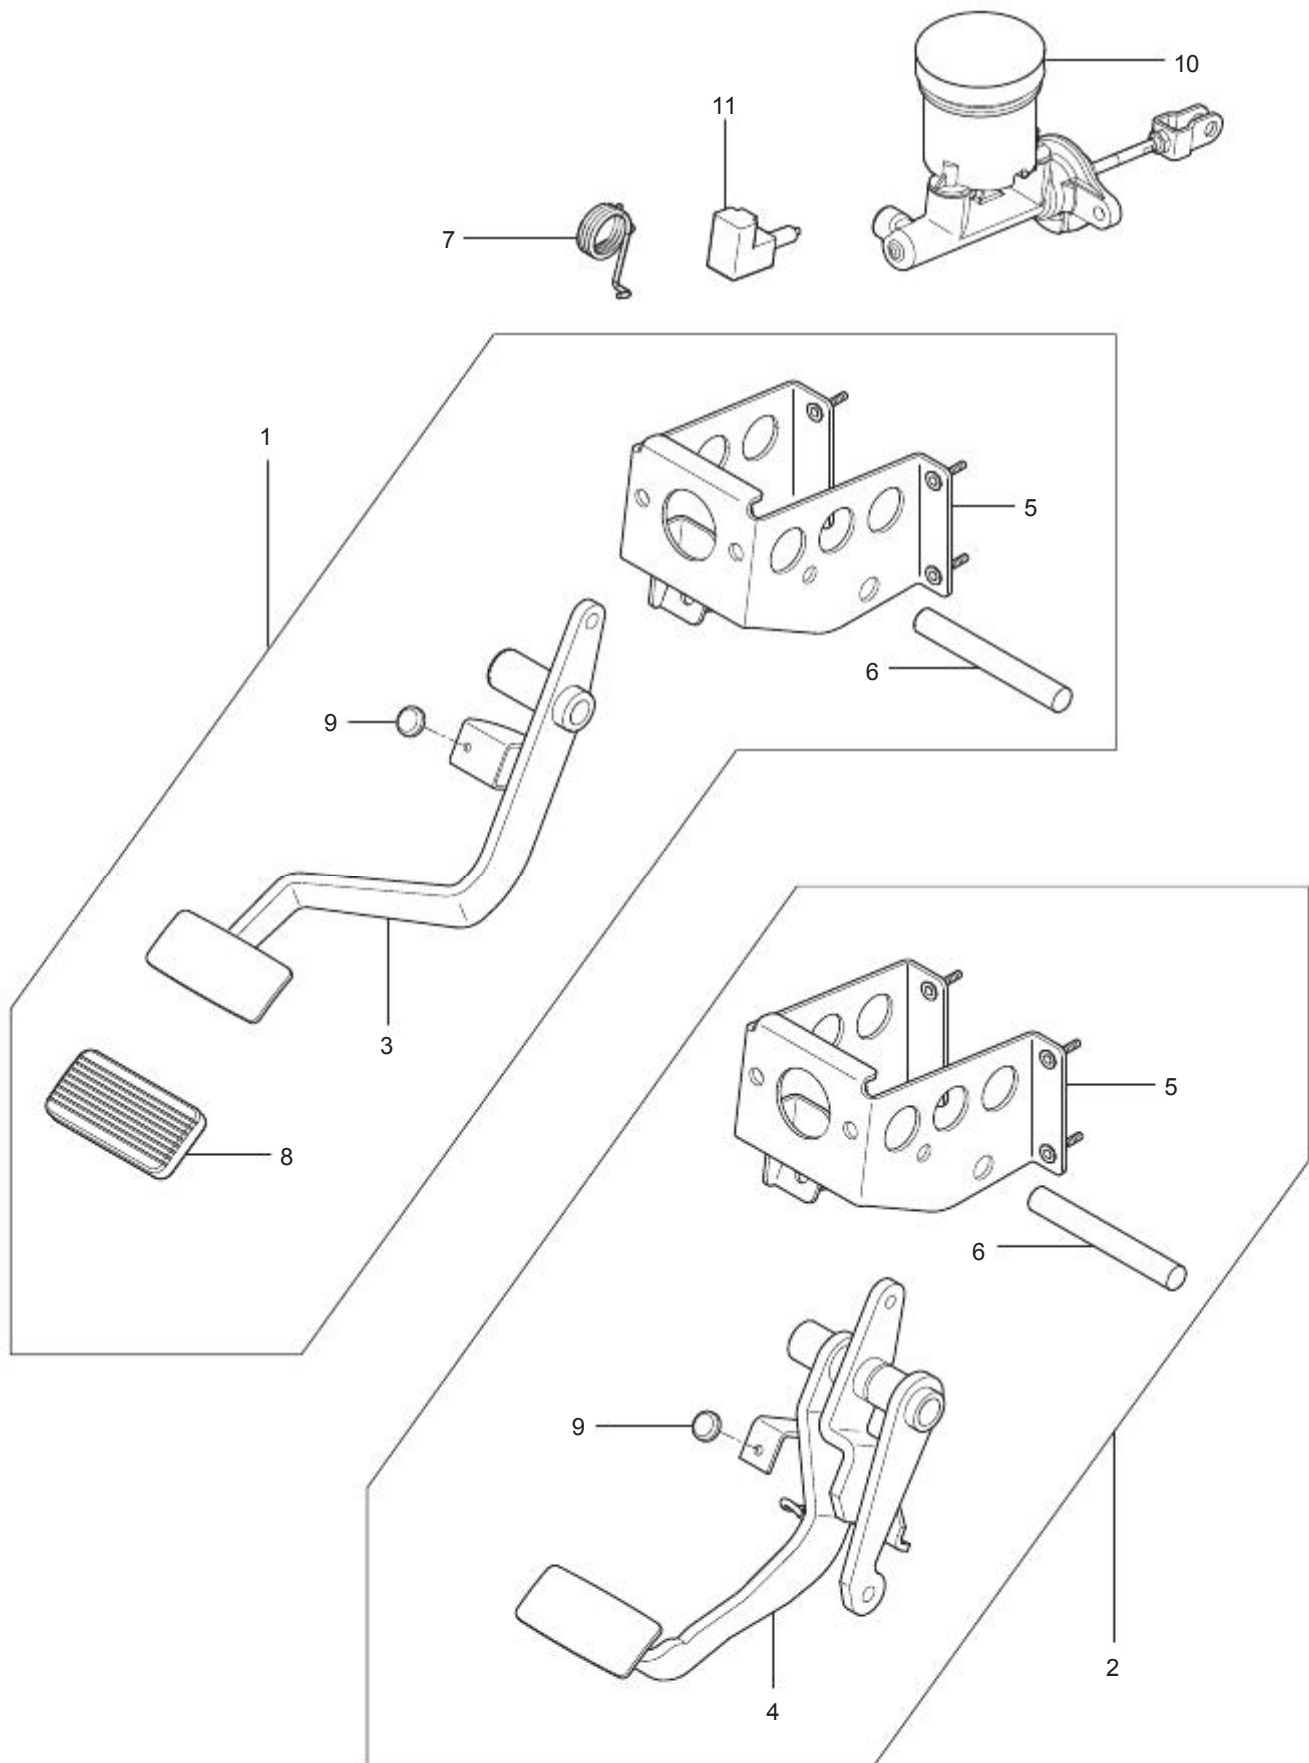


551 / 552. 브레이크 페달 / BRAKE PEDAL

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	브레이크 페달 어셈블리 - STD BRAKE PEDAL ASS'Y - STD	55100-C5110B	1	1			1	1
2 (201012 -)	브레이크 페달 어셈블리 - AGV BRAKE PEDAL ASS'Y - AGV	55200-C5210C						
3 (201012 -)	암 어셈블리 - 브레이크 페달, STD ARM ASS'Y - BRAKE PEDAL, STD	55110-C5110A	1	1			1	1
4 (201012 -)	암 어셈블리 - 브레이크 페달, AGV ARM ASS'Y - BRAKE PEDAL, AGV	55210-C5210A				1		
5 (201012 -)	하우징 어셈블리 - 브레이크 페달 HOUSING ASS'Y - BRK PEDAL	55140-C5110A	1	1	1	1	1	1
6 (201012 -)	샤프트 - 브레이크 페달 SHAFT - BRAKE PEDAL	55151-C5110	1	1	1	1	1	1
7 (201012 -)	스프링 - 브레이크 페달 SPRING - BRAKE PEDAL	55161-C5110A	1	1	1	1	1	1
8 (201012 -)	패드 - 페달 PAD - PEDAL	55163-C5100		1	1	1	1	1
9 (201012 -)	스톱퍼 STOPPER	55165-C5100		1	1	1		
10 (201012 -)	마스터 실린더 어셈블리 - 탠덤 MASTER CYLINDER ASS'Y - TANDEM	55170-C5110	1	1	1	1	1	
11 (201012 -)	스위치 - 스톱 램프 SWICH - STOP LAMP	93320-U5000		1	1	1	1	1

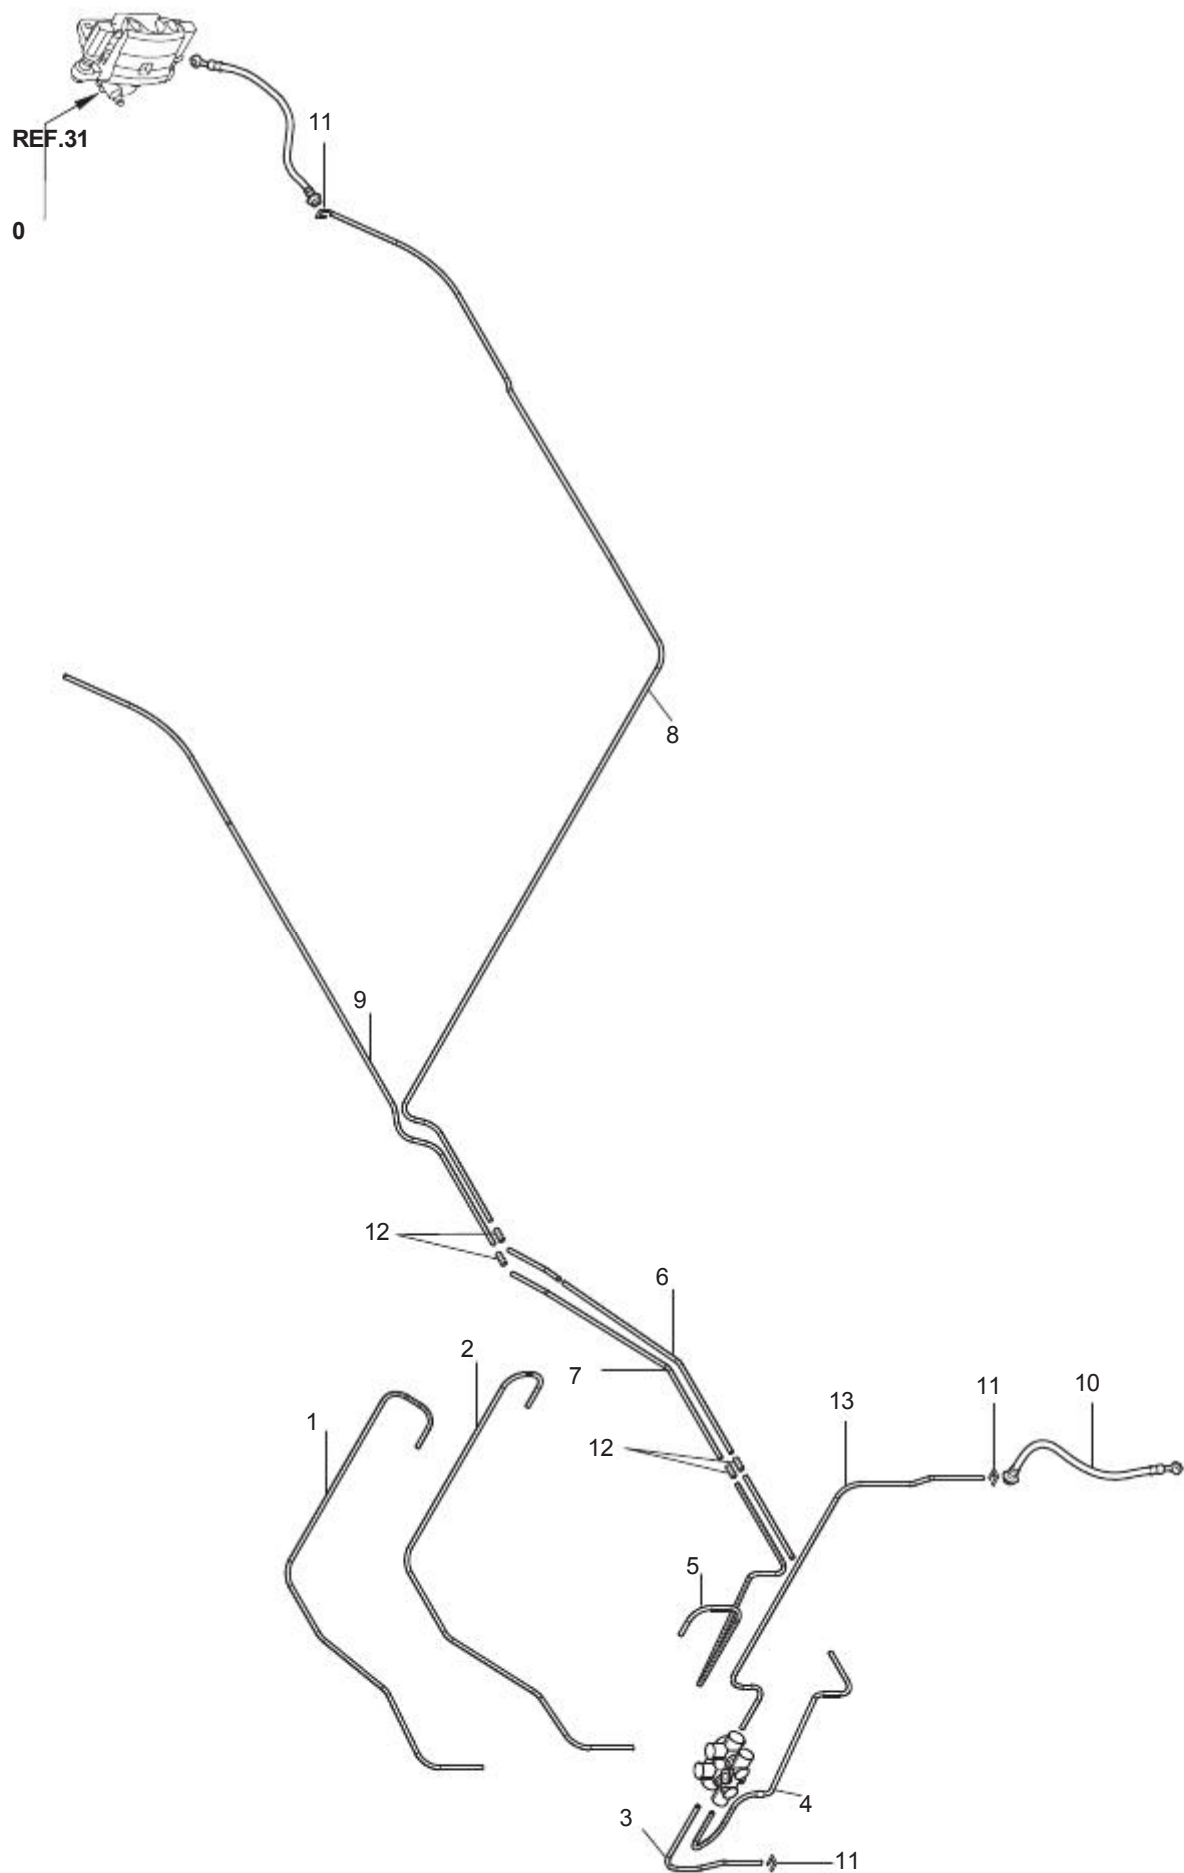



560. 브레이크 파이핑 / BRAKE PIPNG

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	파이프 어셈블리 - 마스터, 좌측 PIPE ASS'Y - MASTER, L/H	56111	1-C5110A	1	1	1	1	1
2 (201012 -)	파이프 어셈블리 - 마스터, 우측 PIPE ASS'Y - MASTER, R/H	56112	C5110A	1	1	1	1	1
3 (201012 -)	파이프 어셈블리 - 프런트,우측 PIPE ASS'Y - FRT, R/H	56114	C5100B	1	1	1	1	1
4 (201012 -)	파이프 어셈블리 - 리어, 좌측 1 No.1 PIPE ASS'Y-RR, L/H No.1	56115	C5100C	1	1	1	1	1
5 (201012 -)	파이프 어셈블리 - 리어, 우측 1 PIPE ASS'Y - RR, R/H No.1	56116	C5100C	1	1	1	1	1
6 (201012 -)	파이프 어셈블리 - 리어 좌측 2 No.2 PIPE ASS'Y - RR, L/H No.2	56117	C5100c		1	1		1
7 (201012 -)	파이프 어셈블리 - 리어 우측 2 PIPE ASS'Y - RR, R/H No.2	56118	C5100c		1	1		
8 (201012 -)	파이프 어셈블리 - 리어 좌측 3 No.3 PIPE ASS'Y - RR, L/H No.3	56121	C5100a		1	1		1
9 (201012 -)	파이프 어셈블리 - 리어, 우측 3 No.3 PIPE ASS'Y - RR, R/H No.3	56122	C5100b		1	1		1
10 (201012 -)	브레이크 호스 어셈블리 BRAKE HOSE ASS'Y	56131	C5100		4	4	4	4
11 (201012 -)	E-링, 브레이크 호스 E-RING, BRAKE HOSE	56144	C5100		4	4	4	4
12 (201012 -)	2웨이 커넥터 2-WAY CONNECTOR	56231	C5100		4	4	4	4
13 (201012 -)	파이프 어셈블리 - 프런트, 좌측 PIPE ASS'Y - FRT, L/H	56113	C5100B	1	1	1	1	1

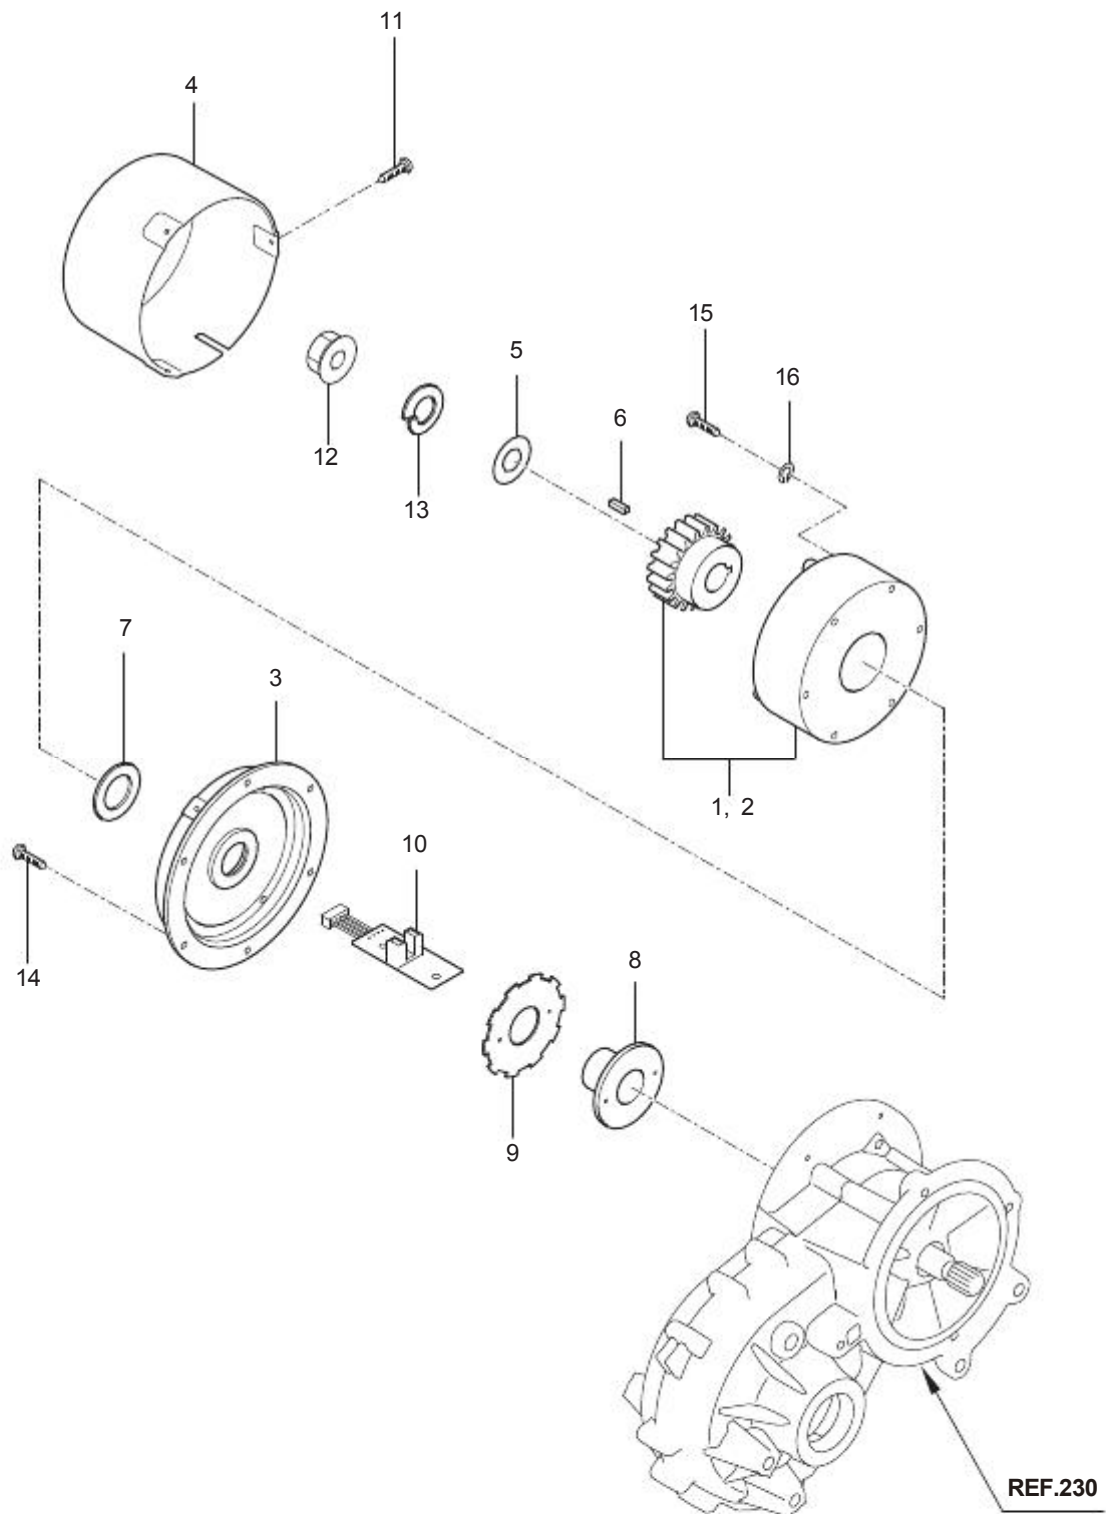


571 / 572. 파킹 브레이크 / PARKING BRAKE

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	전기식 브레이크 어셈블리 ELECTRIC BRAKE ASS'Y	57110	C5100a	1	1			
2 (201012 -)	전기식 브레이크 어셈블리 - 72V ELECTRIC BRAKE ASS'Y - 72V	3810	E2000			1	1	
3 (201012 -)	하우징 - 전기식 브레이크 HOUSING - ELECTRIC BRAKE	57121	C5100b	1	1	1	1	
4 (201012 -)	커버 - 전기식 브레이크 COVER - ELECTRIC BRAKE	57131	C5100	1	1	1	1	
5 (201012 -)	플레인 와셔 PLAIN WASHER	57142	C5100	1	1	1	1	
6 (201012 -)	키 - 패러럴 KEY - PARALLEL	57143	C5100	1	1	1	1	
7 (201012 -)	오일 실 OIL SEAL (ø30xø40x8)	57144	C5100a	1	1	1	1	
8 (201012 -)	서포트 - 센서 플레이트 SUPPORT - SENSOR PLATE	57211	C5200d		1	1	1	
9 (201012 -)	서포트 플레이트 - 엔코더 SENSOR PLATE - ENCODER	57212	C5200		1	1	1	
10 (201012 -)	PCB 엔코더 어셈블리 PCB ENCODER ASS'Y	57230	C5200			1	1	
11 (201012 -)	머신 스크류 M.SCREW - PAN HD,sem's(S+P)	H2291	0305Y	3	3	3	3	
12 (201012 -)	너트 NUT - HEX HD	H3106	1200Y	1	1	1	1	
13 (201012 -)	와셔 WASHER - SPRING (M12)	H3603	1200Y	1	1	1	1	
14 (201012 -)	볼트 BOLT - HEX HS(+), SEM'S(S+P), PC	H1245	0620Y	6	6	6	6	
15 (201012 -)	볼트 BOLT - SOKET HEAD	H1703	0840Y	3	3	3	3	
16 (201012 -)	와셔 - 스프링(M8) WASHER - SPRING (M8)	H3603	0800Y	3	3	3	3	

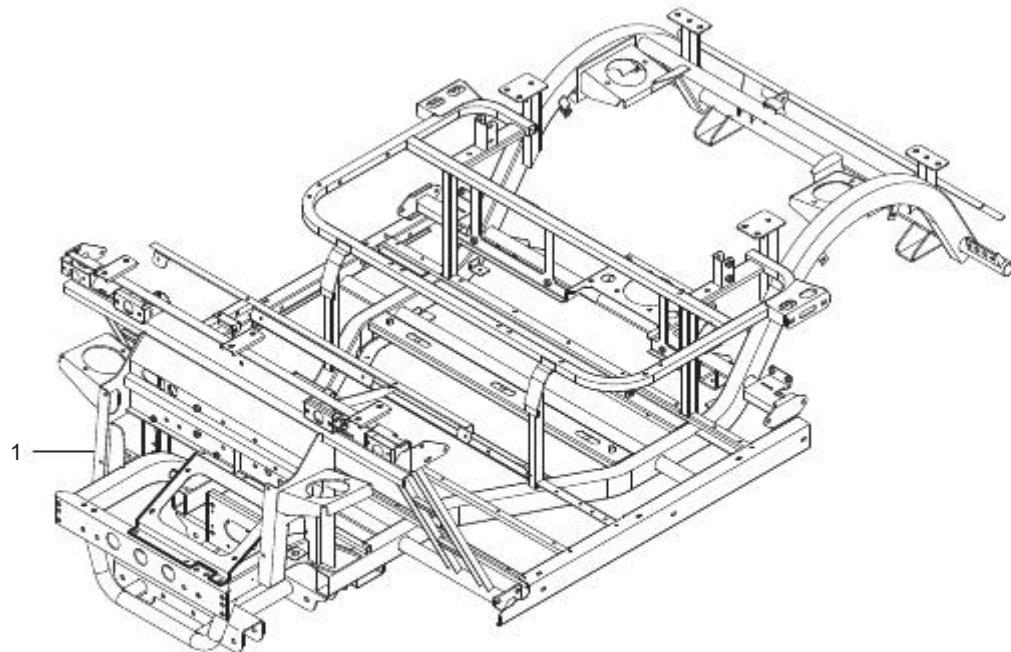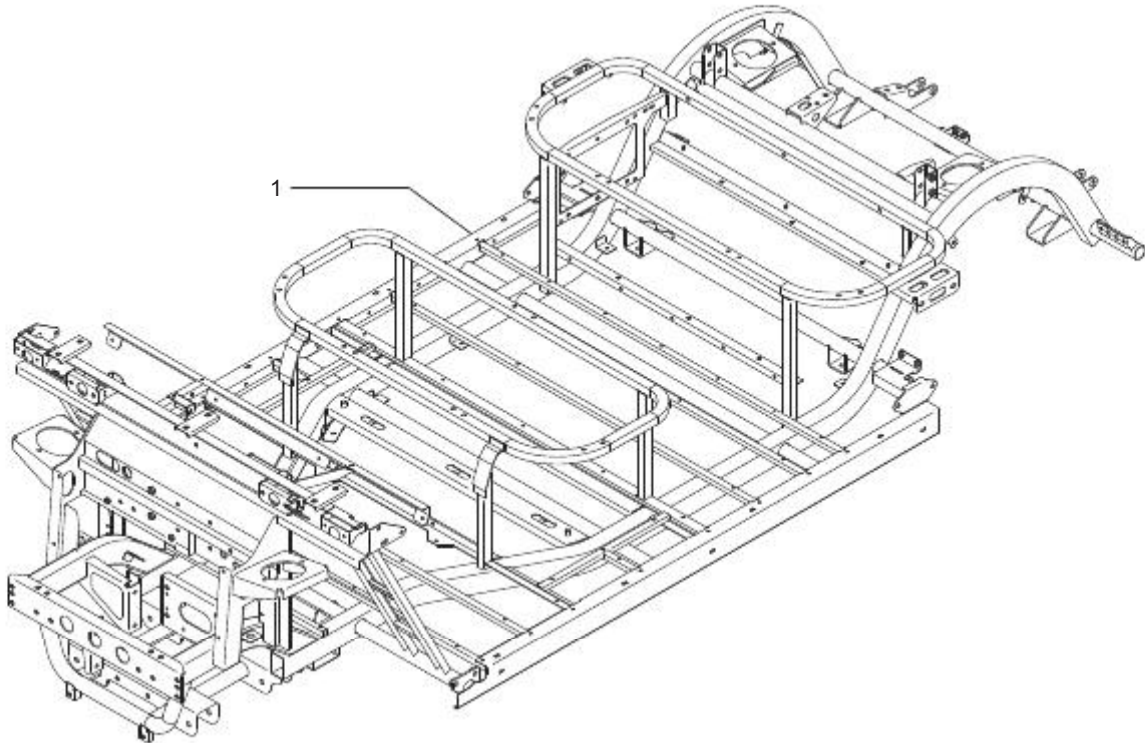


611. 메인 프레임 / MAIN FRAME

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	메인 프레임 어셈블리 MAIN FRAME ASS'Y	61100-C5130J		1		1		
		61100-N5040a						
		61100-C2030g	1					
		61100-C2031	1					
		61100-N2040						

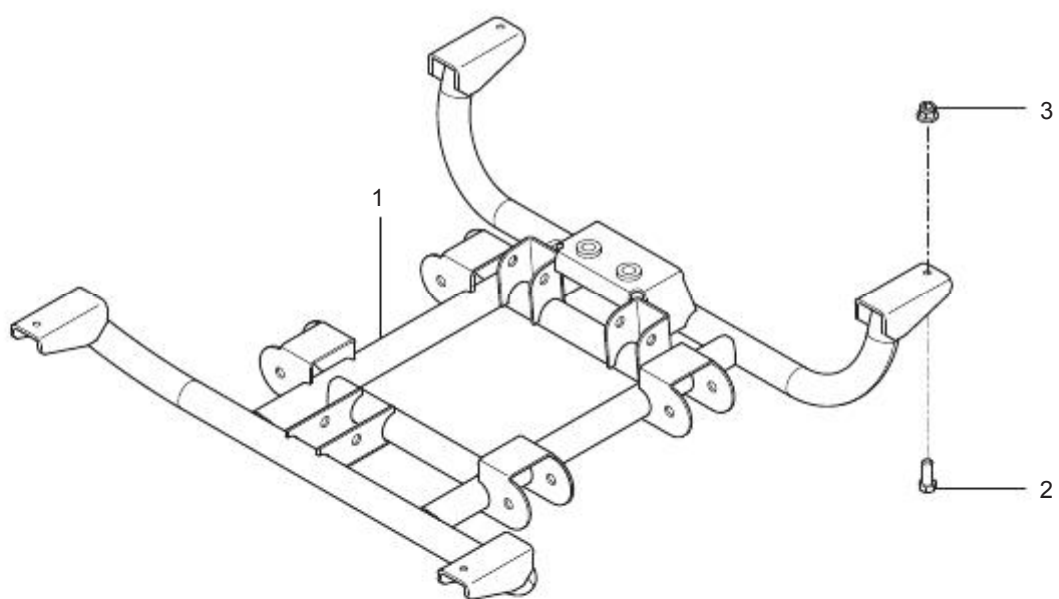


613. 리어 프레임 / REAR FRAME

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어 프레임 어셈블리(1/2) REAR FRAME ASS'Y(1/2)	61300-C5130f		1		1		
		61300-N2000a						
		61300-C2040a	1					
		61300-N2040a						
2 (201012 -)	볼트 BOLT-HEX, M12*P1.25*30L	H1208-1230Y		4	4	4	4	4
3 (201012 -)	너트 NUT-HEX, M12*P1.25	H0225-1200Y		4	4	4	4	4

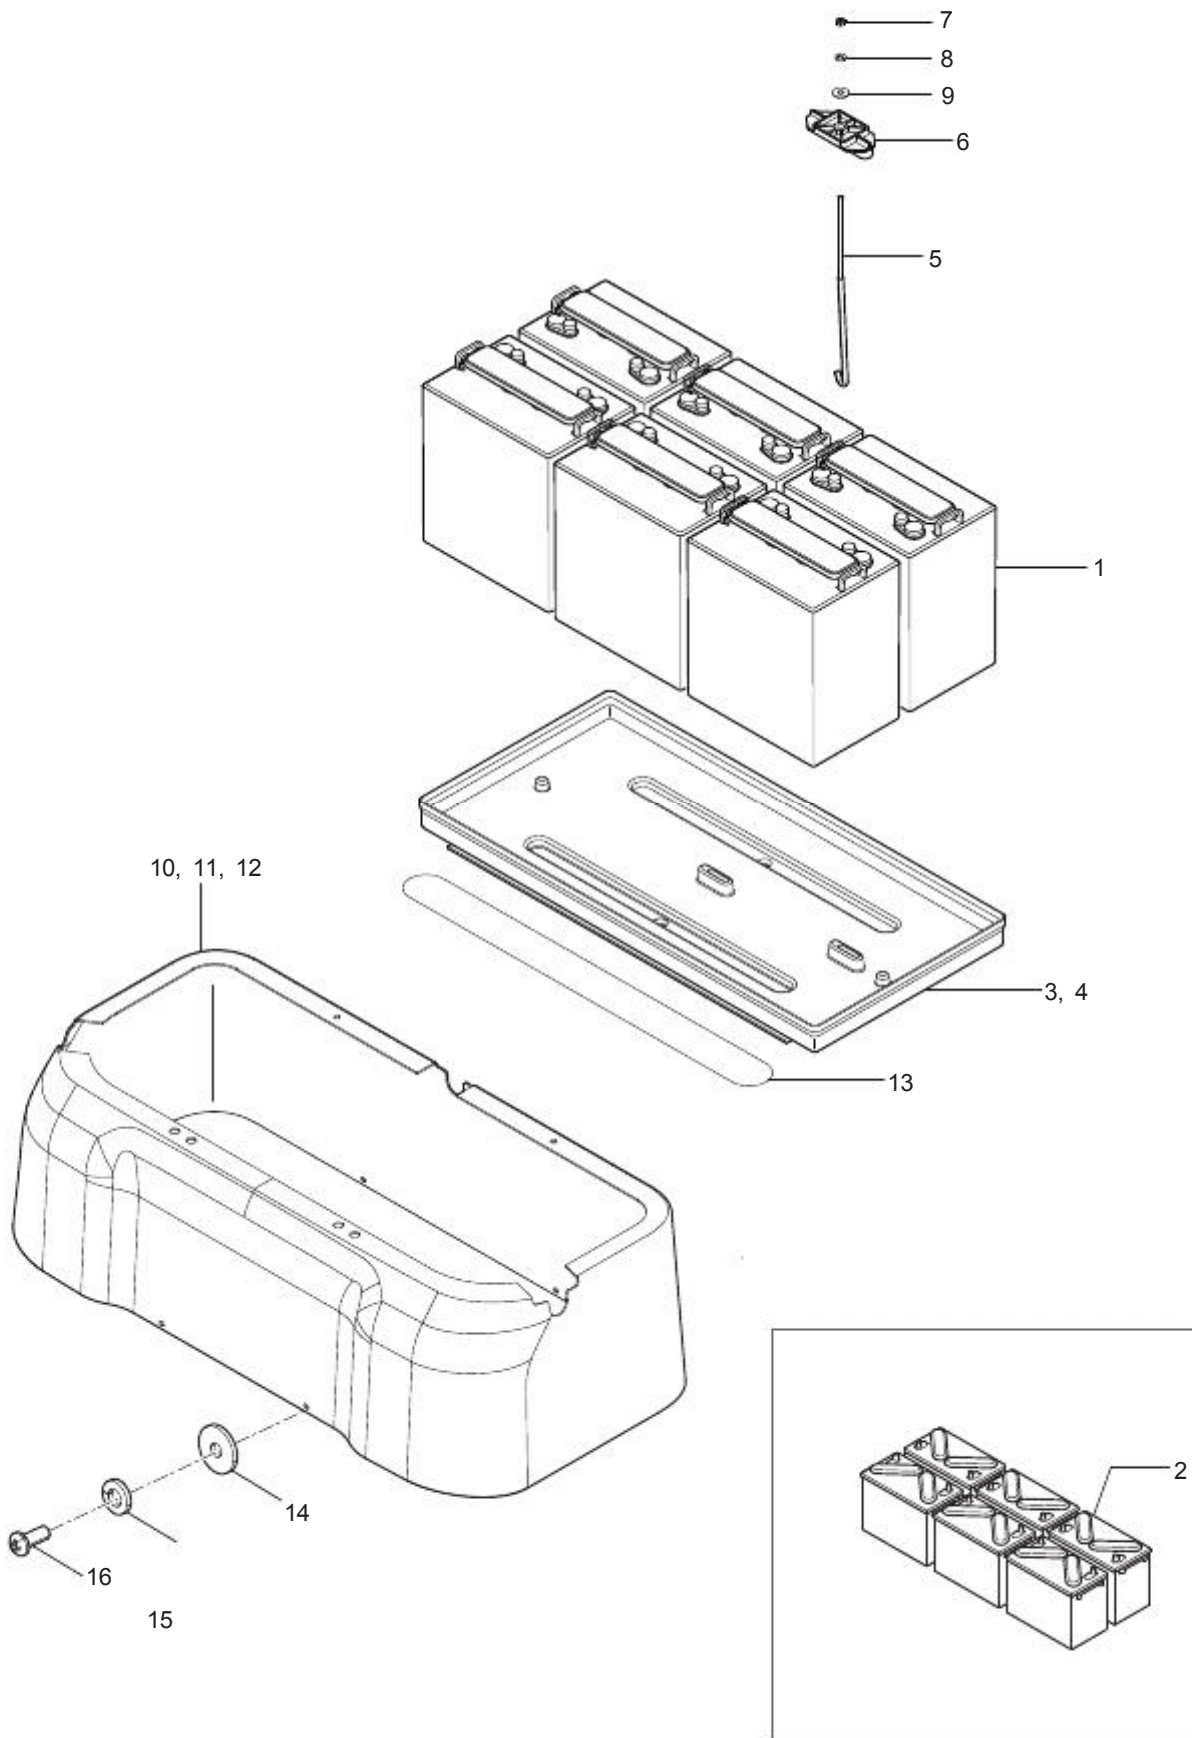


615. 배터리 / BATTERY

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	배터리 롱게스트 8240 BATTERY-LONGEST 8240	97740-C5100a		6	6			
2 (201012 -)	배터리-납축 전지 BATTERY-FLOODED TYPE	97100-E2000					6	6
3 (201012 -)	트레이-배터리 TRAY-BATTERY	61521-C5100a		1	1			
4 (201012 -)	트레이-배터리 롱 TRAY-BATTERY, LONG	61521-N5040					1	
5 (201012 -)	1 록킹 로드 LOCKING ROD	61522-C5100d	3	3		3		
		61522-N5040					3	
6 (201012 -)	프레스 플레이트-플라스틱 PRESS PLATE-PLASTIC	61523-C5100b	3	3	3	3	3	
7 (201012 -)	너트 NUT-HEX HEAD	H3103-0800Y		3	3	3	3	
8 (201012 -)	3 와셔-스프링 WASHER-SPRING	H3603-0800Y		3	3	3	3	
9 (201012 -)	3 와셔-플레이트 WASHER-PLATE	H3510-0800Y		3	3	3	3	
10 (201012 -)	배터리 커버 BATTERY COVER	61531-C5130d				1		
11 (201012 -)	배터리 커버, 롱 BATTERY COVER, LONG	61551-N5040a						
12 (201012 -)	배터리 커버 롱, 캐빈 BATTERY COVER LONG, CABIN	61551-N5041a						1
13 (201012 -)	패드-배터리 프레임 PAD-BATTERY FRAME	61533-C5130		1	1			
14 (201012 -)	3 와셔-플레인 WASHER-PLANE	H3508-0600S				4	4	
15 (201012 -)	4 와셔-스프링 WASHER-SPRING	H3602-0600S				4	4	
16 (201012 -)	머신 4 M.SCREW-PAN HEAD	H2230-0615S				4	4	
	4							

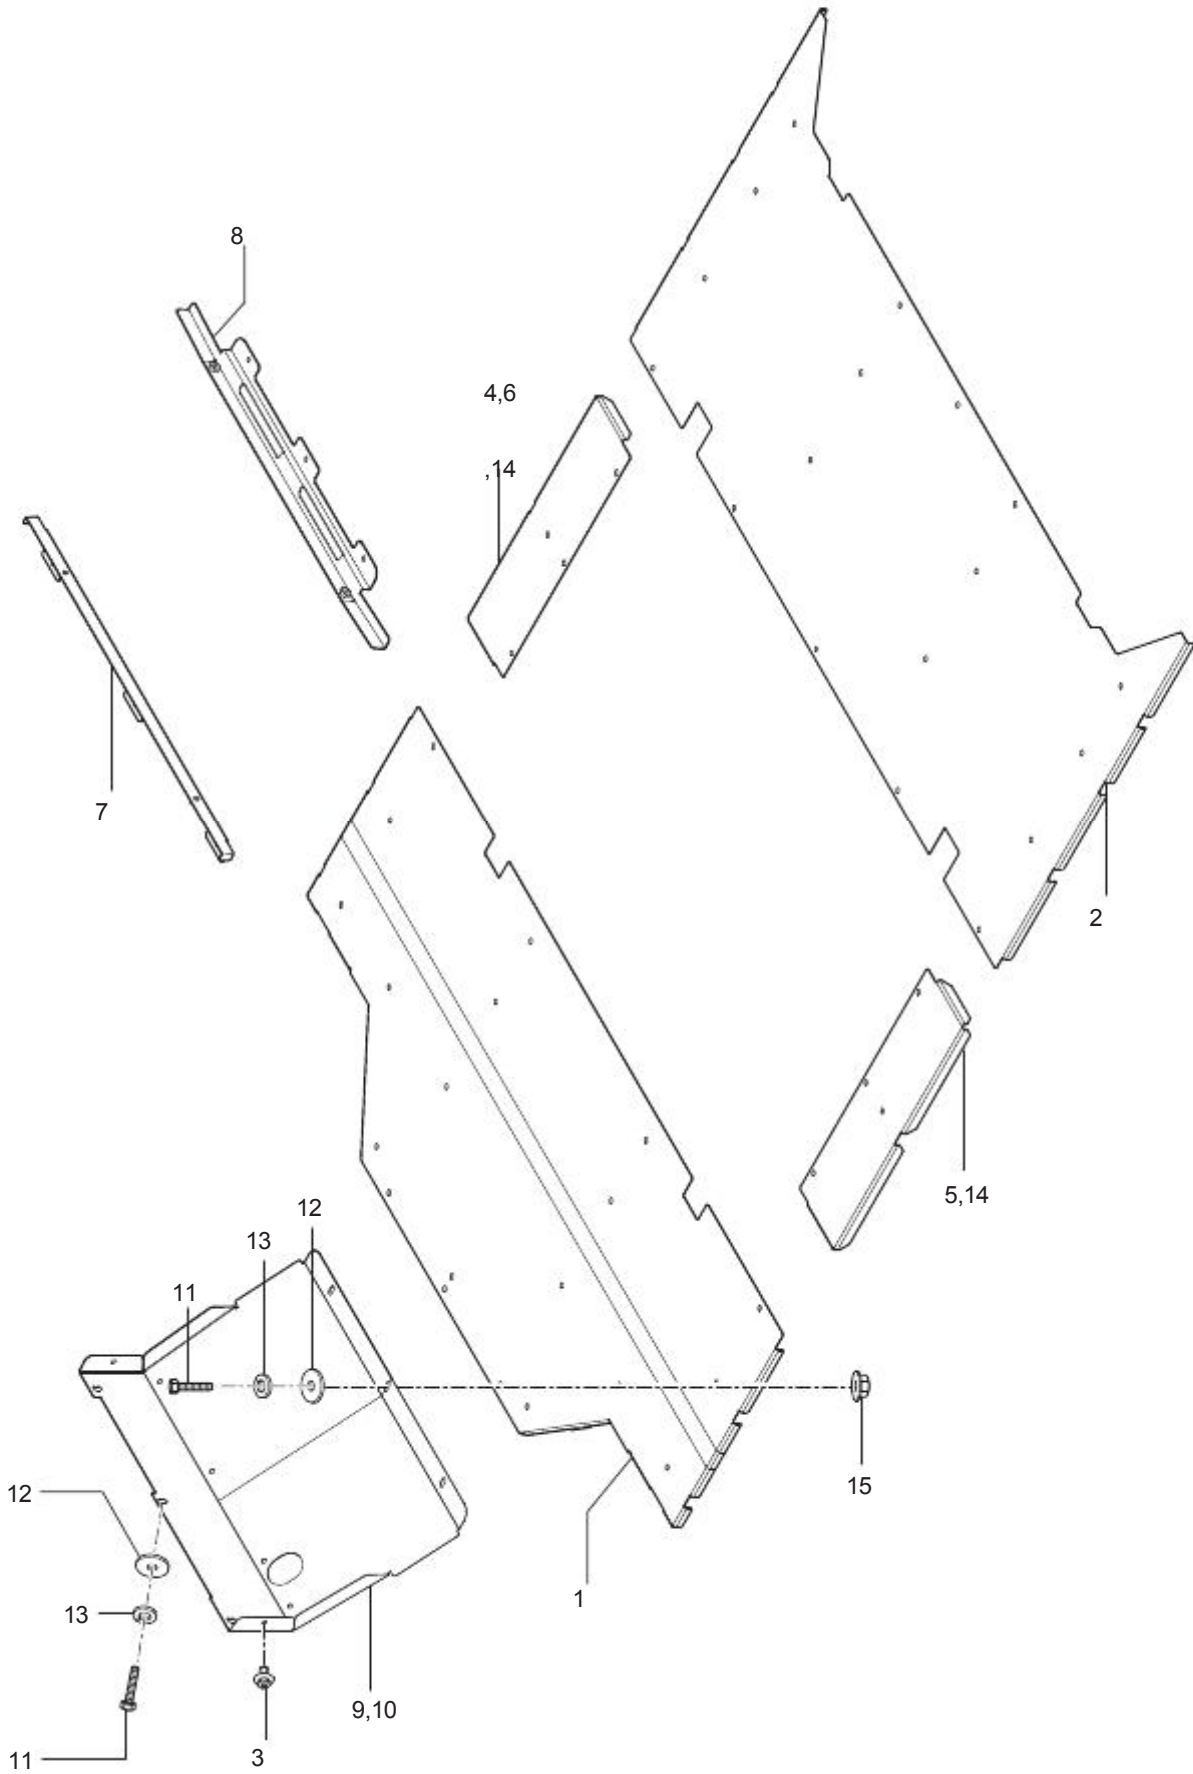


616. 플로어 / FLOOR

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	플로어 플레이트 - FRT FLOOR PLATE -FRT.	61611-C5130e				1	1	
2 (201012 -)	플로어 플레이트 - 리어 FLOOR PLATE-REAR	61621-C5130e				1	1	
3 (201012 -)	화스너 FASTENER, M4xD6xL15	63191-C5100		3	3	3	3	3
4 (201012 -)	플로어 플레이트 - 사이드 우측 FLOOR PLATE-SIDE,RH	61638-N5040						
5 (201012 -)	플로어 플레이트 - 사이드, 좌측 FLOOR PLATE-SIDE, LH	61637-N2040						
6 (201012 -)	플로어 플레이트 - 사이드, 우측 FLOOR PLATE-SIDE, RH	61638-N2040						
7 (201012 -)	프로텍터 - 배터리 커버 PROTECTOR-BATTERY COVER	61645-C5130			1	1		
8 (201012 -)	프로텍터 - 리어 캡 PROTECTOR-REAR CAB	61646-C5130				1	1	
9 (201012 -)	대쉬 - 센터, S.T.D DASH -CENTER, S.T.D	61651-C5130C	1		1		1	1
10 (201012 -)	대쉬 - 센터, A.G.V DASH -CENTER, A.G.V	61651-C5230c						
11 (201012 -)	머신 스크류 - 트러스 헤드 M.SCREW-TRUSS HD	H2208-0614S		6	6	6	6	6
12 (201012 -)	와셔 - 플레인 WASHER-PLANE	H3510-0600S			6	6	6	6
13 (201012 -)	와셔 - 스프링 WASHER-SPRING	H3602-0600S			6	6	6	6
14 (201012 -)	플로어 플레이트 - 사이드 FLOOR PLATE-SIDE	61631-C5130B				2		
15 (201012 -)	너트 NUT-HEX HEAD	H1244-0600Y		6	6	6	6	6
6								

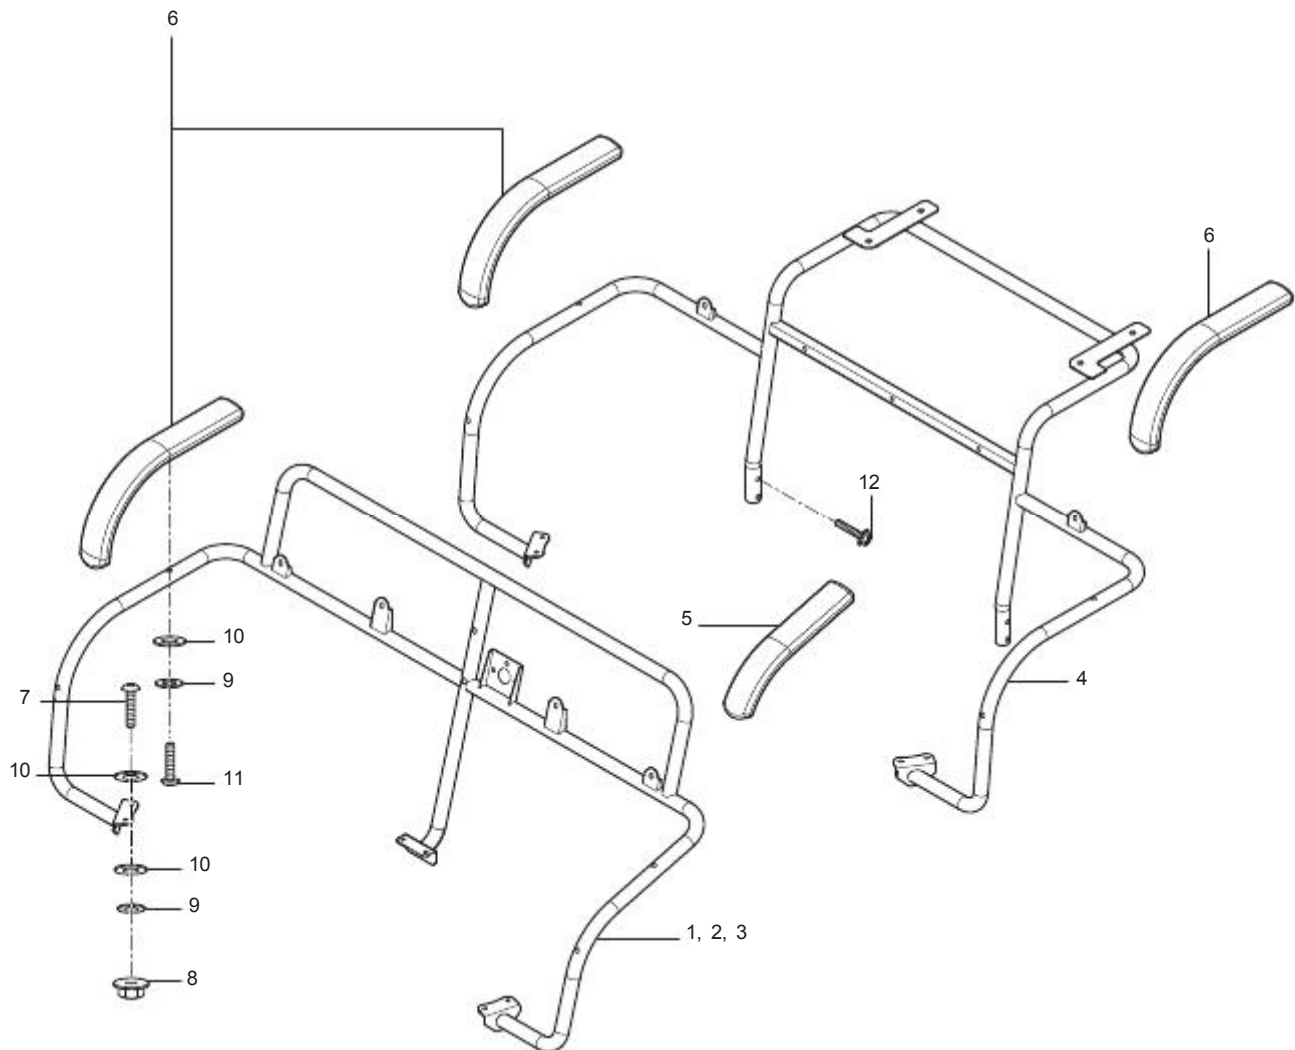


617. 시트 백 프레임 / SEAT BACK FRAME

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	시트 백 프레임 어셈블리-프런트 SEAT BACK FRAME ASS'Y-FRT	61710-C5130c		1		1		
		61710-N5040c						
2 (201012 -)	시트 백 프레임 어셈블리 SEAT BACK FRAME ASS'Y	61710-C2110a	1				1	
		61710-N5041						
3 (201012 -)	시트 백 프레임 No.1-프런트 SEAT BACK FRAME NO.1-FRT	61710-N5041			1	1		1
4 (201012 -)	시트 백 프레임 어셈블리-리어 SEAT BACK FRAME ASS'Y-RR	61730-C5130d		1		1		
		61730-U5130a		1		1		
		61730-N5041						
5 (201012 -)	암레스트 쿠션 어셈블리 ARMREST CUSHION ASS'Y	61780-C5106b		1	1	1	1	1
6 (201012 -)	암레스트 쿠션 어셈블리, 우측 ARMREST CUSHION ASS'Y, RH	61790-C5106		1	3	3	1	3
7 (201012 -)	머신 스크류 M.SCREW-PAN HD	H2291-0640S		4	10	10	4	6
8 (201012 -)	너트-록(나이론) NUT-LOCK (NYLON)	H3264-0600S		4	10	10	4	6
9 (201012 -)	와셔-스프링 WASHER-SPRING	H3602-0600S		8	18	18	8	
10 (201012 -)	와셔-플레인 WASHER-PLANE	H3510-0600S		12	28	28	12	28
11 (201012 -)	머신 스크류 - 트러스 헤드 M.SCREW-TRUSS HD	H2208-0630S		4	8	8	4	8
12 (201012 -)	볼트 BOLT-HEX HD,SEM'S (S+P),PC	H0119-0855Y		4	4	4	4	4

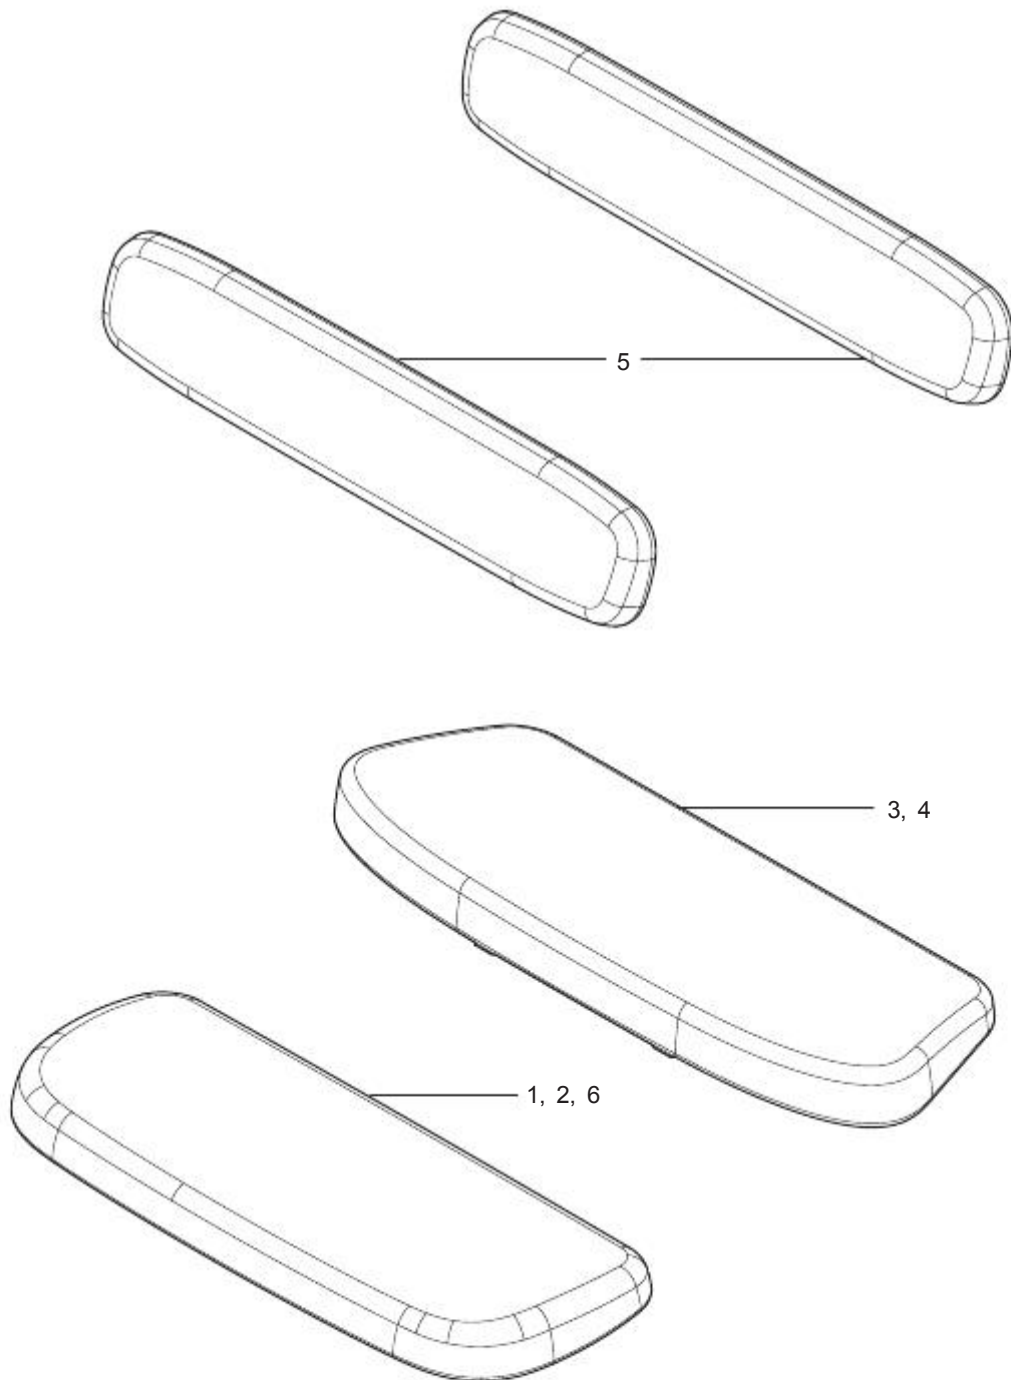


618. 시트 / SEAT

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	시트 쿠션 어셈블리-프런트 SEAT CUSHION ASS'Y-FRT.	61810-c5104a 열선포함			1	1		
		61810-c5105a		1	1			열선미포함
2 (201012 -)	시트 쿠션 어셈블리-프런트 SEAT CUSHION ASS'Y-FRT.	61820-c5104						1 열선미포함
		61820-c5104a 열선포함						1
3 (201012 -)	시트 쿠션 어셈블리-리어 SEAT CUSHION ASS'Y-REAR	61830-c5104a	1	1	1			열선포함
		61830-c5105a	1	1	1			열선미포함
4 (201012 -)	시트 쿠션 어셈블리-리어 SEAT CUSHION ASS'Y-REAR	61840-c5105				1	1	열선미포함
		61840-c5105a 열선포함						1
5 (201012 -)	시트 백 쿠션 어셈블리 SEAT BACK CUSHION ASS'Y	61860-c5106		1	2	2	1	2
6 (201012 -)	시트 쿠션 어셈블리 SEAT CUSHION ASS'Y	61890-C2005A 열선포함						1
		61890-C2005B				1		열선미포함

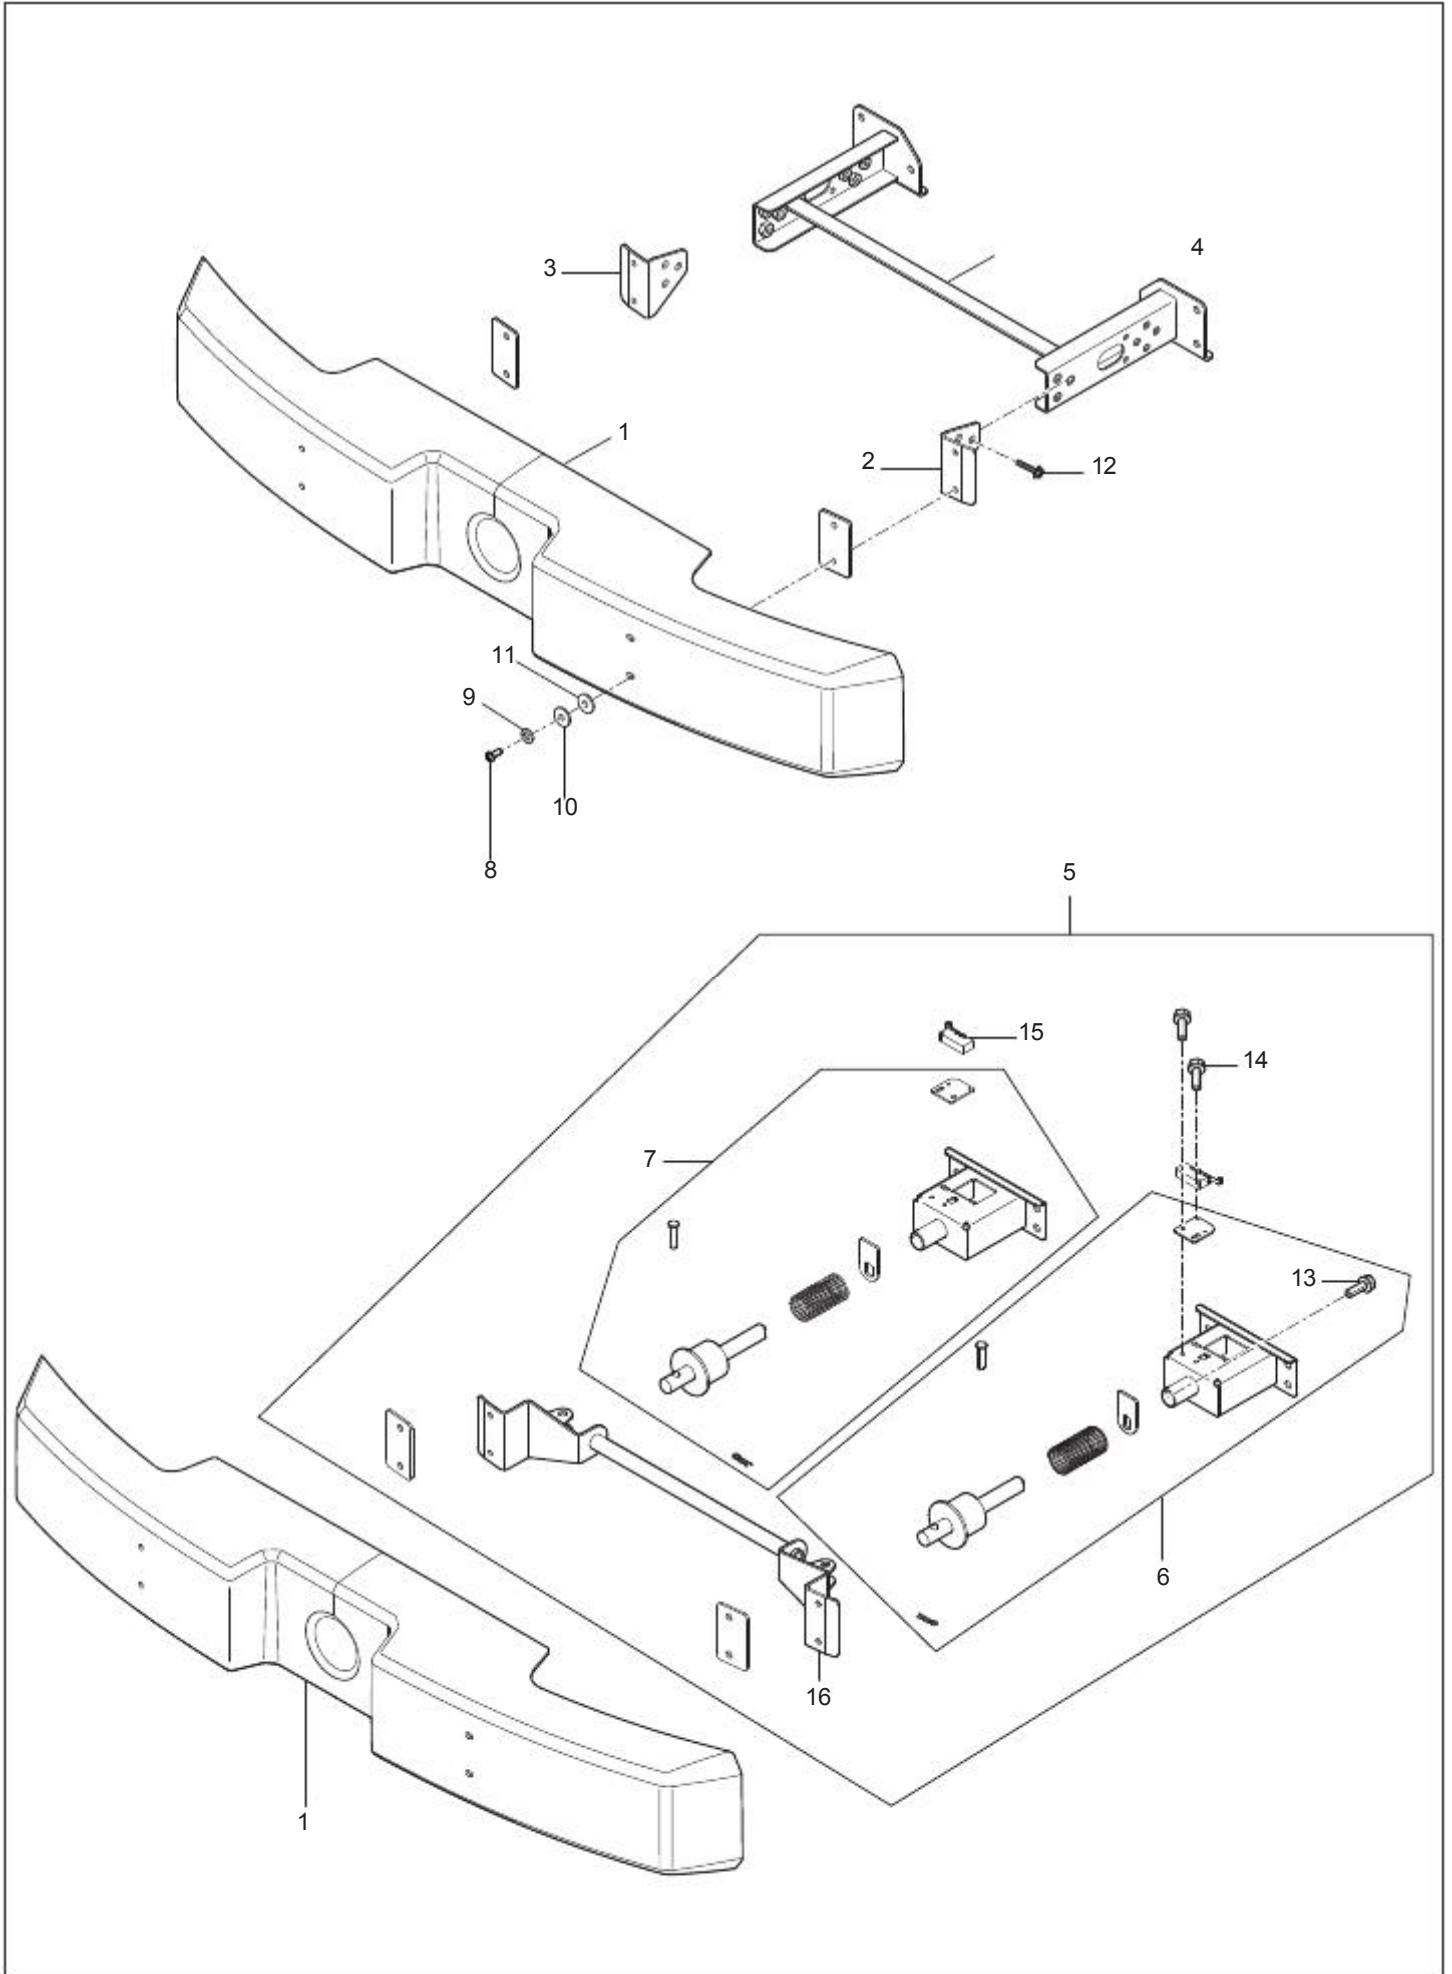


621 /622. 프런트 범퍼 / FRT BUMPER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	프런트 범퍼 FRT BUMPER		62111-C5100d	1	1	1	1	
2 (201012 -)	브라켓 No.1-프런트 범퍼, 좌측 BUMPER, L/H		62121-C5100a	1	1			
3 (201012 -)	브라켓 No.1-프런트 범퍼, 우측 BRKT NO.1-FRT BUMPER, R/H	62122	C5100a	1	1		1	1
4 (201012 -)	프레임 어셈블리-프런트 범퍼 FRAME ASS'Y-FRT BUMPER	62130	C5100a	1	1		1	1
5 (201012 -)	범퍼 프레임 어셈블리-AGV BUMPER FRAME ASS'Y-AGV	62210	C5240					
6 (201012 -)	하우징 어셈블리-범퍼, 좌측 HOUSING ASS'Y-BUMPER, L/H	62220	C5240b			1		
7 (201012 -)	하우징 어셈블리-범퍼, 우측 HOUSING ASS'Y-BUMPER, R/H	62230	C5240b			1		
8 (201012 -)	머신 스크류-트러스 헤드 M.SCREW-TRUSS HD	H2208	0625S	4	4	4	4	4
9 (201012 -)	와셔-스프링 WASHER-SPRING	H3602	0600S	4	4	4	4	4
10 (201012 -)	와셔-플레인 WASHER-PLAIN	H3510	0600S	4	4	4	4	4
11 (201012 -)	와셔-우레탄 WASHER-URETHANE	H3510	0600R	4	4	4	4	4
12 (201012 -)	볼트 BOLT-HEX HD,sem's(S+P), PC	H1250	0820Y	12	12	6	12	12
13 (201012 -)	볼트 BOLT-HEX HD,sem's(S+P)	H1295	0816Y					
14 (201012 -)	머신 스크류 M.SCREW-PAN HD,sem's(S+P)	H2291	0410Y					
15 (201012 -)	머신 스크류 M.SCREW-PAN HD,sem's(S+P)	H2291	0316Y					
16 (201012 -)	브라켓 - 범퍼 프레임 BRKT - BUMPER FRAME	62300	C520					
	1							

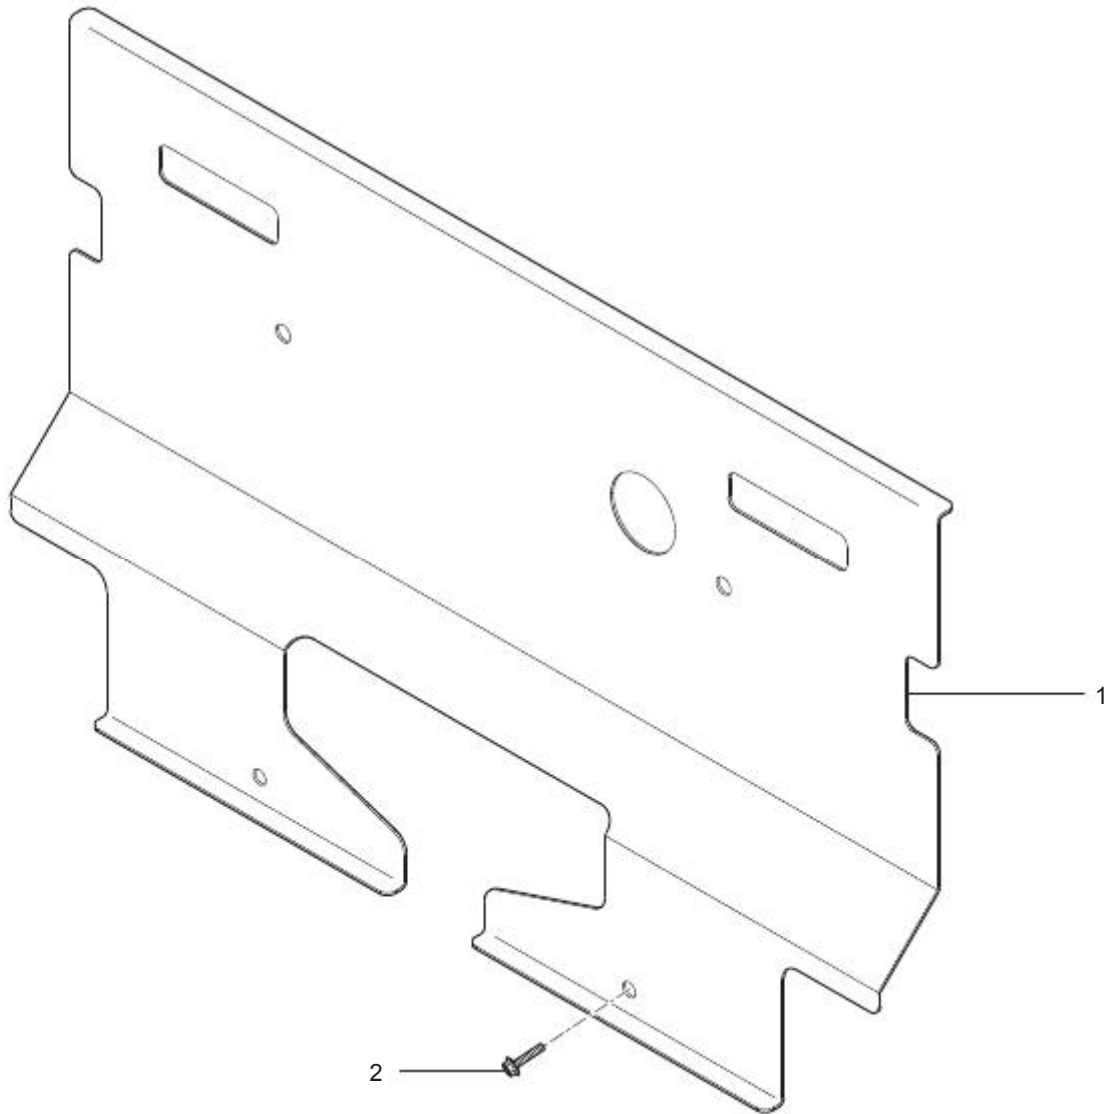


623. 노이즈 프로텍터 / NOISE PROTECTOR


[illegible]

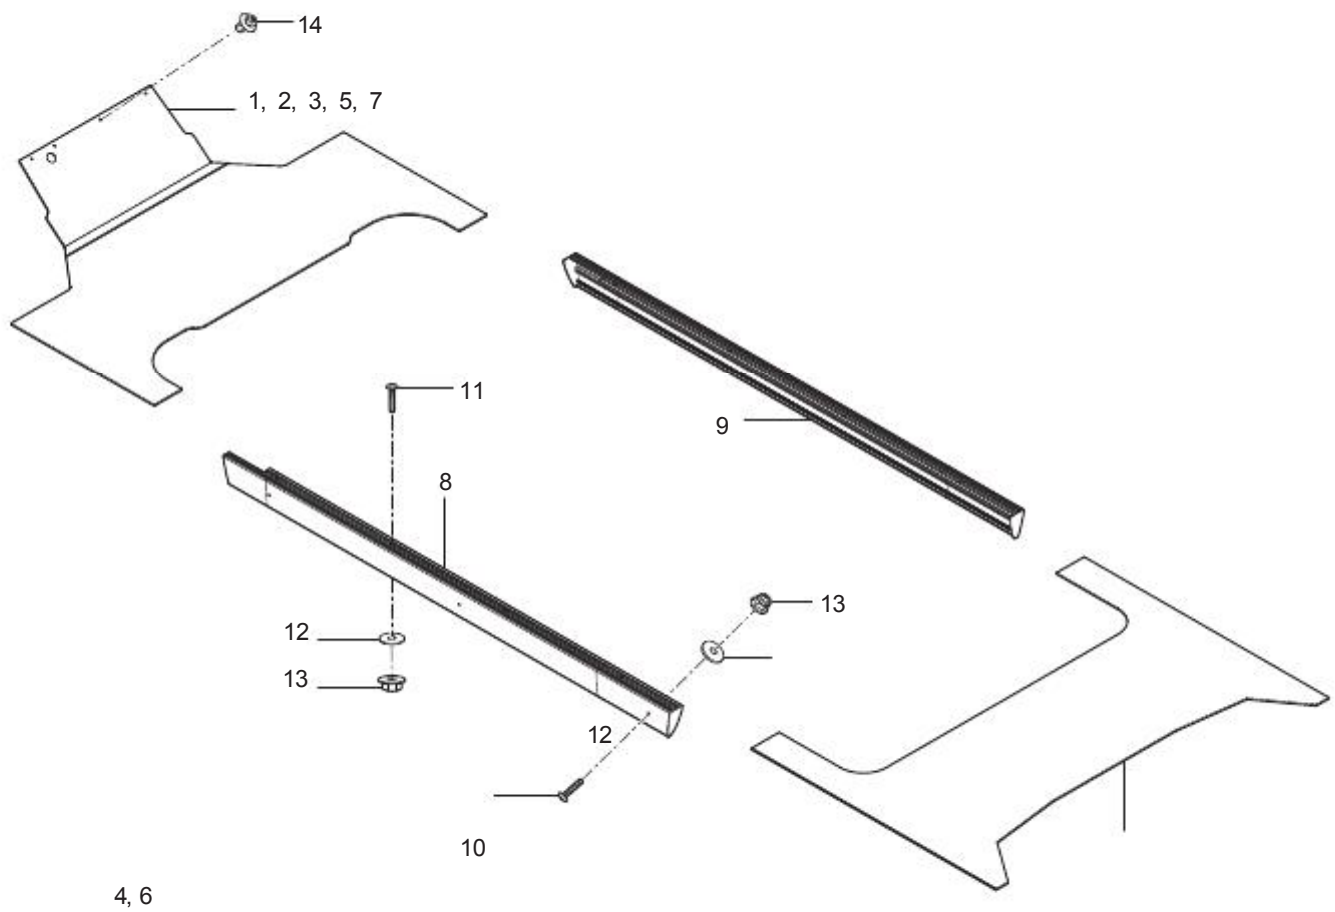

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	매트 NO.1-프런트(S.T.D) MAT NO.1-FRT.(S.T.D)	63111-C5100e						
2 (201012 -)	매트 NO.1-프런트(A.G.V) MAT NO.1-FRT.(A.G.V)	63111-C5200b						
3 (201012 -)	플로어 매트 NO.1-프런트.S.T.D FLOOR MAT NO.1-FRT. S.T.D	63121-C2000						
4 (201012 -)	매트 MAT NO.2-리어 MAT NO.2-REAR	63112-C5100a						
5 (201012 -)	매트 NO.1, 프런트 MAT NO.1, FRT	63121-N5040a						
6 (201012 -)	매트 NO.2, 리어 MAT NO.2, REAR	63122-N5040						
7 (201012 -)	매트 NO.1, 프런트 MAT NO.1, FRT	63121-N2040						
8 (201012 -)	사이드 실 NO.2 어셈블리-좌측 SIDE SILL NO.2 ASS'Y-L/H	63150-C2000a	1					
9 (201012 -)	사이드 실 NO.2 어셈블리-우측 SIDE SILL NO.2 ASS'Y-R/H	63160-C2000a	1				1	
10 (201012 -)	머신 스크류-트러스 헤드(SUS) M.SCREW-TRUSS HD(SUS)	H2208-0625S	6	6	6	6	6	
11 (201012 -)	머신 스크류-트러스 헤드(SUS) M.SCREW-TRUSS HD(SUS)	H2208-0620S	6	8	8	6	8	
12 (201012 -)	와셔-플레인(SUS) WASHER-PLANE (SUS)	H3510-0600S	12	14	14	12	14	
13 (201012 -)	너트-록(나일론), SUS NUT-LOCK(NYLON),SUS	H3262-0600S	12	14	14	12	14	
14 (201012 -)	화스너 FASTNER-M4xD6xL16	71791-C5100	4	4	4	4	4	

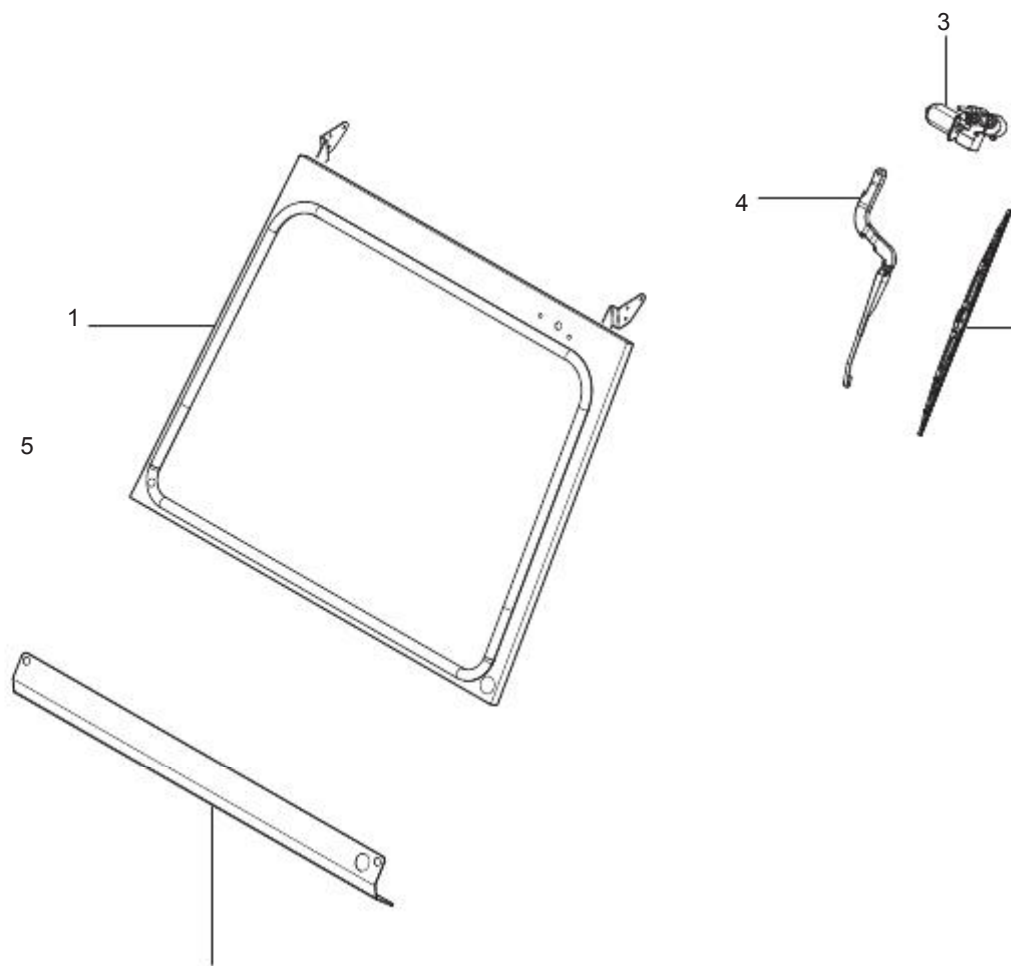


- 48 -

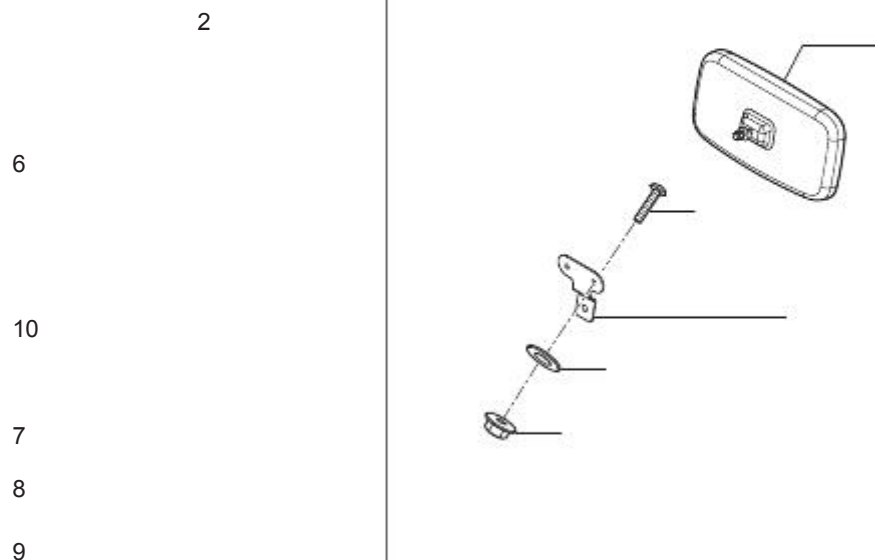


711. 윈드 쉴드 FIX / WINDSHIELD FIX

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	픽스드 윈드쉴드 어셈블리 FIXED WINDSHIELD ASS'Y	71120-N5040	e				1	1
2 (201012 -)	윈드쉴드 로워 WINDSHIELD LOWER	71161-N5040	a				1	
3 (201012 -)	와이퍼 모터 WIPER MOTOR	99100-E2000	a					1
4 (201012 -)	와이퍼 암, RHD WIPER ARM, RHD	71107-N5040						1
5 (201012 -)	와이퍼 블레이드 어셈블리(22") WIPER BLADE ASS'Y (22")	71109-N5040					1	1
6 (201012 -)	룸 미러 ROOM MIRROR	75100-C5100			1	1	1	1
7 (201012 -)	서포트 - 룸 미러 SUPPORT - ROOM MIRROR	71124-C5100	c		1	1	1	1
8 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3502-0600S			2	2	2	2
9 (201012 -)	캡 너트 CAP NUT-LOCK(NYLON)	H3269-0600S		2	2	2	2	2
10 (201012 -)	머신 스크류 M.SCREW - PAN HEAD	H2230-0635S			2	2	2	2
	2							

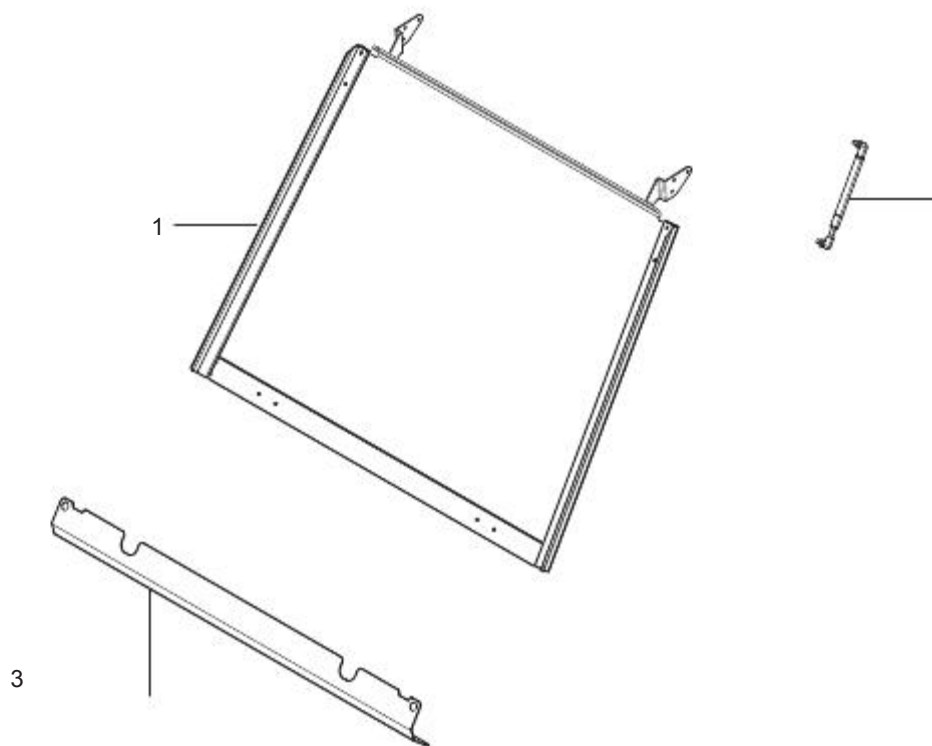

- 50 -

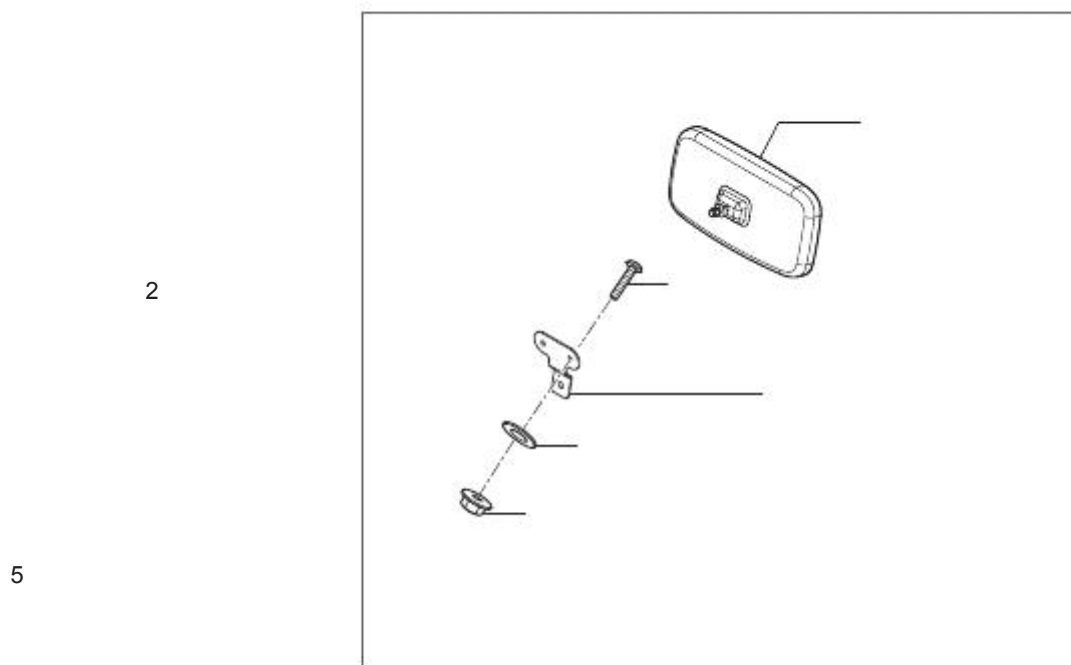


5

4

6


7

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	틸트 윈드쉴드 어셈블리 TILT WINDSHIELD ASS'Y	71210	C5112f	1	1			
2 (201012 -)	윈드쉴드 - 로워 WINDSHIELD-LOWER	71261	C5112c	1	1			
3 (201012 -)	가스 스프링 어셈블리 GAS SPRING ASS'Y	71270	C5112	2	2			
4 (201012 -)	머신 스크류 - 팬 헤드(SUS) M.SCREW-PAN HEAD (SUS)	H2230	0625S	2	2	2		
5 (201012 -)	룸 미러 ROOM MIRROR	75100	C5100	1	1			
6 (201012 -)	서포트 - 룸 미러 SUPPORT-ROOM MIRROR	71124	C5100C	1	1	1		
7 (201012 -)	와셔 - 플레인 (SUS) WASHER-PLAIN (SUS)	H3502	0600S	2	2			
8 (201012 -)	캡 너트 - 록(나일론), SUS CAP NUT-LOCK(NYLON),SUS	H3269	0600S	2	2	2		

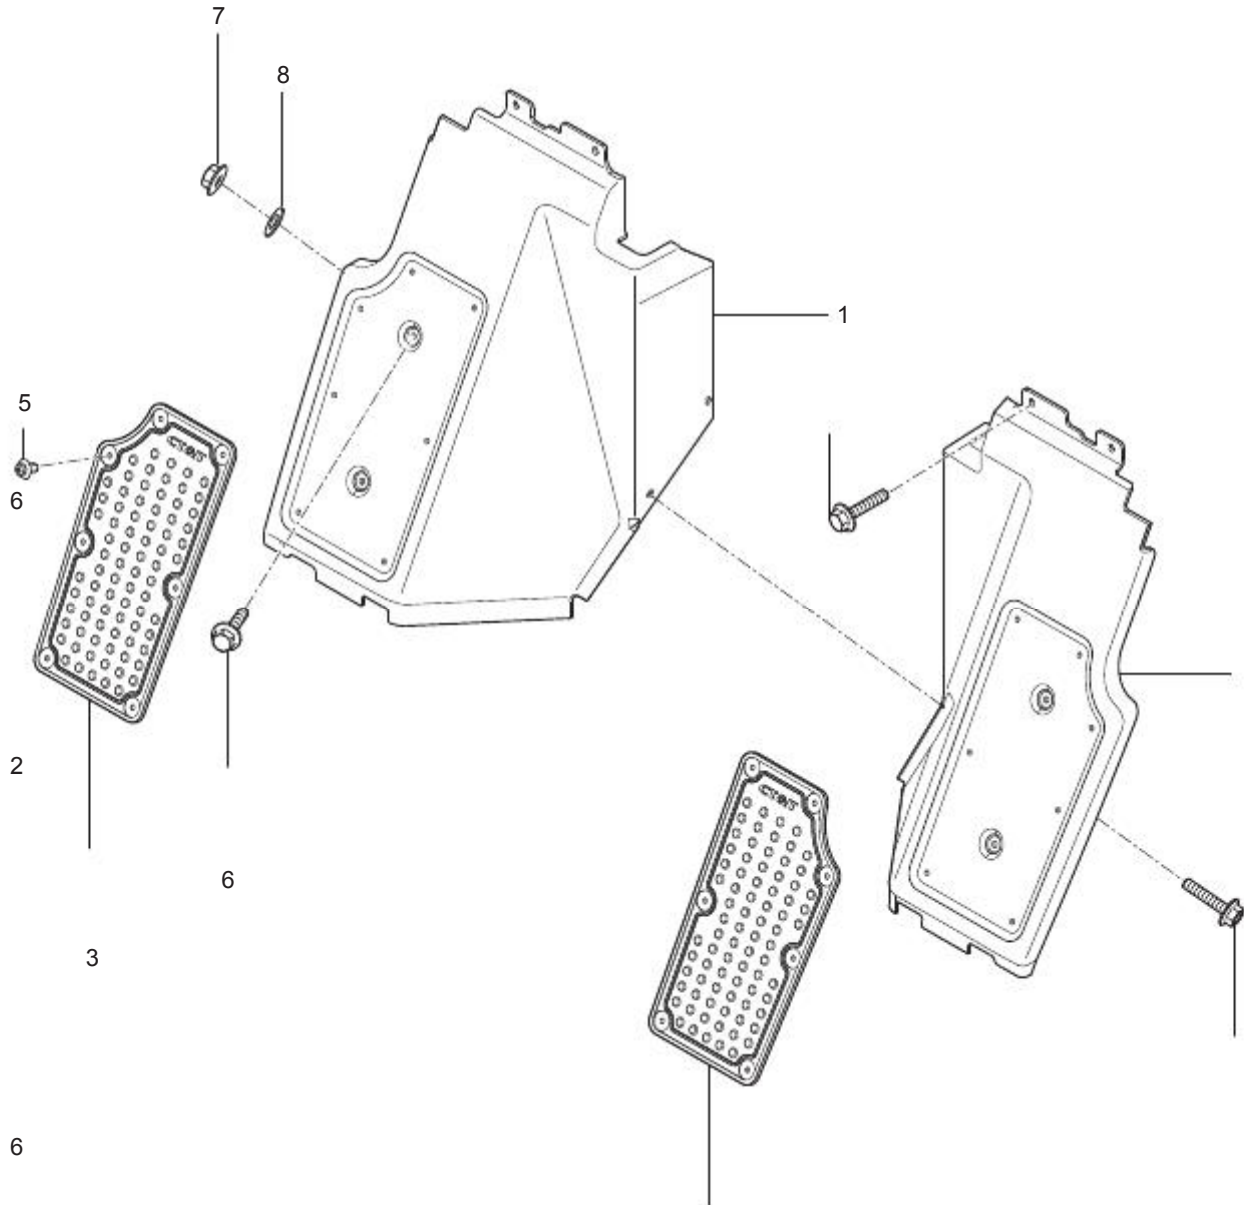


713. 대쉬 사이드 / DASH SIDE

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	대쉬 사이드-좌측 DASH SIDE-L/H		71311-C5100g		1	1	1	1
2 (201012 -)	대쉬 사이드-우측 DASH SIDE-R/H		71312-C5100g		1	1	1	1
3 (201012 -)	매트-대쉬 사이드, 좌측 MAT-DASH SIDE, L/H	71313-C5100			1	1	1	1
4 (201012 -)	매트-대쉬 사이드, 우측 MAT-DASH SIDE, R/H	71314-C5100			1	1	1	1
5 (201012 -)	화스너 FASTENER-M4(L13)	63191-C5100			16	16	16	16
6 (201012 -)	볼트 BOLT-HEX HD(+),SEM'S(S+P),PC	H1244-0620Y		10	10	10	10	
7 (201012 -)	너트 NUT-HEX HEAD	H3105-0800Y			2	2	2	2
8 (201012 -)	플레인 와셔 PLANE WASHER	H3508-0600S			2	2	2	2
	2							

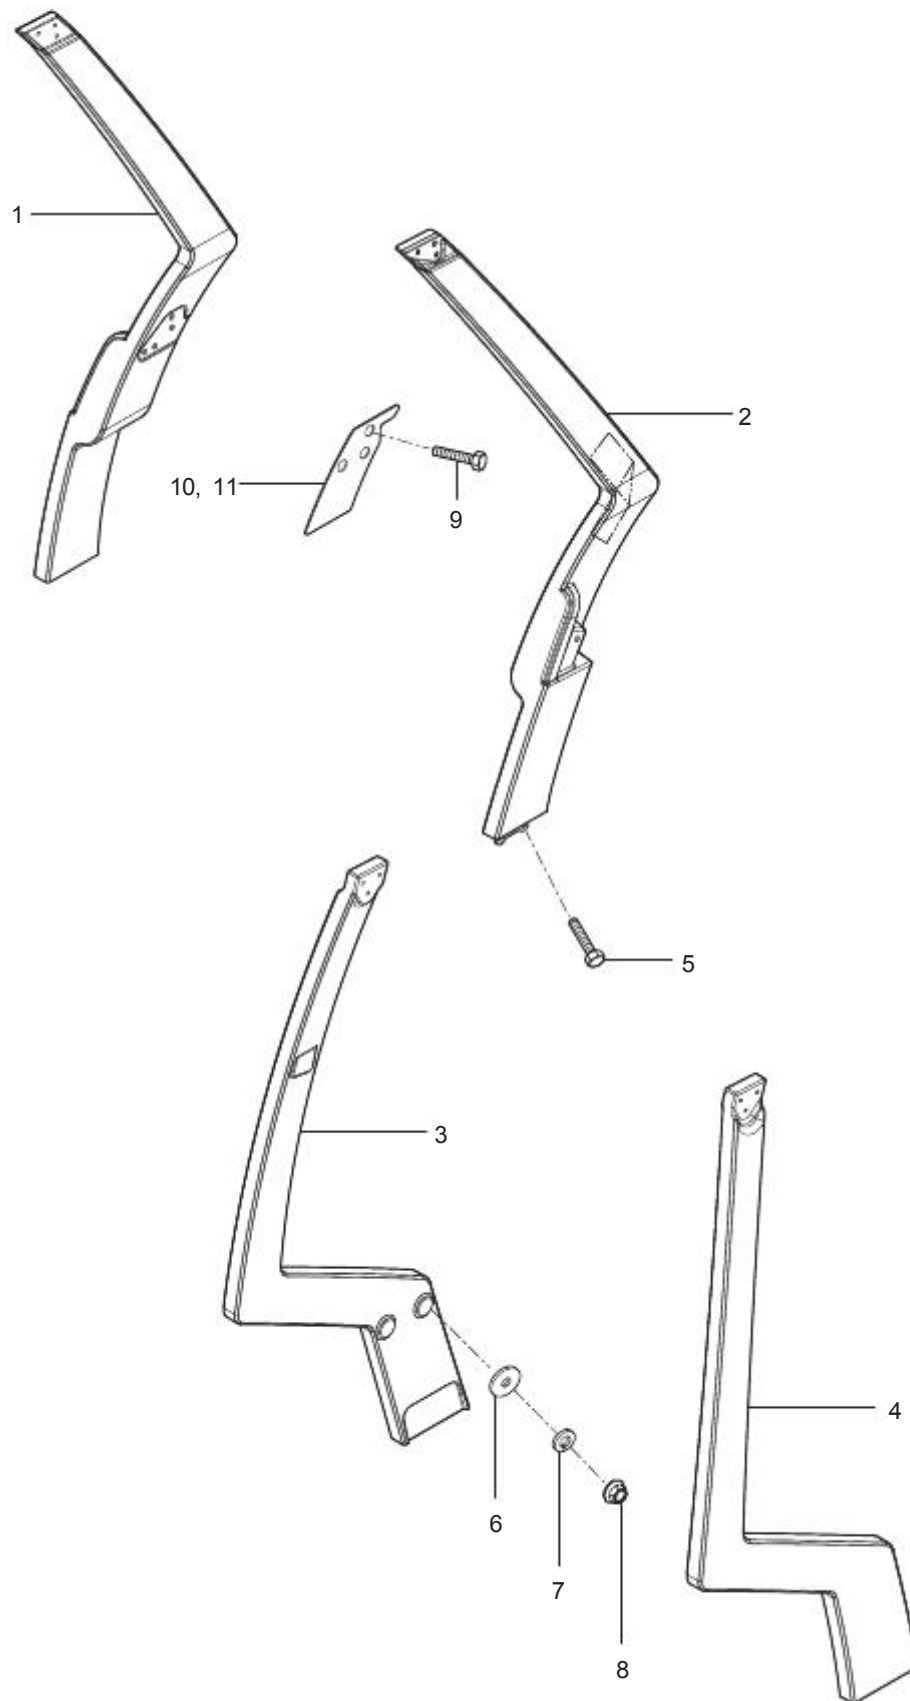


714. 필라 / PILLAR

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	프런트 필라 어셈블리 - 좌측 FRONT PILLAR ASS'Y-L/H	71410-C5110d	1	1	1	1	1	1
2 (201012 -)	프런트 필라 어셈블리 - 우측 FRONT PILLAR ASS'Y-R/H	71440-C5110d	1	1	1	1	1	1
3 (201012 -)	리어 필라 어셈블리 - 좌측 REAR PILLAR ASS'Y-L/H	71450-C5116b			1	1		
		71450-C5100c	1				1	
4 (201012 -)	리어 필라 어셈블리 - 우측 REAR PILLAR ASS'Y-R/H	71480-C5116b			1	1		
		71480-C5100c	1				1	
5 (201012 -)	볼트 BOLT-HEX HD, SEM'S(S+P), PC	H1255-0830Y	4	4	4	4	4	4
6 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3510-0800Y	8	8	8	8	8	8
7 (201012 -)	와셔 - 스프링 WASHER-SPRING	H3603-0800Y	8	8	8	8	8	8
8 (201012 -)	너트 NUT-HEX HD	H3103-0800Y	8	8	8	8	8	8
9 (201012 -)	볼트 BOLT-HEX HD(+), SEM'S(S+P), PC	H1244-0620Y	2	2	2	2	2	2
10 (201012 -)	패드 - 프런트 필라, 좌측 PAD - FRT PILLAR - LH	71491-C5116	1	1	1	1	1	1
11 (201012 -)	패드 - 프런트 필라, 우측 PAD - FRT PILLAR - RH	71492-C5116	1	1	1	1	1	1

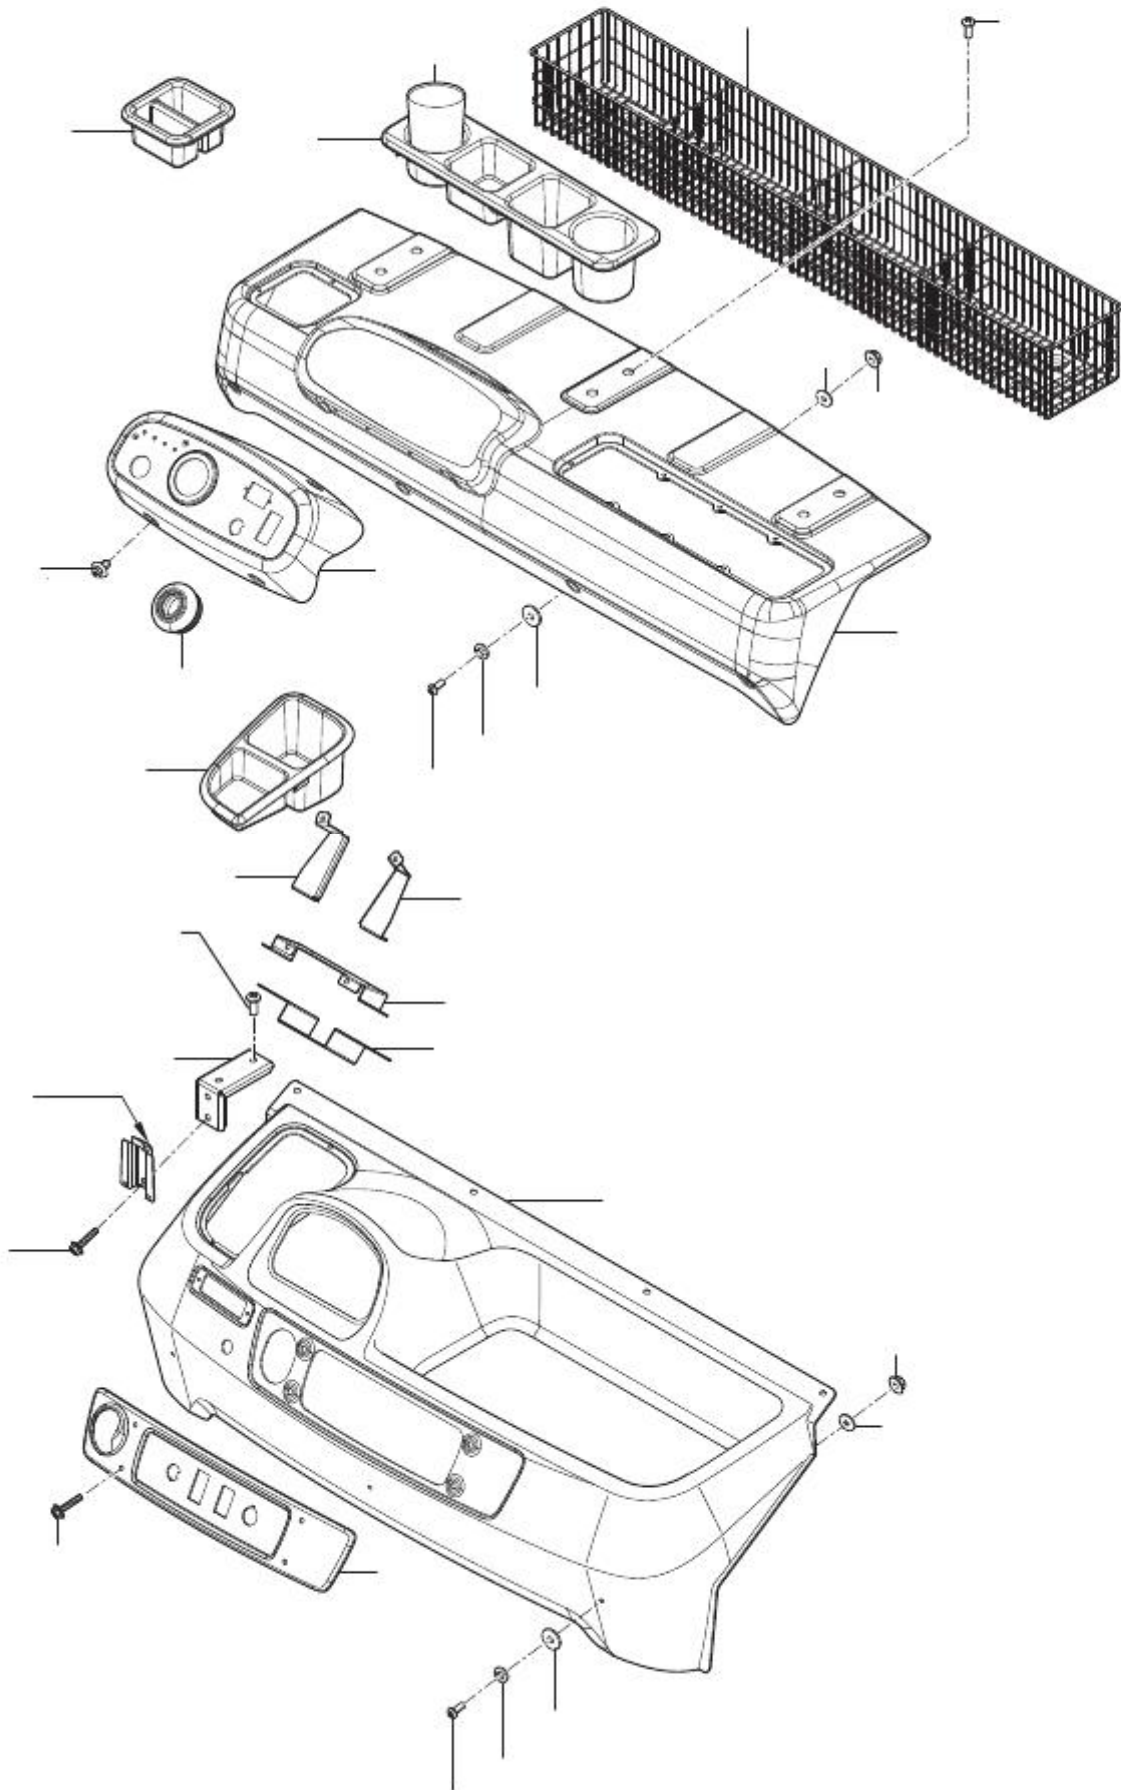


715. 크러쉬 패드 / CRASH PAD

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	크러쉬 패드 CRASH PAD		71511-C5100c			1		
2 (201012 -)	크러쉬 패드, NEV CRASH PAD, NEV		71511-N5040b					1
3 (201012 -)	크러쉬 패드, NEV(T/W 적용) CRASH PAD, NEV (T/W 적용)	71511-N5042					1	1
4 (201012 -)	컵 홀더 - 좌측 CUP HOLDER-L/H	71513-C5100			1	1		
5 (201012 -)	컵 홀더 - 우측 CUP HOLDER-R/H	71514-C5130a			1			
6 (201012 -)	포켓 - 크러쉬 패드, 좌측 POCKET-CRASH PAD, LH	71513-N5040a					1	1
7 (201012 -)	컬럼 커버 - STD COLUMN COVER-STD	71521-C5100a			1			
8 (201012 -)	컬럼 커버 - AGV COLUMN COVER-AGV	71521-C5200c						
9 (201012 -)	컬럼 커버, NEV COLUMN COVER, NEV	71521-N5040a					1	
10 (201012 -)	프런트 바스켓 어셈블리 FRONT BASKET ASS'Y	75800-C5110			1			
11 (201012 -)	머신 스크류 M. SCREW - PAN HEAD (SUS)	H2230-0620S		4	4	4	3	3
12 (201012 -)	와셔 - 플레인(M6) -SUS WASHER-PLAIN (M6) -SUS	H3502-0600S		4	4	4	3	3
13 (201012 -)	와셔 - 플레인 (M6) - PVC WASHER-PLAIN (M6) -PVC	H3510-0600R		4	4	4	3	3
14 (201012 -)	너트 - 록(나일론) NUT-LOCK (NYLON)	H3264-0600Y		4	4	4	3	
15 (201012 -)	그로멧- 컬럼 커버 GROMMET-COLUMN COVER	71551-C5100a		1	1			
16 (201012 -)	머신 스크류 M.SCREW-PAN HD, SEM'S (S+P),PC	H3264-0820S		4	4	4		
17 (201012 -)	바스켓 NO.1 - 클러스터 BRKT NO.1 - CLUSTER	71561-N5040b					1	
18 (201012 -)	바스켓 NO.2 - 클러스터 BRKT NO.2 - CLUSTER	71562-N5040					1	
19 (201012 -)	바스켓 - 와셔 탱크 BRKT - WASHER TANK	71571-N5040					1	
20 (201012 -)	바스켓 NO.4 - 클러스터, 좌측 BRKT NO.4 - CLUSTER, LH	65574-E2000b					1	1
21 (201012 -)	바스켓 NO.4 - 클러스터, 우측 BRKT NO.4 - CLUSTER, RH	65575-E2000b					1	1
22 (201012 -)	머신 스크류 - 트러스 헤드 M.SCREW-TRUSS HD	H2208-0525s					7	
23 (201012 -)	볼트 BOLT(+) 홈-HX HD, SEM'S(S+P),PC	H1243-0616Y					6	6
24 (201012 -)	머신 스크류 M.SCREW-PAN HD, SEM'S(S+P),PC	H3264-0820S					2	2
25 (201012 -)	화스너 FASTENER	71791-C5100			4			
26 (201012 -)	어시스트 트레이 (원형) ASHTRAY	86611-C5100			1			

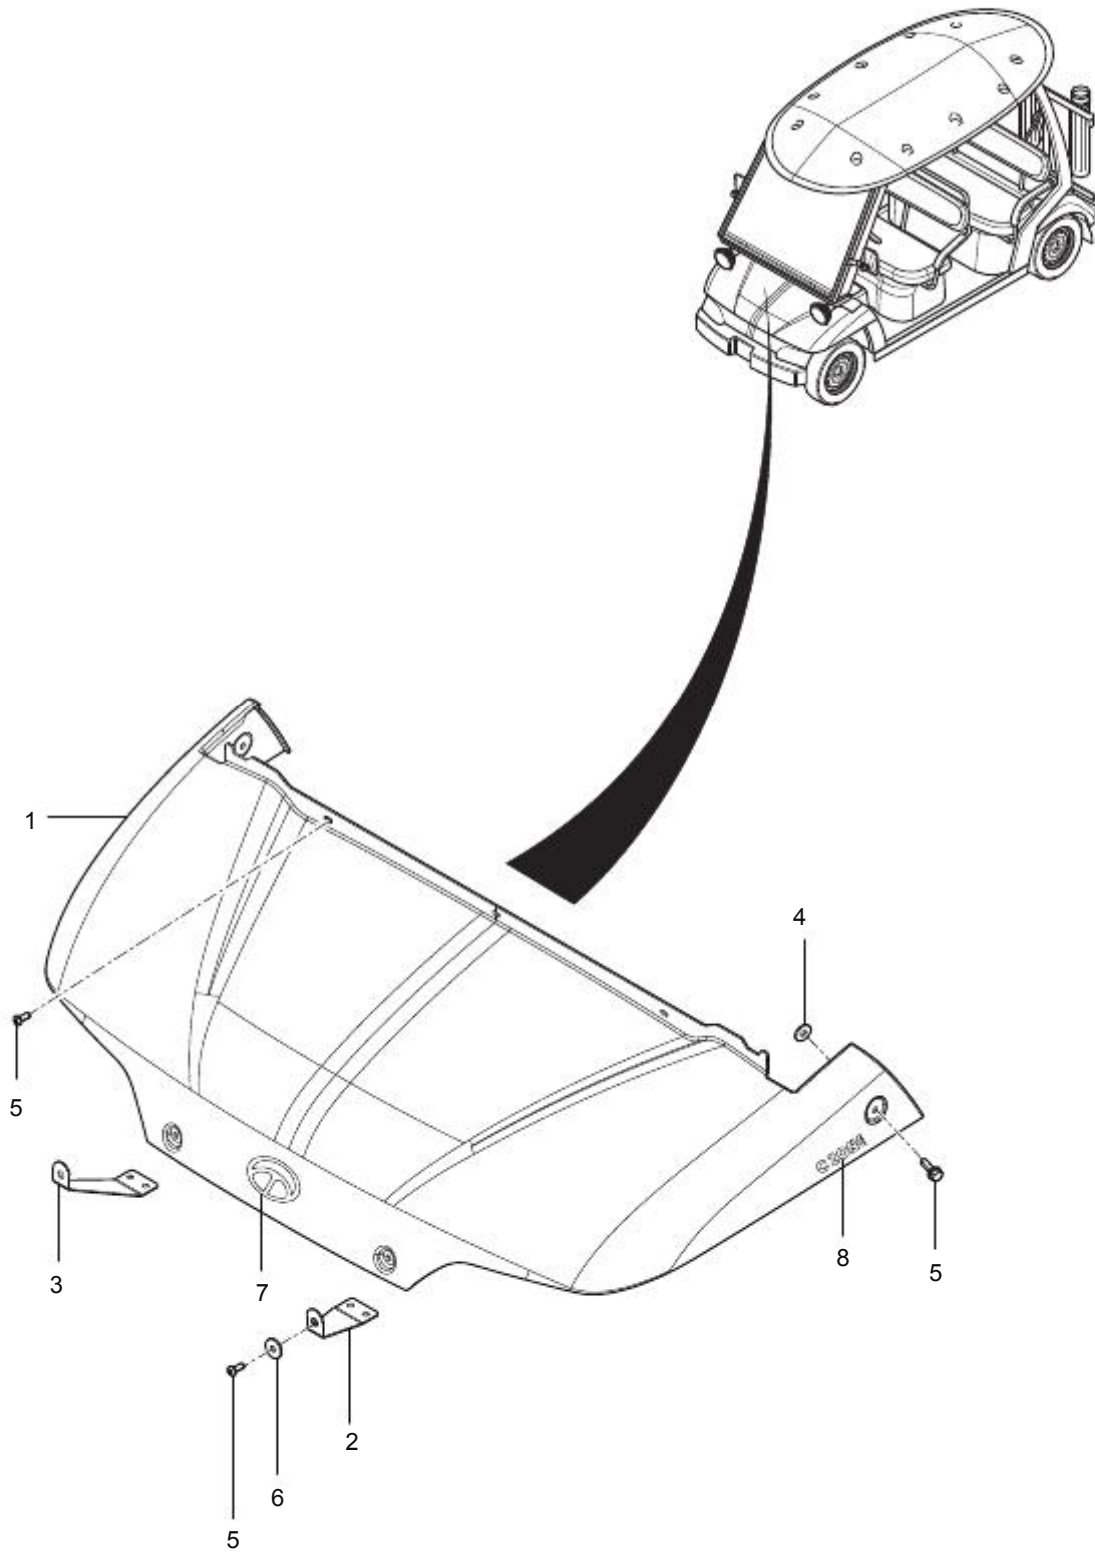


716. 프런트 후드 / FRONT HOOD

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	프런트 후드 FRONT HOOD		71611	C5100d	1	1	1	1
2 (201012 -)	서포트-프런트 후드, 좌측 SUPPORT-FRT HOOD, L/H	71623	C5100a	1	1	1	1	1
3 (201012 -)	서포트-프런트 후드, 우측 SUPPORT-FRT HOOD, R/H	71625	C5100a	1	1	1	1	1
4 (201012 -)	와셔-나일론 WASHER-NYLON	72187	C5100		2	2	2	2
5 (201012 -)	머신 스크류 M.SCREW-PAN HD, SEM'S(S+P), PC	H2342-0820S 2	2	2		2	2	
		H2342-0635S 2	2	2		2	2	
		H2342-0625S 3	3	3		3	3	
6 (201012 -)	와셔 - 플레인 WASHER - PLAIN (URETHANE)	H3510-0800R		2	2	2	2	2
7 (201012 -)	엠블렘 - 마크 EMBLEM - MARK	05111	C5100		1	1	1	1
8 (201012 -)	레터링 LETTERING (C-ZONE)	05112	C5100		1	1	1	1
	1							

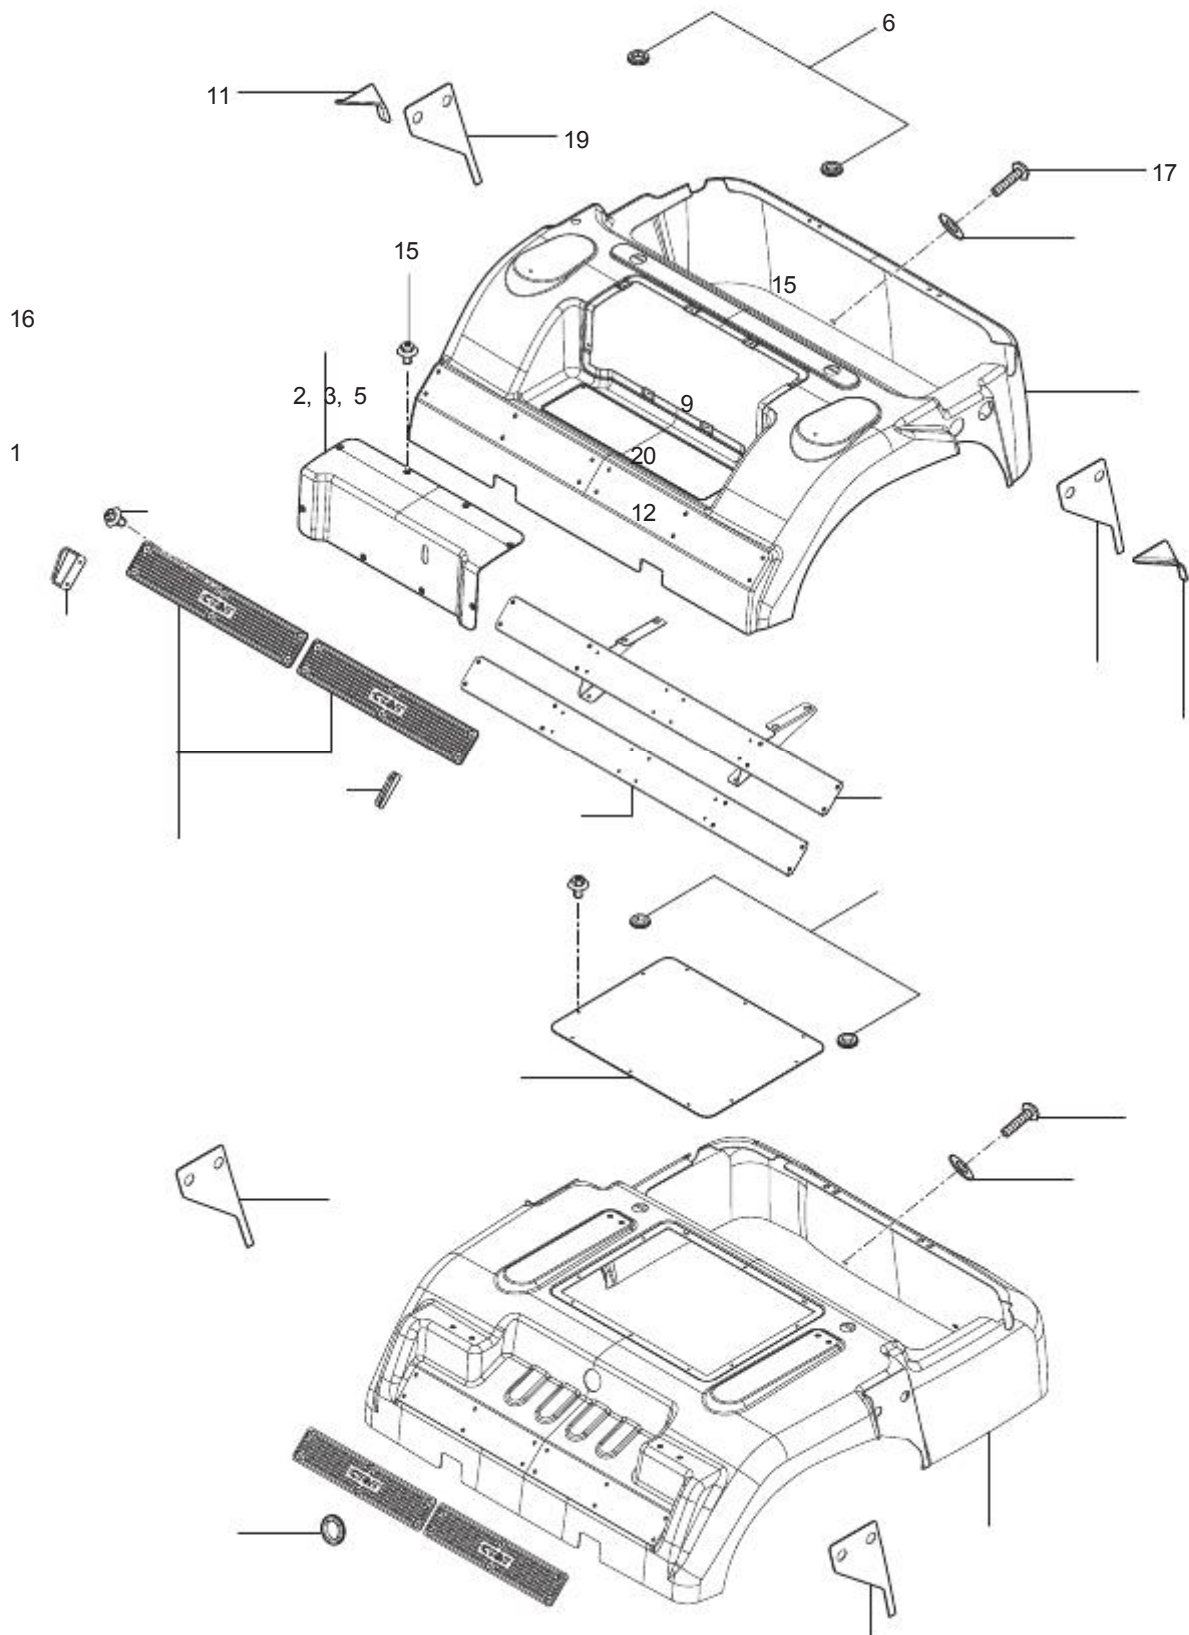



717. 리어 캡 / REAR CAB

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어 캡 REAR CAB	71711-C5106j		1		1		
		71711-C5050a		1		1		
		71711-U5006f		1		1		
		71711-U5010a						
		71711-N5043a						
		71711-N5044						
		71711-C2000d	1					
		71711-U2030d	1					
		71711-C2050a	1					
		71711-N2043a						
2 (201012 -)	서비스 커버 -모터 SERVICE COVER-MOTOR	71713-C5100a				1	1	
3 (201012 -)	서비스 커버 - 5 백 SERVICE COVER-5 BAG	71713-C5120a				1		
4 (201012 -)	서비스 커버 - 모터 SERVICE COVER-MOTOR	71713-C2000b						
5 (201012 -)	서비스 커버 SURVICE COVER	71713-C5050						
6 (201012 -)	그로멧 - 리어 캡 GROMMET-REAR CAB	71716-C5100		2	2	2	4	
7 (201012 -)	그로멧 GROMMET-Φ60	71717-C2000		1				
8 (201012 -)	패드 - 리어 캡, 스테이 PAD-REAR CAB, STAY	71725-C5106b		1		1		
		71725-C5100b						
9 (201012 -)	스톱퍼 어셈블리 - 골프 백, 좌측 STOPPER ASS'Y-GOLF BAG, L/H	71730-C2001b		1	1	1		
10 (201012 -)	스톱퍼 어셈블리 - 골프 백, 우측 STOPPER ASS'Y-GOLF BAG, R/H	71740-C2001b		1	1	1		
11 (201012 -)	패드 NO.2 - 리어 캡 사이드, 좌측 PAD NO.2-REAR CAB SIDE, L/H	71753-C5106			1	1		1
12 (201012 -)	패드 NO.2 - 리어 캡 사이드, 우측 PAD NO.2-REAR CAB SIDE, R/H	71754-C5106			1	1		1
13 (201012 -)	패드 - 리어 캡 사이드, 좌측 PAD-REAR CAB SIDE, L/H	71751-C2000		1				
14 (201012 -)	패드 - 리어 캡 사이드, 우측 PAD-REAR CAB SIDE, R/H	71752-C2000		1				
15 (201012 -)	화스너 FASTENER- M4xD6xL18	71791-C5100		18	12	12	10	8
16 (201012 -)	와셔 - 플레인(우레탄) WASHER-PLANE(URETHANE)	H3510-0600R		2	2	2	2	2
17 (201012 -)	머신 스크류 M.SCREW-PAN HD, SEM'S(S+P),PC	H2342-0620S		2	2	2	2	2
18 (201012 -)	스테이 어셈블리 - 골프 백 (6P) STAY ASS'Y - GOLF BAG (6P)	71720-C5106b						
19 (201012 -)	패드 NO.1 - 리어 캡 사이드, 좌측 PAD NO.1-REAR CAB SIDE, L/H	71751-C5106				1		

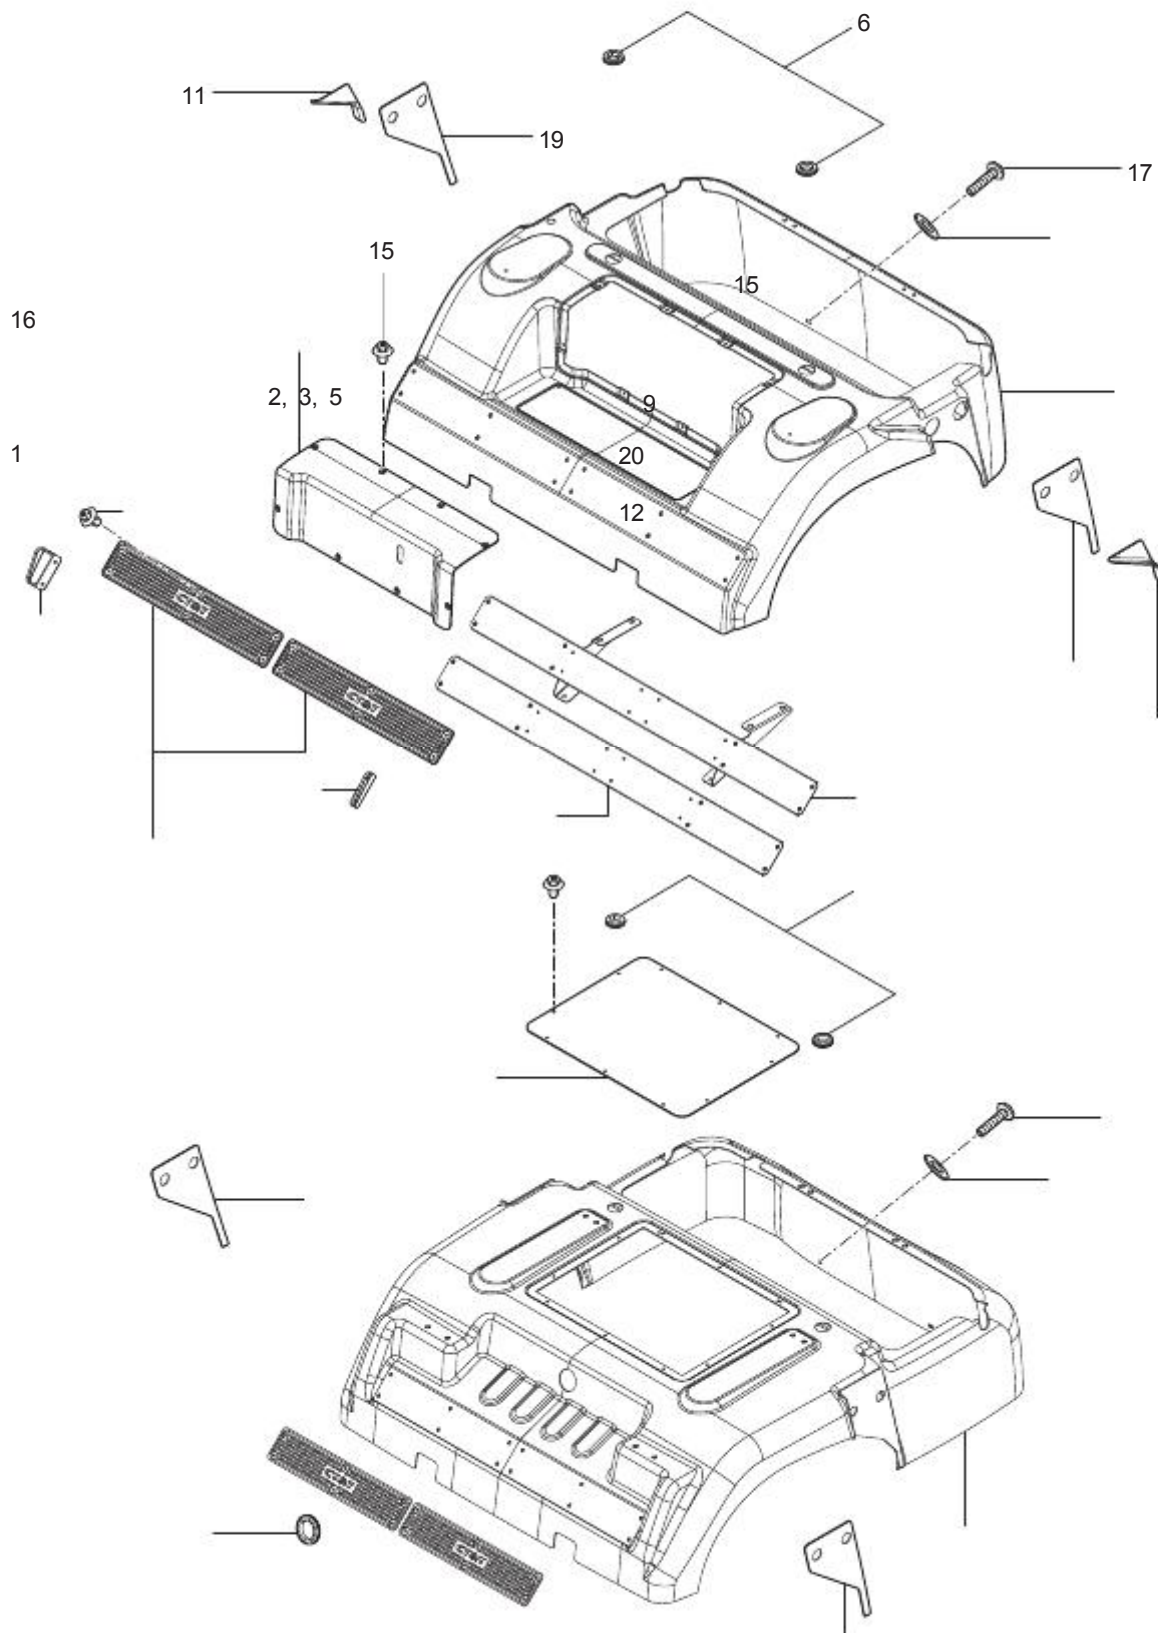


717. 리어 캡 / REAR CAB

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
20 (201012 -)	패드 NO.1 - 리어 캡 사이드, 우측 PAD NO.1-REAR CAB SIDE, R/H	71752	C5106			1		
21 (201012 -)	매트 - 골프 백 프로텍터 (5GB) MAT - GOLF BAG PROTECTOR (5GB)	71715	C5100		2	2		

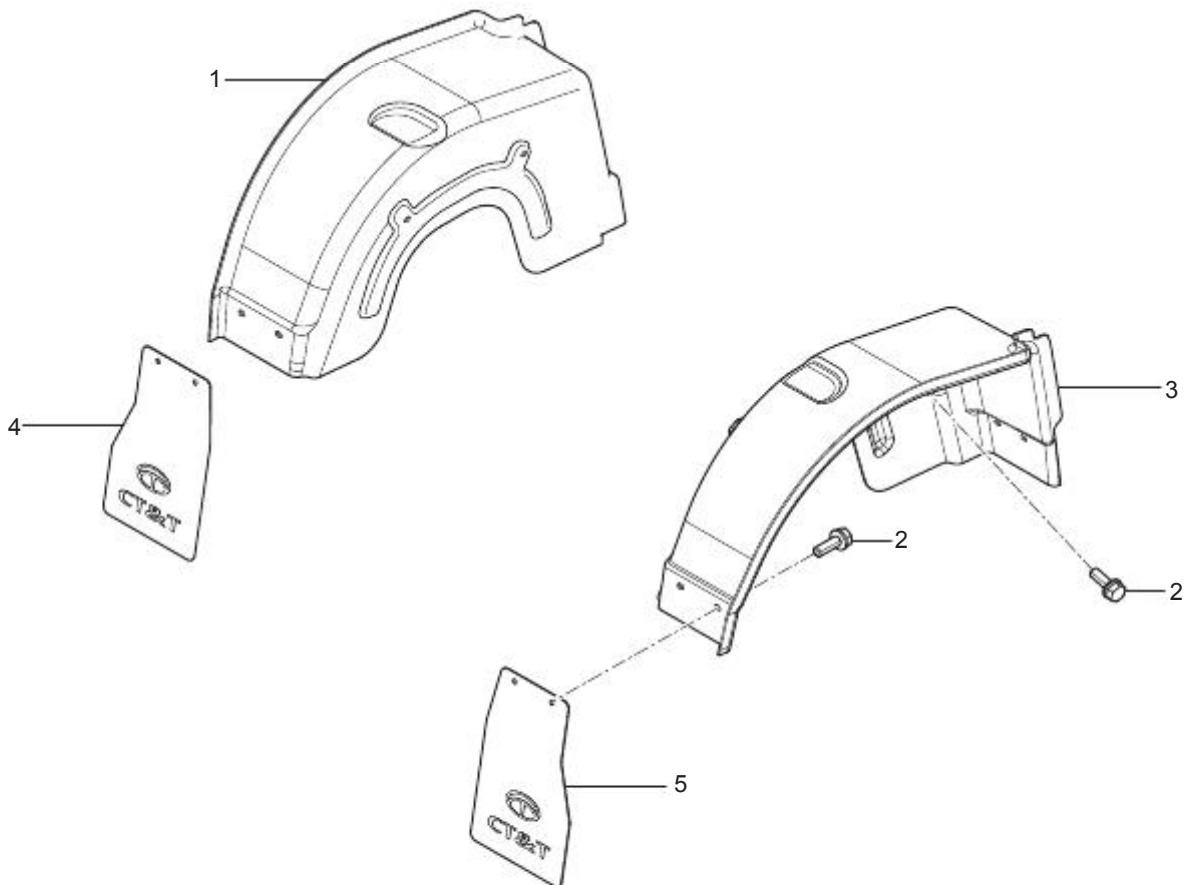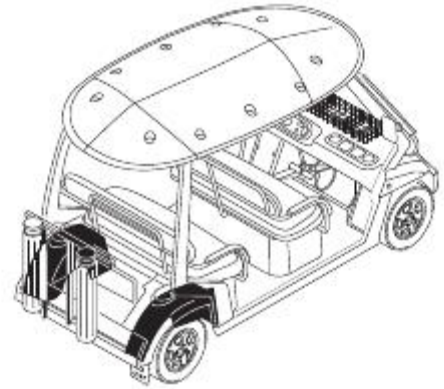


718. 리어 휠 하우스 / REAR WHEEL HOUSE

[illegible]

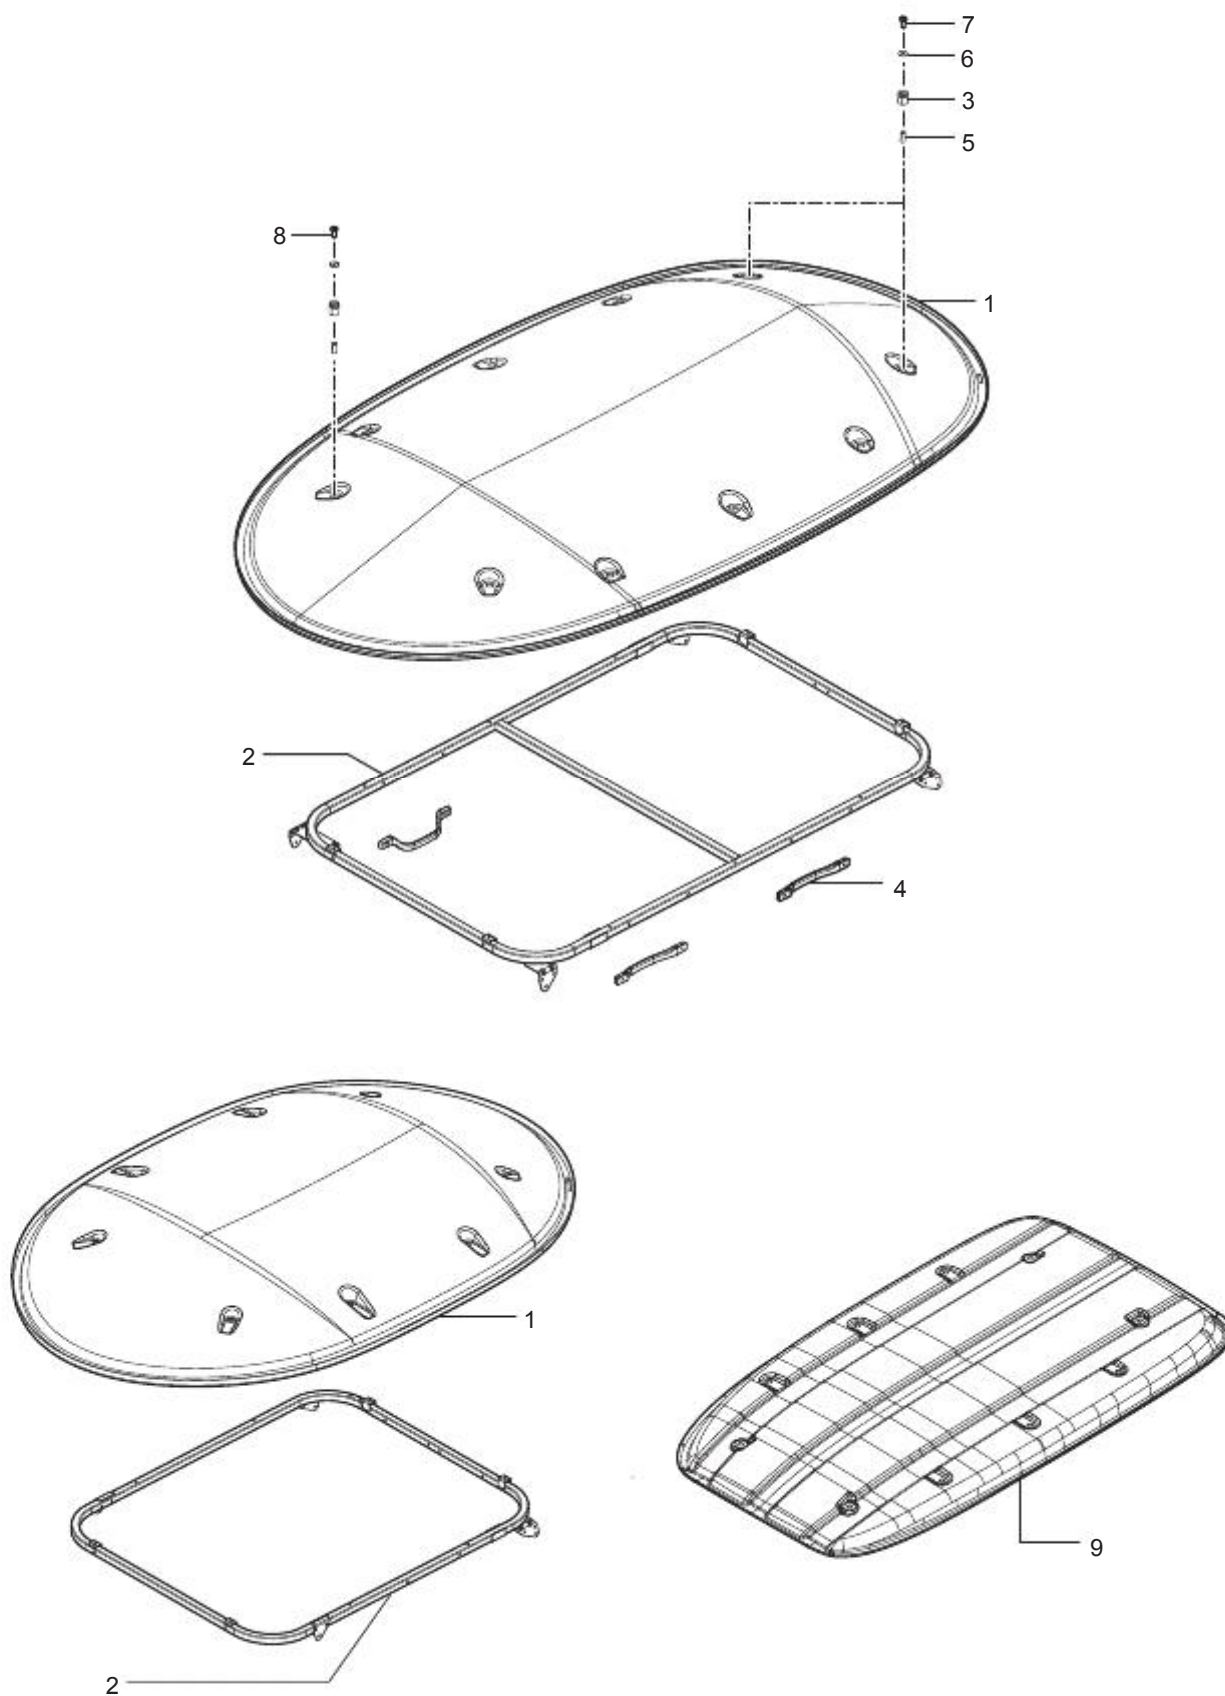


719. 루프 / ROOF

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	루프 ROOF	71911-C5100a 1			1	1		
		71911-C2000a	1					
		71911-C2040a	1					
		71911-N2000a 1						
2 (201012 -)	루프 프레임 어셈블리 ROOF FRAME ASS'Y	71920-C5116J 루프 1		1		1		1 6인승
		71920-C2000G 2인승	1					
		71920-N2000D 루프 2					1	2인승
3 (201012 -)	쿠션 러버 CUSHION RUBBER		71931-C5100		5	10	10	5 10
4 (201012 -)	어시스트 그립 ASSIST GRIP		76220-C5110		1	3	3	1
5 (201012 -)	파이프 홀더 PIPE HOLDER		71942-C5100		8	10	10	8 10
6 (201012 -)	플레인 와셔 PLANE WASHER		71943-C5100		8	10	10	8 10
7 (201012 -)	볼트 BOLT-HEX HD.(SUS)		H1200-0675S	2	6	6	2	6
8 (201012 -)	볼트 BOLT-HEX HD.(SUS)		H1200-0680S	2	2	4	2	4
9 (201012 -)	루프 2 ROOF 2		71911-C5112A			1	1	

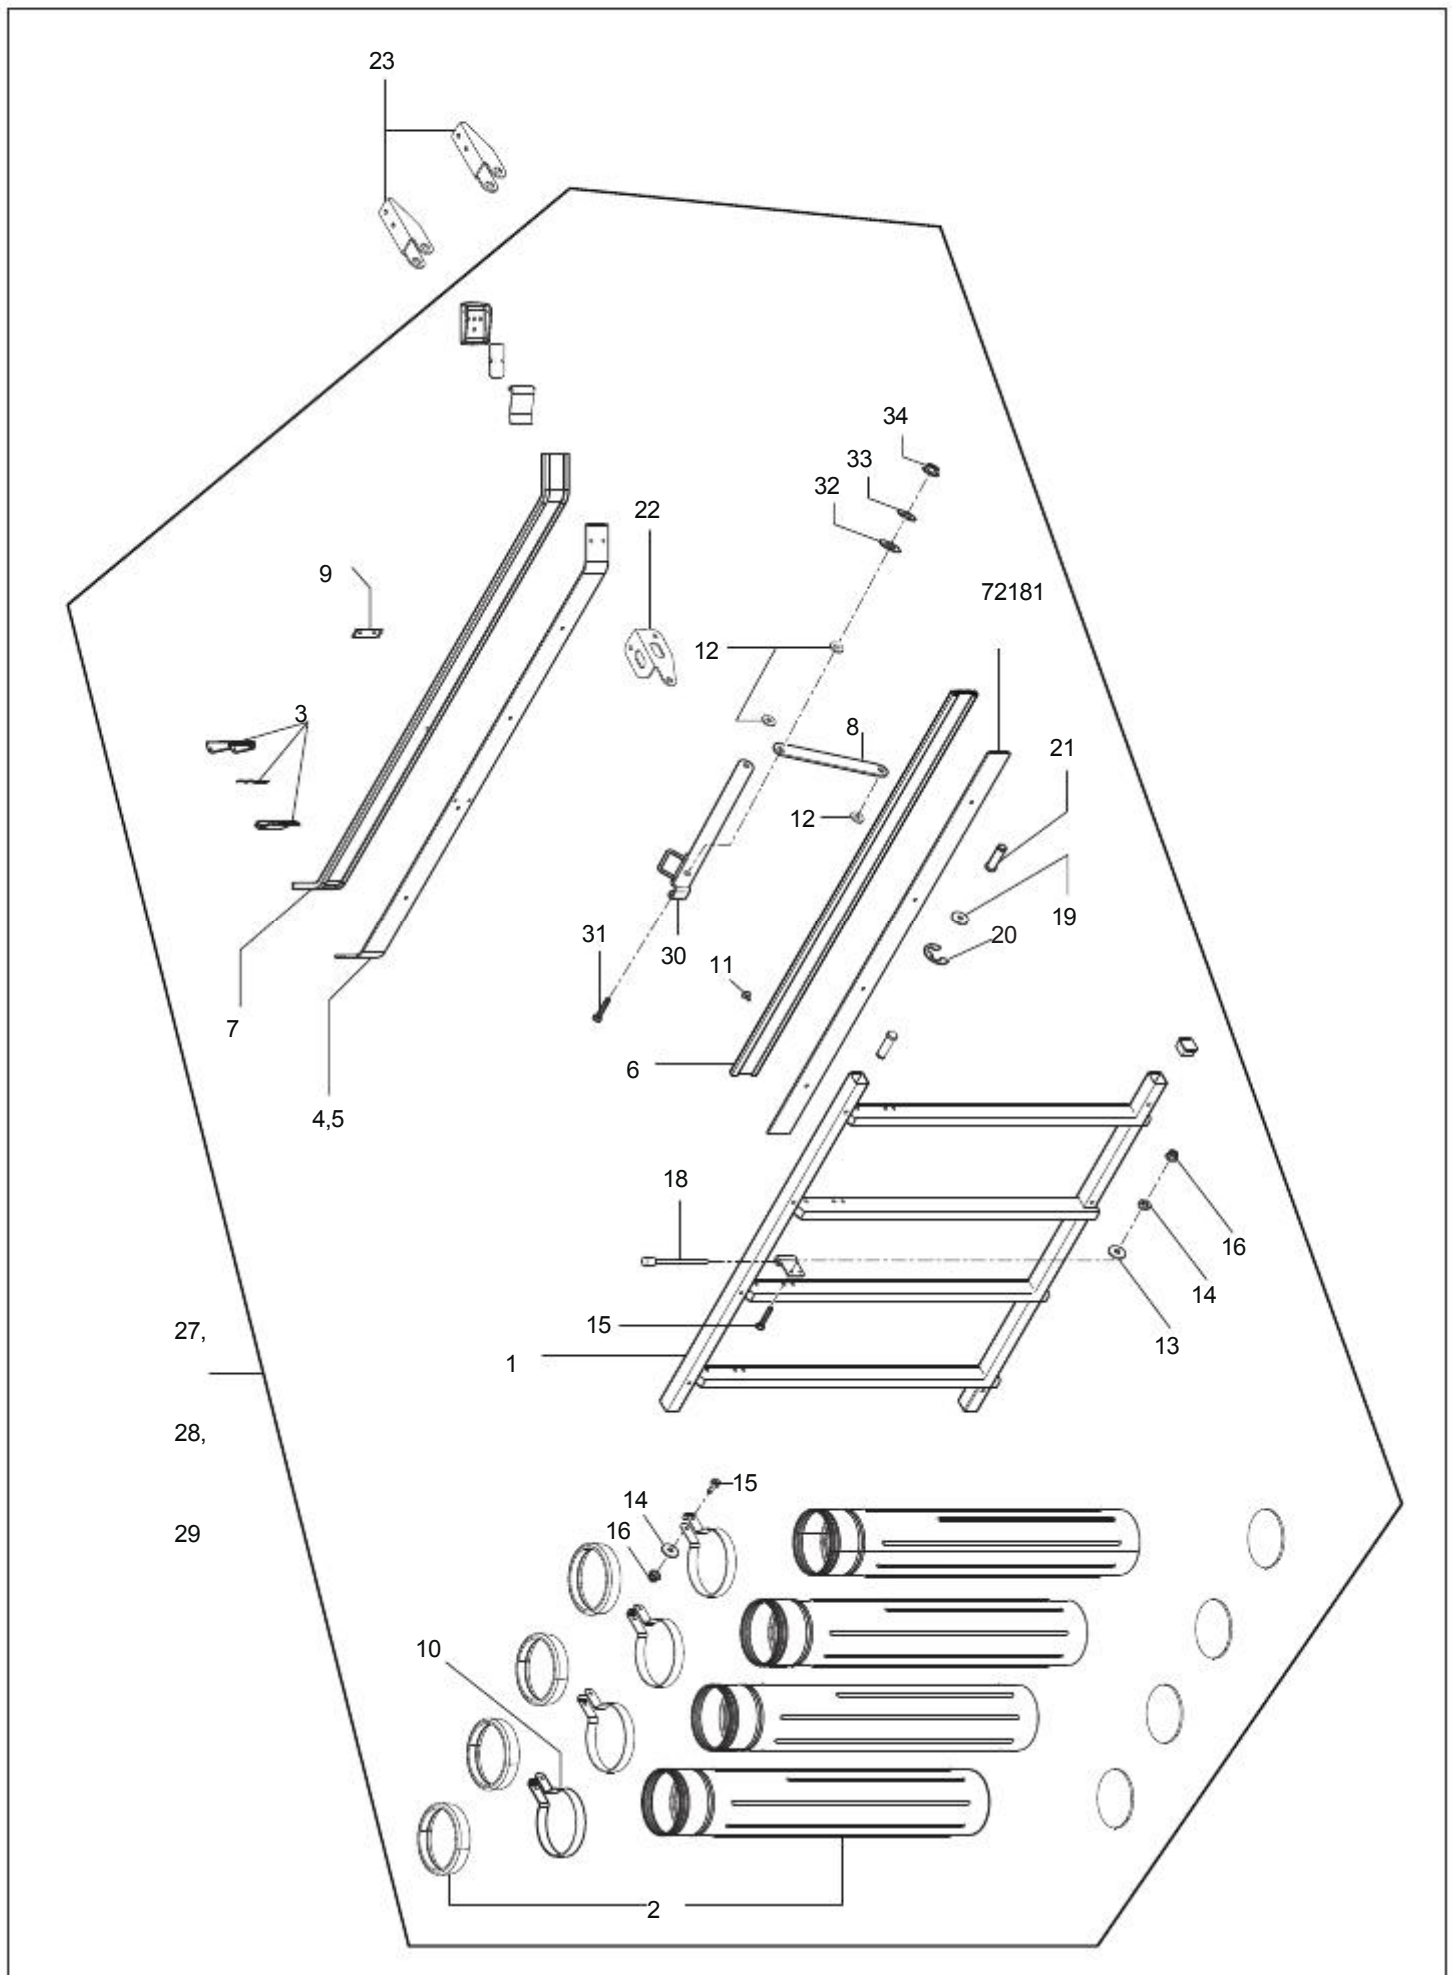


720. 골프 백 캐리어 / GOLF BAG CARRIER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	프레임 어셈블리 - 골프 백 캐리어 FRAME ASS'Y-G/B CARRIER	72110-C5100F			1	1		4B2P
		72110-C5153d 5B3P			1	1		
		72110-C5154d 5B4P			1	1		
		72110-C2000b	1					
2 (201012 -)	퍼터 케이스 어셈블리 PUTTER CASE ASS'Y	72140-C5100a			2	3		
3 (201012 -)	바uckle 어셈블리 BUCKLE ASS'Y	72170-C5100			2	2		
4 (201012 -)	어퍼 플레이트 - 골프 백 캐리어 UPPER PLATE-G/B CARRIER	72182-C5100a						
5 (201012 -)	어퍼 플레이트 UPPER PLATE	72182-C2001A						
6 (201012 -)	패드 - 로워 G.B.C PAD-LOWER G.B.C	72183-C5100b			1	1		
		72183-C2001a	1					
7 (201012 -)	패드 - 어퍼 G.B.C PAD-UPPER .G.B.C	72184-C5100a			1	1		
		72184-C2001	1					
8 (201012 -)	링크 - 리어 LINK-REAR	72186-C5100C			1	1		
		72186-C5100D			1	1		
		72186-C2000A	1					
9 (201012 -)	브라켓- 웨빙 BRACKET-WEBBING	72189-C5100a			2	2		
10 (201012 -)	브라켓 - 퍼터 케이스, 어퍼 BRACKET-PUTTER CASE, UPR.	72191-C5100b		2	3	3		
11 (201012 -)	스톱퍼 STOPPER	55165-C5100				1		
12 (201012 -)	와셔 - 나일론 WASHER-NYLON	72196-C5100			1	1		
13 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3508-0600S			2	2		
14 (201012 -)	와셔 - 스프링 WASHER-SPRING	H3602-0600S			2	2		
15 (201012 -)	볼트 BOLT-HEX. HD, M6x40	H1200-0640S			3	3		
16 (201012 -)	캡 너트 - 록(나일론) CAP NUT-LOCK(NYLON)	H3269-0800S			3	3		
17 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3510-0800S			3	3		
18 (201012 -)	록킹 핀 어셈블리 - G.B.C LOCKING PIN ASS'Y-G.B.C	72240-C2000a			1	1		
19 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3510-1600Y			4	4		
20 (201012 -)	스냅 링(E형) SNAP RING (E형)	H4611-1600Y			2	2		
21 (201012 -)	힌지 볼트 - 캐리어 링크 HINGE BOLT-CARRIER LINK	72185-C5154A	2		2	2		
22 (201012 -)	브라켓 - 글로브 박스 프레임 힌지 BRACKET-G/B FRAME HINGE	72213-C2000						

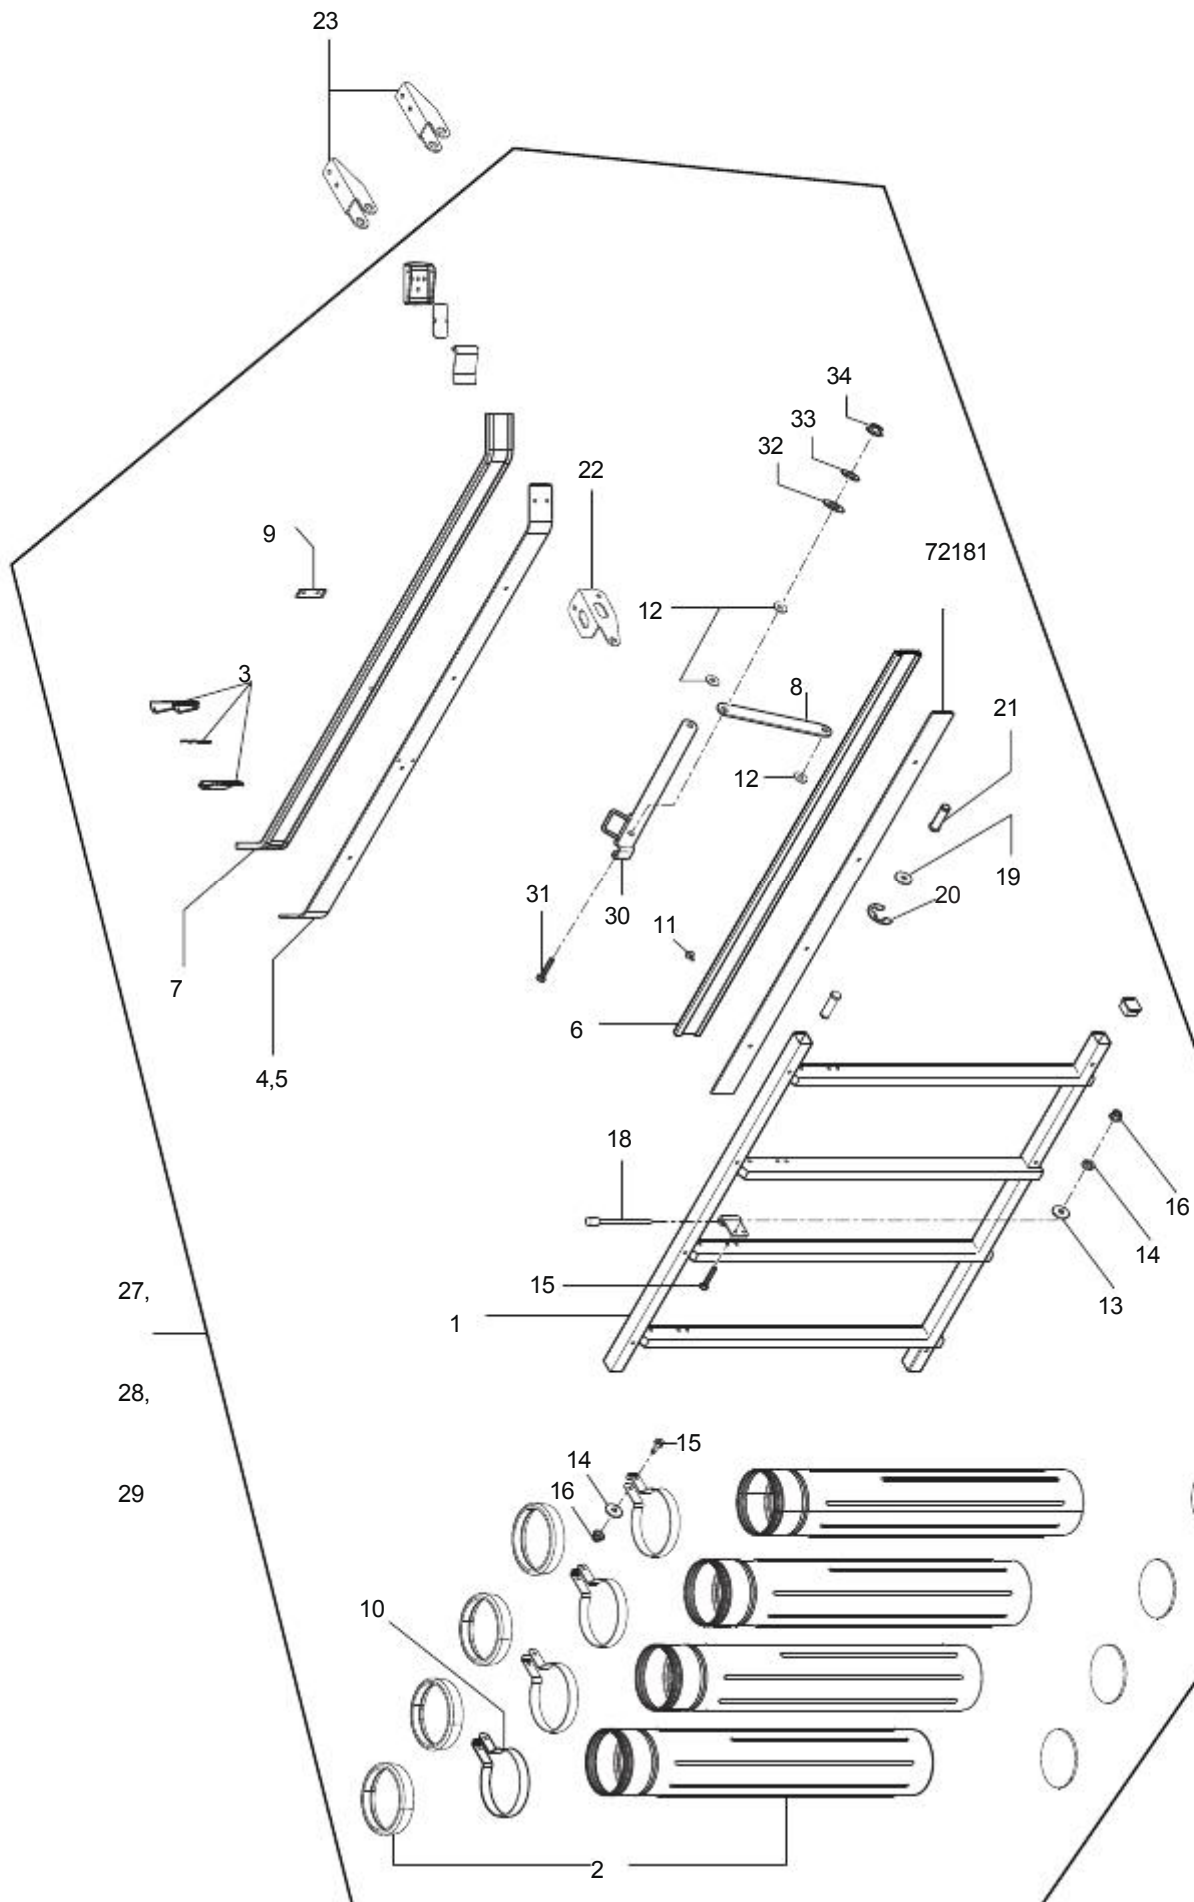


720. 골프 백 캐리어 / GOLF BAG CARRIER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
23 (201012 -)	브라켓 - 골프 백 프레임 힌지 BRACKET-G/B FRAME HINGE	72213-C2041						
24 (201012 -)	힌지 - 골프 백 캐리어 HINGE-G/B CARRRIER	72221-C5100a				1		
25 (201012 -)	와셔 - 스프링 WASHER-SPRING	H3602-0800S			3	3		
26 (201012 -)	와셔 - 나일론 WASHER-NYLON	72196-C5100			3	3		
27 (201012 -)	골프 백 캐리어 어셈블리 (4B2P) GBC ASS'Y (4B2P)	721A1-C5100						
28 (201012 -)	골프 백 캐리어 어셈블리 (5B3P) GBC ASS'Y (5B3P)	721A1-C5153				1		
29 (201012 -)	골프 백 캐리어 어셈블리 (5B4P) GBC ASS'Y (5B4P)	721A1-C5154				1		
30 (201012 -)	1 링크 - 프런트 LINK - FRT	72230-C5100B			1	1		
		72230-C2000	1					
31 (201012 -)	힌지 볼트 HINGE BOLT - CARRIER LINK	72180-C5154			3	3		
32 (201012 -)	와셔 - 플레인 (SUS) WASHER-PLAIN (SUS)	H3510-0800S			3	3		
33 (201012 -)	와셔 - 스프링 (SUS) WASHER-SPRING (SUS)	H3602-0800S			3	3		
34 (201012 -)	3 M8 캡 너트 M8 CAP NUT (SUS)	H3269-0800S			3	3		

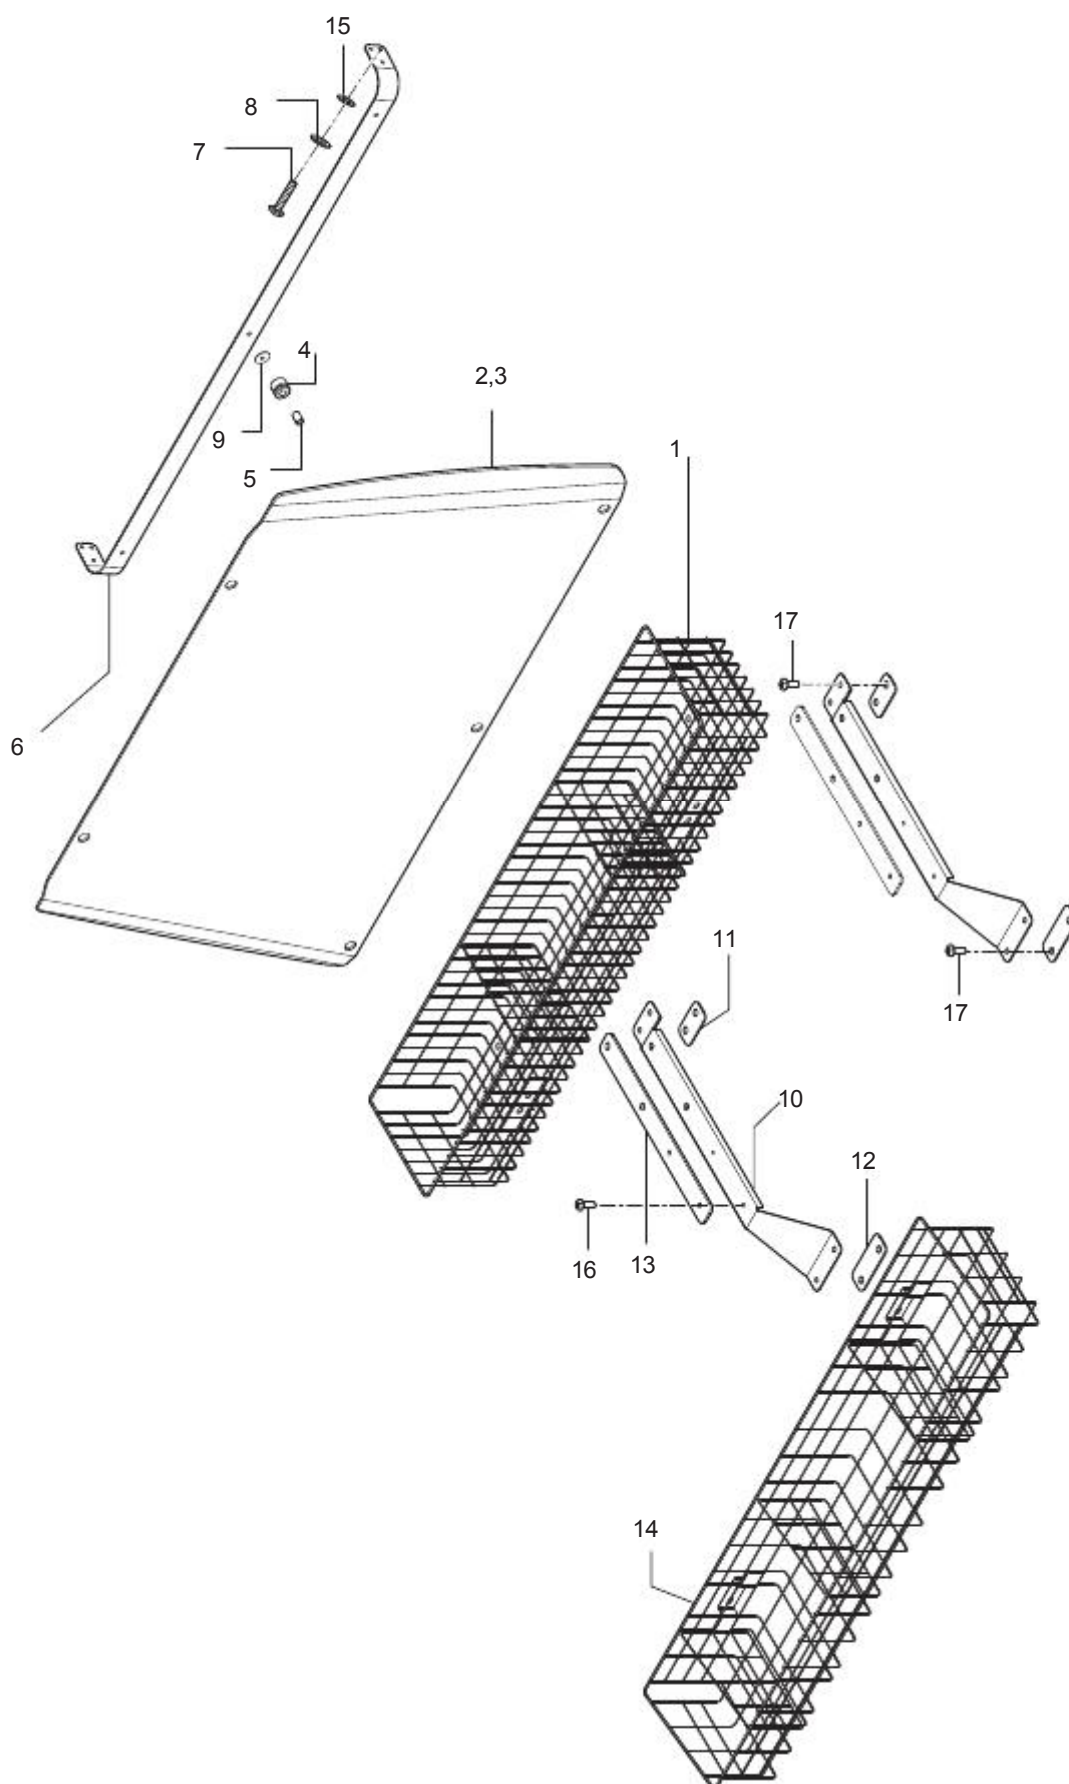



733. 리어 팩키지 / REAR PACKAGE

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어 바스켓 어셈블리 REAR BASKET ASS'Y	75400-C5100a				1		
2 (201012 -)	프로텍터 PROTECTOR	73361-C2000b						
3 (201012 -)	프로텍터 PROTECTOR	73361-C5100F						
4 (201012 -)	쿠션 러버 - 윈드쉴드 CUSHION RUBBER-WINDSHIELD	71114-C5100a		5	5	5		
5 (201012 -)	홀더 - 윈드쉴드 HOLDER-WINDSHIELD	71115-C5100a			5	5		
6 (201012 -)	프레임 - 프로텍터 FRAME-PROTECTOR	73365-C5100e		1		1		
		73365-C2000	1					
7 (201012 -)	머신 스크류 - 트러스 헤드(SUS) M.SCREW-TRUSS HEAD (SUS)	H2208-0616S		6	6	6		
8 (201012 -)	와셔 - 스프링(SUS) WASHER-SPRING (SUS)	H3603-0600S		6	6			
9 (201012 -)	플레인 와셔 PLANE WASHER	71943-C5100				5		
10 (201012 -)	서포트 - 로워 바스켓 SUPPORT-LOWER BASKET	73311-C2000a						
11 (201012 -)	패드 NO.2 - 로워 바스켓 PAD NO.2-LOWER BASKET	73322-C2000						
12 (201012 -)	패드 NO.3 - 로워 바스켓 PAD NO.3-LOWER BASKET	73323-C2000						
13 (201012 -)	패드 NO.1 - 로워 바스켓 PAD NO.1-LOWER BASKET	73324-C2000						
14 (201012 -)	로워 바스켓 NO.2 LOWER BASKET NO.2	75600-C2040b						
15 (201012 -)	와셔 - 플레인 WASHER - PLAIN	H3510-0600S				2		
16 (201012 -)	머신 스크류 M.SCREW-PAN HD, SEM'S(S+P),PC	H2342-0825S		4				
17 (201012 -)	볼트 BOLT-HEX HD SEM'S(P+S),PC	H1250-0830S						
	8							

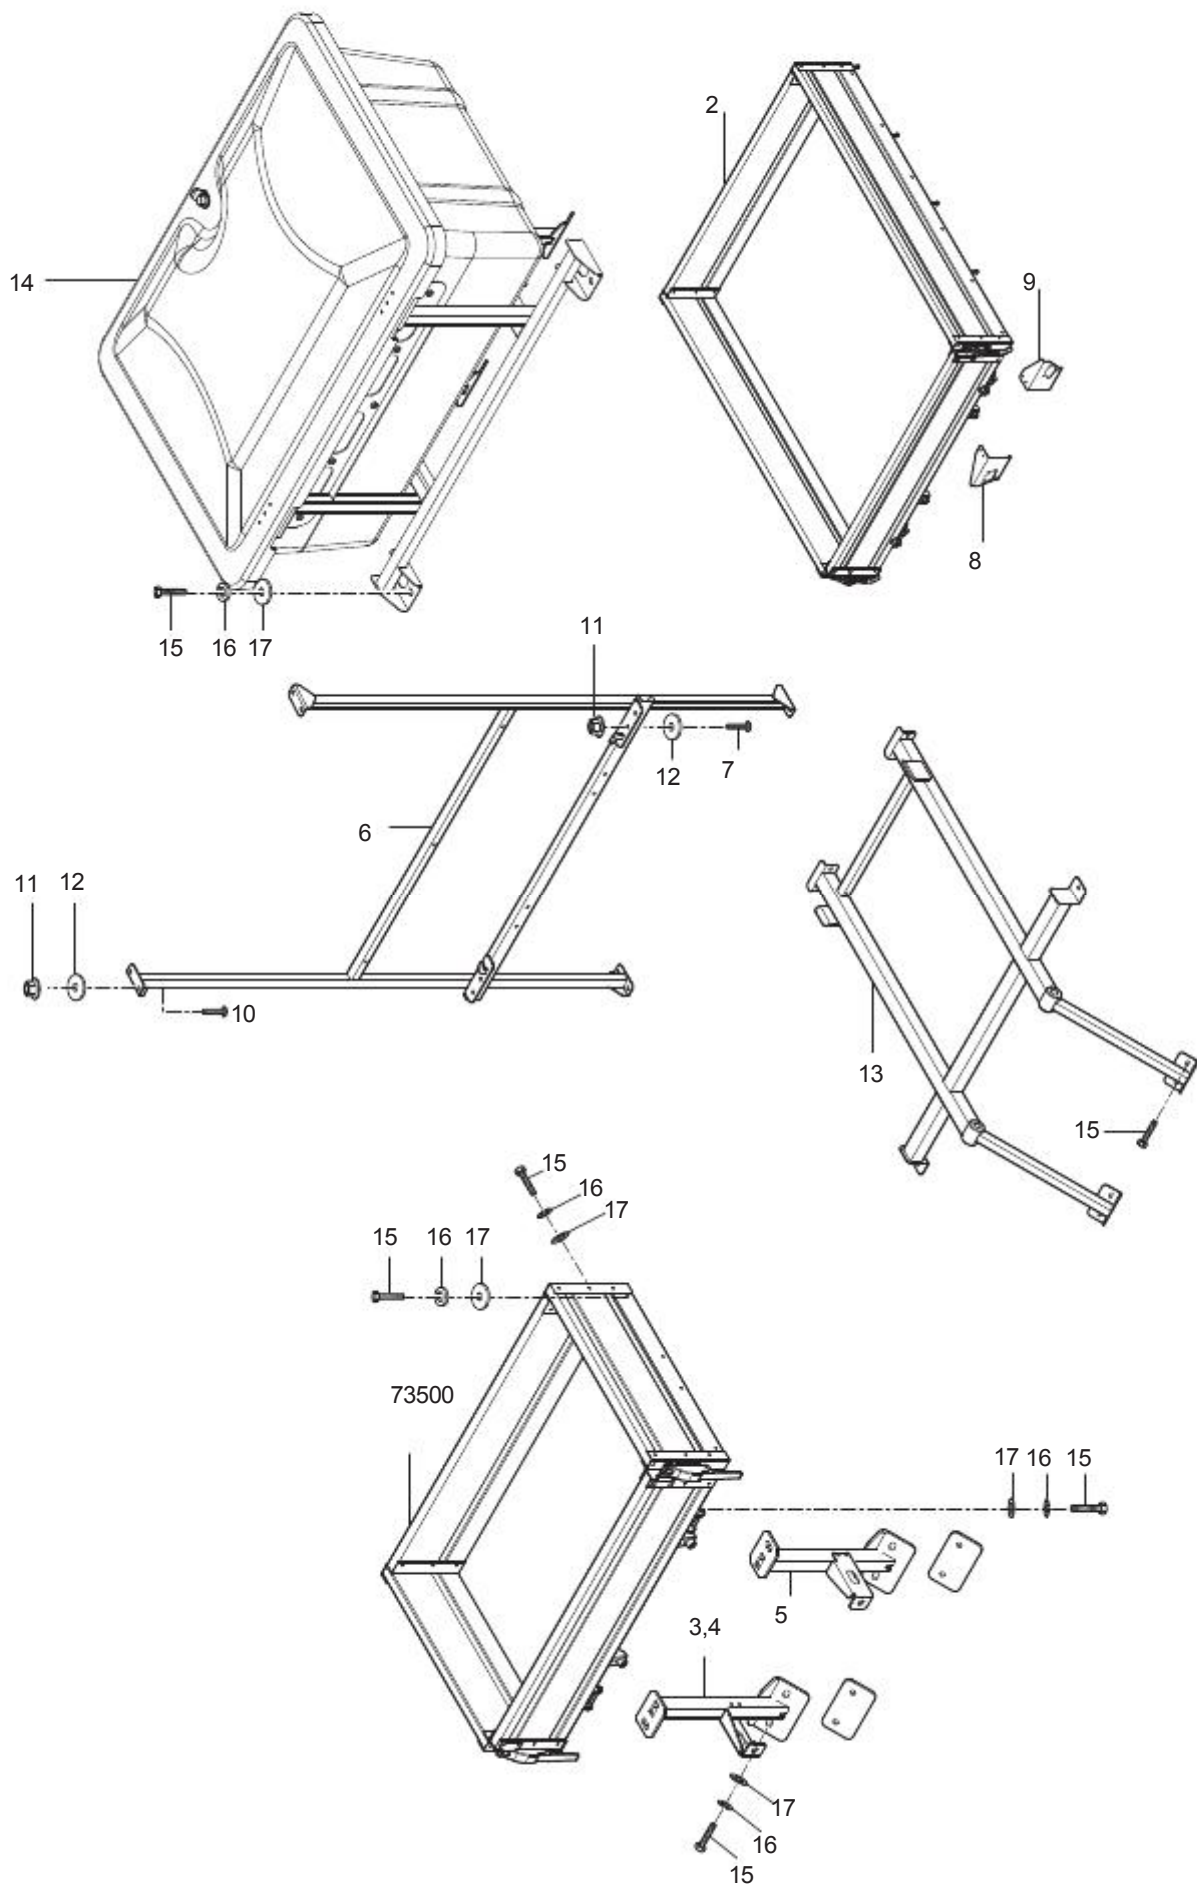


735. 리어 데크 & 트렁크 / REAR DECK & TRUNK

변호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어 데크 어셈블리 REAR DECK ASS'Y	73500-U5000C		1				
		73500-U2000b	1					
2 (201012 -)	리어 데크 어셈블리(AL. , LONG) REAR DECK ASS'Y(AL. ,LONG)	73500-U5200						
3 (201012 -)	서포트 어셈블리 - 리어. 데크, 좌측 SUPPORT ASS'Y - RR. DECK, L/H	73610-U5000C			1			
4 (201012 -)	서포트 어셈블리 - 리어. 데크 SUPPORT ASS'Y - RR. DECK	73610-U2000b						
5 (201012 -)	서포트 어셈블리 - 리어 데크, 우측 SUPPORT ASS'Y - RR. DECK, R/H	73620-U5000C			1			
6 (201012 -)	루프 서포트 프레임 어셈블리 ROOF SUPPORT FRAME ASS'Y	73590-U5200			1			8인승
7 (201012 -)	볼트 BOLT HX HD, SEM'S(S/W+P/W)	H1290-0635Y		4	4			
8 (201012 -)	브라켓 - 리어 콤비 램프, 좌측 BRKT-RR COMBI LAMP, LH	73501-U5200						
9 (201012 -)	브라켓 - 리어 콤비 램프, 우측 BRKT-RR COMBI LAMP, RH	73502-U5200						
10 (201012 -)	머신 스크류 - 트러스 헤드 M.SCREW - TRUSS HEAD	H2208-0640S						
11 (201012 -)	캡 너트 - 록(나일론) CAP NUT - LOCK(NYLON)	H3269-0600S						
12 (201012 -)	와셔 - 플레인, M6 WASHER-PLAIN, M6	H3510-0600W						
13 (201012 -)	시트 플로어 패널 SEAT FLOOR PANEL	73570-U8110a						
14 (201012 -)	트렁크 바디 TRUNK BODY	73531-U2100a						
15 (201012 -)	볼트 BOLT - HEX HD	H1205-0820Y			4	4		SUS
16 (201012 -)	와셔 - 스프링 WASHER - SPRING	H3102-0800Y			4	4		SUS
17 (201012 -)	와셔 - 플레인 WASHER - PLAIN	H3510-0800Y			4	4		SUS

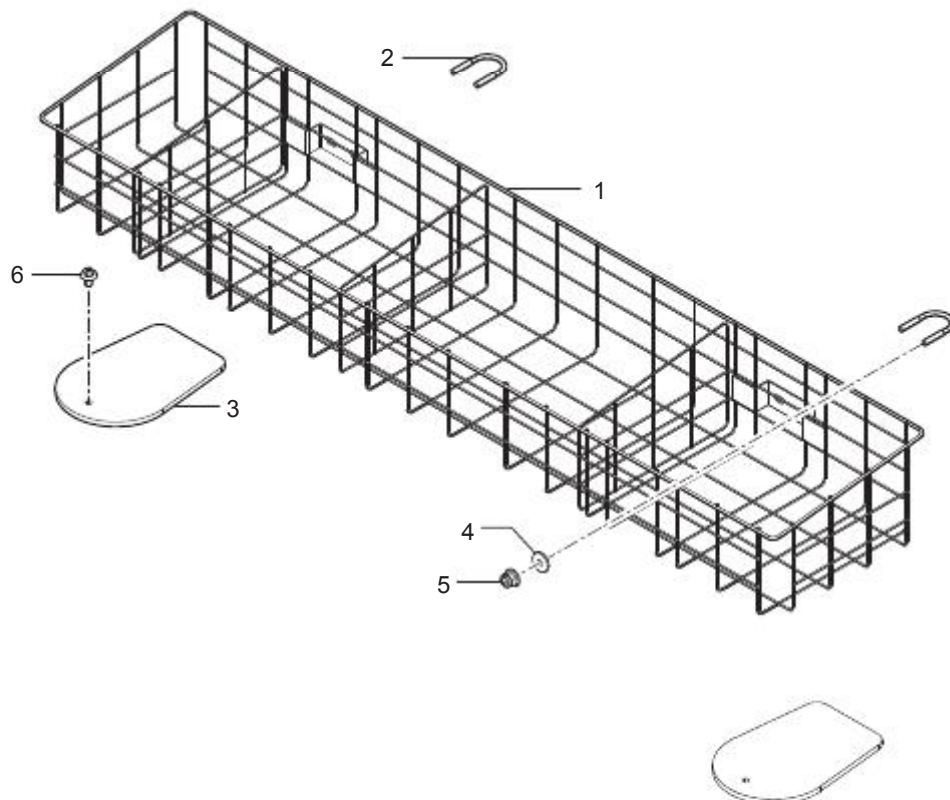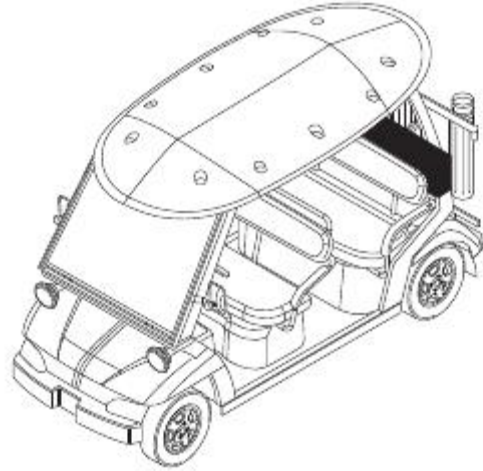


755. 리어 로워 바스켓 / REAR LOWER BASKET

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어. 로워 바스켓 어셈블리 RR. LOWER BASKET ASS'Y	75600	C5100b	1	1	1		
2 (201012 -)	클램프-리어. 로워. 바스켓 CLAMP-RR. LWR. BASKET	75551	C5100	2	2			
3 (201012 -)	패드 - 리어 로워. 바스켓 PAD - RR. LWR. BASKET	75561	C5100	2	2			
4 (201012 -)	와셔 - 플레인 WASHER - PLANE (대형,SUS)	H3508	0600S	4	4	4		
5 (201012 -)	너트 NUT,No.12 - 24 UNC	65553	C5100	8	8			
6 (201012 -)	하스너 FASTNER(Ø6), M4	71791	C5100	2	2			
	2							

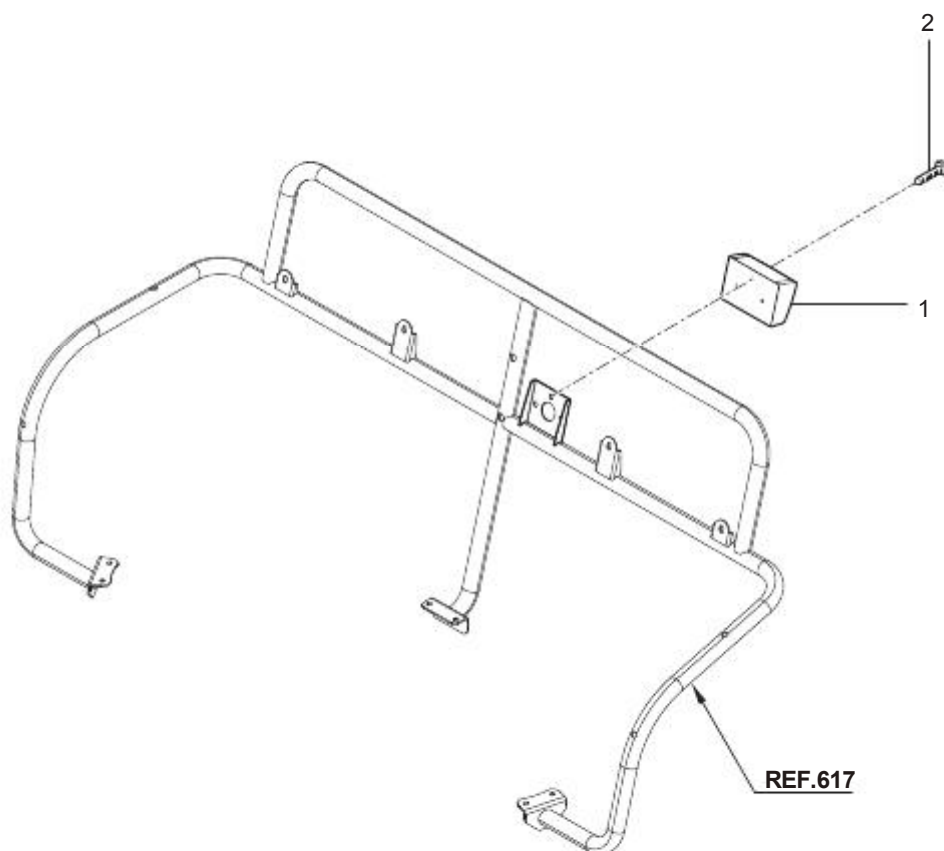


761. 어시스트트레이 / ASHTRAY

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	어시스트레이 어셈블리 ASHTRAY ASS'Y		76110	C5100				
2 (201012 -)	머신 스크류 M. SCREW-PAN HD, SEM'S(S+P)	H2291	0415Y		3	3		

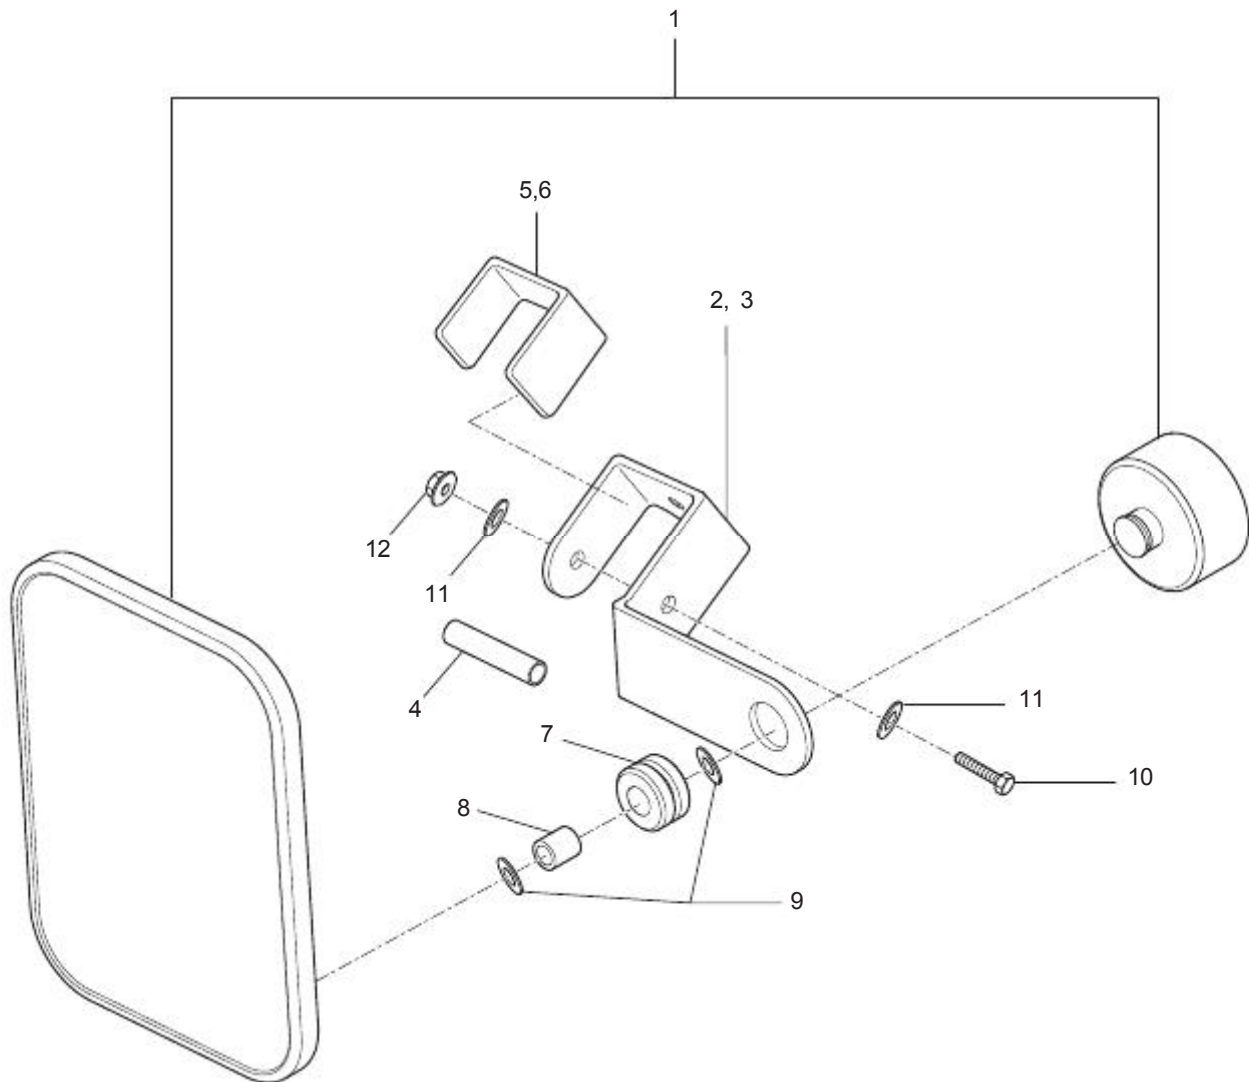

763. 사이드 미러 / SIDE MIRROR


번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	사이드 미러 어셈블리 SIDE MIRRIOR ASS'Y		76310	C5100		2		2
2 (201012 -)	사이드 미러 바스켓 - 좌측 SIDE MIRRIOR BRACKET - L/H	76321	C5100b		1		1	1
3 (201012 -)	사이드 미러 바스켓 - 우측 SIDE MIRRIOR BRACKET - R/H	76322	C5100b		1		1	1
4 (201012 -)	부쉬 - 필라 인서트 BUSH - PILLAR INSERT	76323-C5100a			2		2	
		76324-C5100			2		2	
5 (201012 -)	패드 - S/미러 바스켓, 좌측 PAD - S/MIRRIOR BRKT, L/H	76325	C5100		1		1	1
6 (201012 -)	패드 - S/미러 바스켓, 우측 PAD - S/MIRRIOR BRKT, R/H	76326	C5100		1		1	1
7 (201012 -)	쿠션 CUSHION		42193	C5200		2		
8 (201012 -)	부쉬 BUSH		42194	C5200			2	
9 (201012 -)	와셔(M8) WASHER(M8)		42195	C5200		4		4
10 (201012 -)	머신 스크류 M.SCREW - HEX HD		H2230	C665S		2		2
11 (201012 -)	와셔 - 플레인 WASHER - PLAIN		H3310	C600S		4		4
12 (201012 -)	캡 너트 - 록(나일론) CAP NUT - LOCK (NYLON)		H3310	C600S		2		2

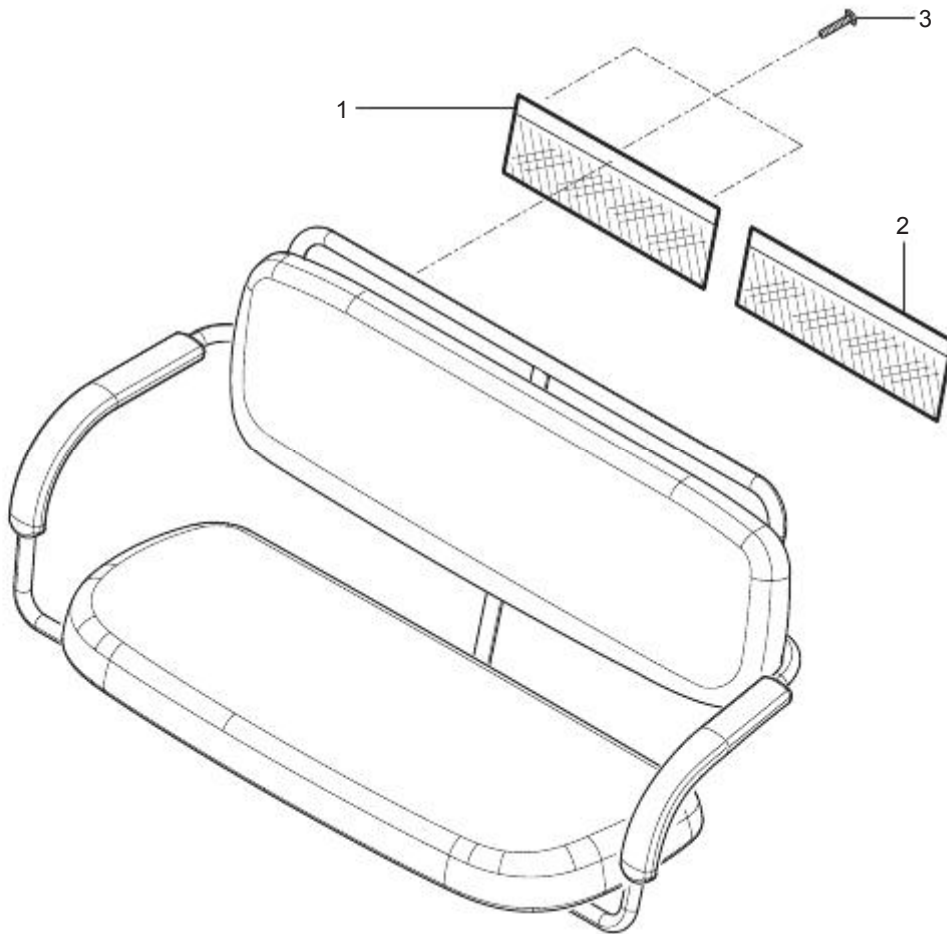

764. 프런트 포켓 / FRONT POCKET


번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	포켓, 우측 - 프런트. 시트 백 POCKET,RH-FRT. S/BACK	76412-C5100				1		
2 (201012 -)	포켓, 좌측-프런트. 시트 백 POCKET,LH-FRT. S/BACK	76413-C5100				1		
3 (201012 -)	T.스크류 - 트러스 헤드 T. SCREW - TRUSS HD	H2418-0420S				6		
6								

2

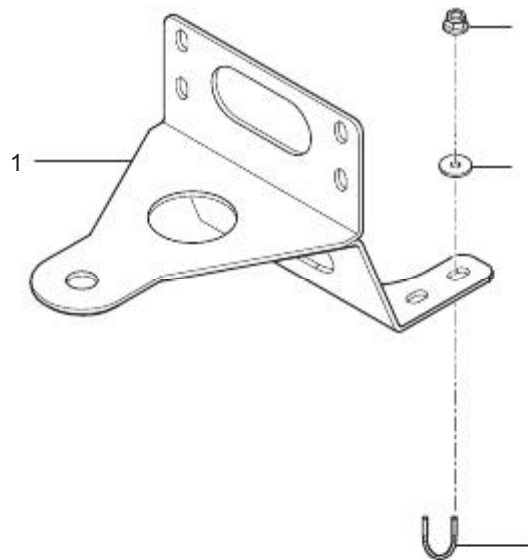


770. 핀틀 훅 / PINTLE HOOK

원호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	핀틀 훅 PINTLE HOOK	77001-U2000						
2 (201012 -)	볼트 U - BOLT(25A, C-TYPE, STS304)	77002-U2000	4					
3 (201012 -)	와셔 - 플레인 WASHER - PLAIN	H3510-1000S						
4 (201012 -)	너트 NUT - HEX HEAD	H3100-1000S						

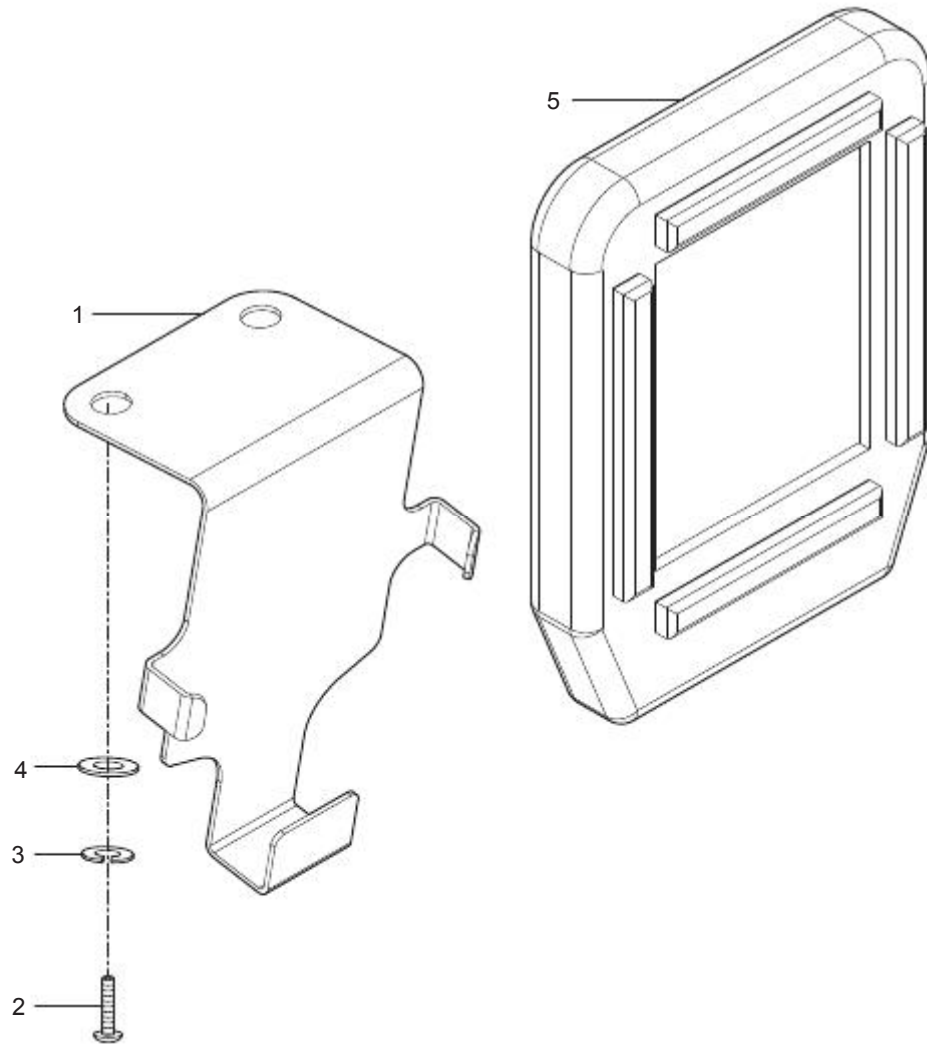


771. 스탠드 스톱 와치 / STAND STOP WATCH

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	스탠드 - 스톱 와치 STAND - STOP WATCH		76212-C5100		1	1		
2 (201012 -)	머신 스크류 - 트러스 헤드 M.SCREW - TRUSS HEAD		H2208-0616S		2	2		
3 (201012 -)	와셔 - 스프링 WASHER - SPRING		H3602-0600S		2	2		
4 (201012 -)	와셔 - 플레인 WASHER - PLAIN		H3502-0600S		2	2		
5 (201012 -)	스톱 와치 STOP WATCH		86621-C5100		1	1		
	1							

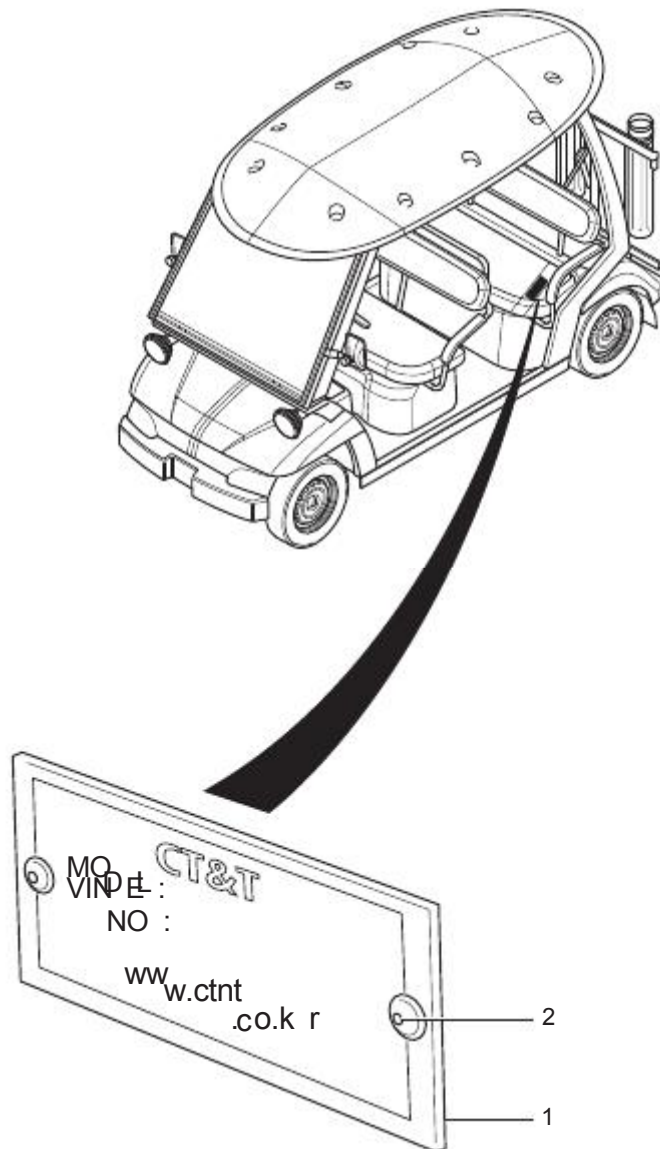


791. 빈 플레이트 / VIN PLATE

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	빈 플레이트 - C 존 VIN PLATE_C ZONE		79111-C5100B		1	1	1	1
2 (201012 -)	탑 리벳 TOP RIVET		H4160-0310A		2	2	2	2
	2							

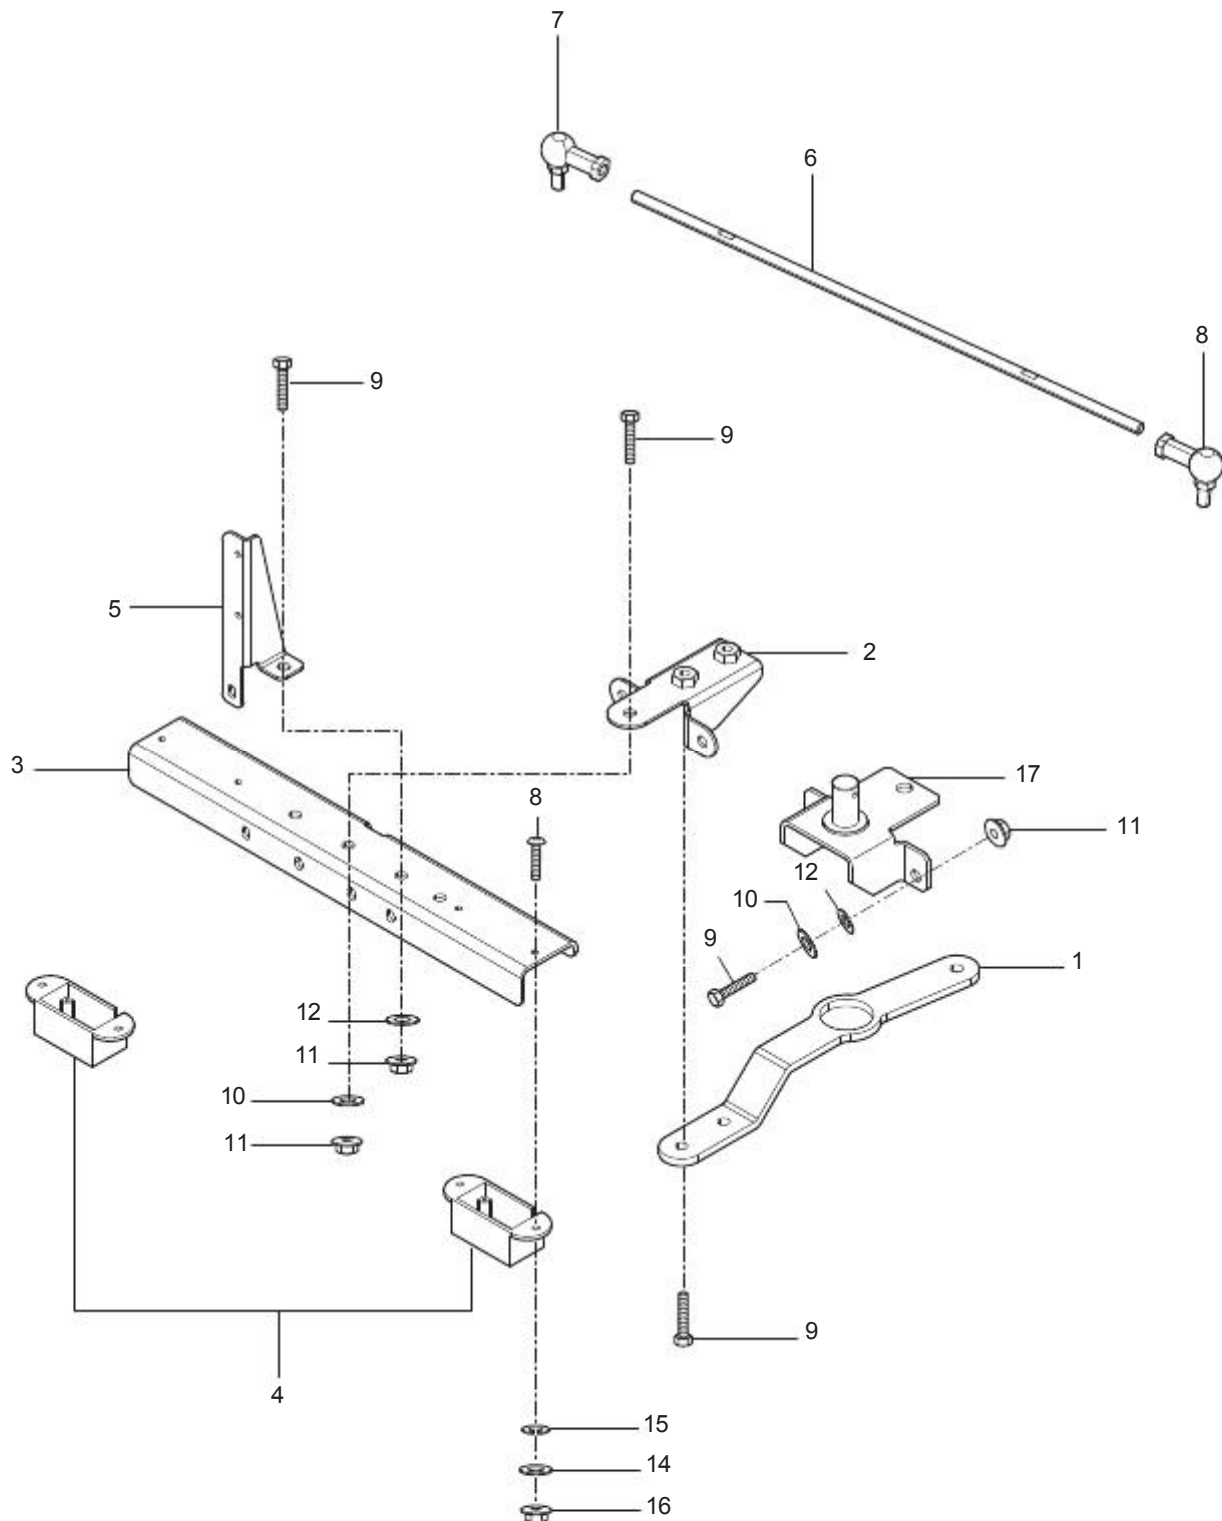


810. 오토 가이드 / AUTO GUIDE

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	크랭크 암 어셈블리 - 가이드 센서 CRANK ARM ASS'Y - GUIDE SENSOR	81110	C5230			1		
2 (201012 -)	암 - 가이드 센서 ARM - GUIDE SENSOR	81121	C5230a					
3 (201012 -)	바 ¹ 가이드 센서 BAR - GUIDE SENSOR	81122	C5230a					
4 (201012 -)	가이드 센서 GUIDE SENSOR	94430-C5200 ²						
		94430-C5210 ²						
5 (201012 -)	브라켓 - 가드 센서, RX BRACKET-GUARD SENSOR, RX	94465	C5200b			1		
6 (201012 -)	로드 - 링크 ROD - LINK		81153	c5230a				
7 (201012 -)	볼 조인트 ¹ 우측 BALL JOINT R/H		81157	C5200				
8 (201012 -)	볼 조인트 ¹ 좌측 BALL JOINT L/H		81158	C5200				
9 (201012 -)	볼트 ¹ BOLT - HEX HD		H1205	0820Y				
10 (201012 -)	와셔 - ⁶ 플레인 WASHER - PLAIN		H3510	0800Y				
11 (201012 -)	너트 ⁶ NUT - HEX HEAD		H3105	0800Y				
12 (201012 -)	와셔 - ⁶ 스프링 WASHER - SPRING		H3102	0800Y				
13 (201012 -)	머신 ⁶ 스크류 MACHINE SCREW		H2208	0414Y				
14 (201012 -)	와셔 - ⁴ 플레인 WASHER - PLAIN		H3510	0400Y				
15 (201012 -)	와셔 - ⁸ 스프링 WASHER - SPRING		H3102	0400Y				
16 (201012 -)	너트 ⁴ NUT HEX HEAD		H3105	0400Y				
17 (201012 -)	샤프트 ⁴ 어셈블리 - 가이드 센서 SHAFT ASS'Y - GUIDE SENSOR	81130	C5230C			1		

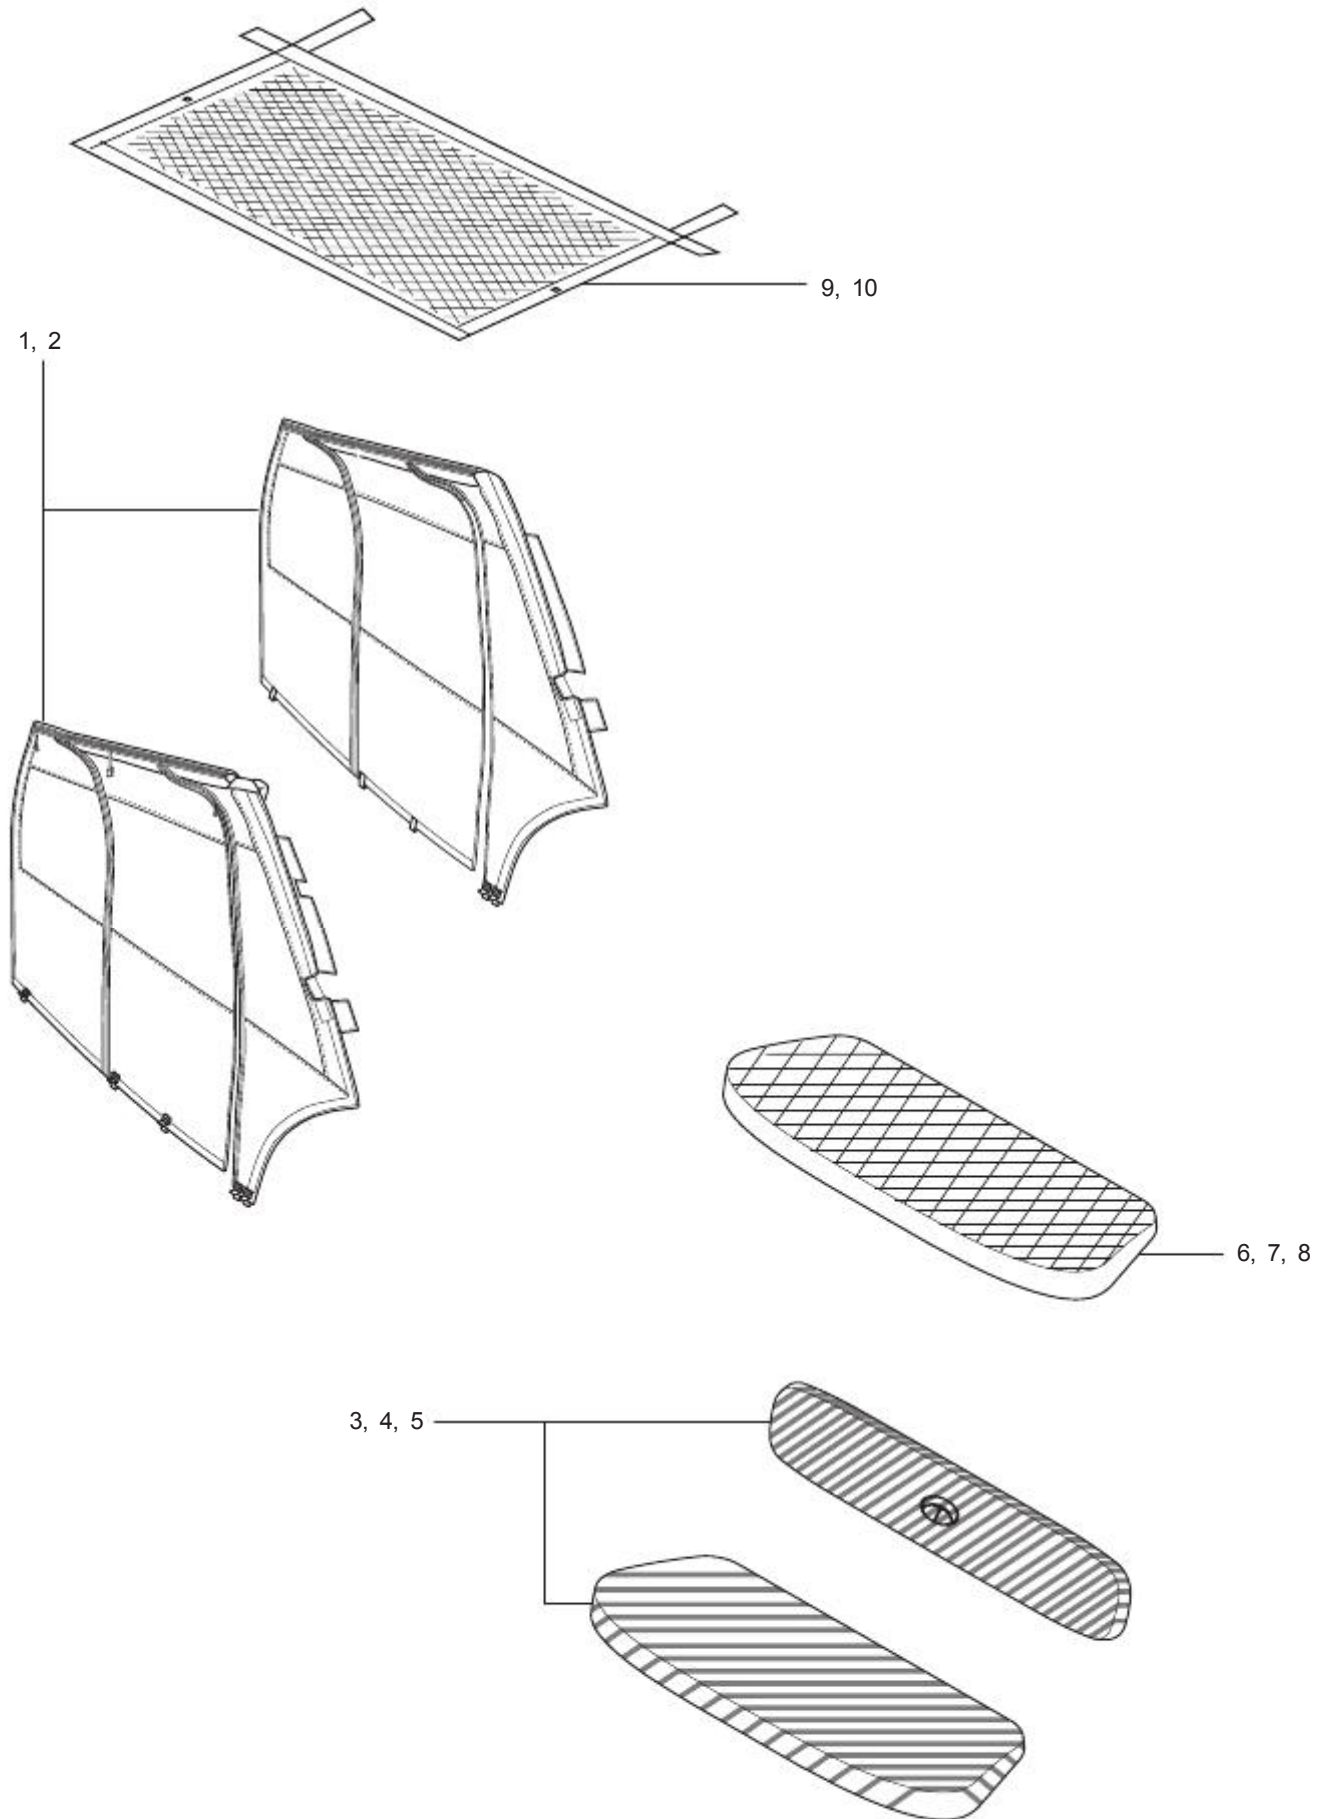


860. 악세서리 / ACCESSORIES

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK	
			CU2	CU6	CA6	CN2	CN6		
1 (201012 -)	레인 커버 - 6P RAIN COVER - 6P		86111	1	C5100		1	1	
2 (201012 -)	레인 커버 - 2P RAIN COVER - 2P		86111	1	C2100	1			
3 (201012 -)	시트 커버 - 6P 프런트, 윈터 SEAT COVER-6P FRT, WINTER	86331	C5000			1	1		
4 (201012 -)	시트 커버 - 6P 리어, 윈터 SEAT COVER-6P REAR, WINTER	863A1	C5000			1	1		
5 (201012 -)	시트 커버 - 2P 프런트, 윈터 SEAT COVER - 2P FRT, WINTER	86331	C2000						
6 (201012 -)	시트 커버 - 6P 프런트, 썸머 SEAT COVER-6P FRT, SUMMER	86341	C5000			1	1		
7 (201012 -)	시트 커버 - 6P 리어, 썸머 SEAT COVER-6P REAR, SUMMER	863A2	C5000			1	1		
8 (201012 -)	시트 커버 - 2P 프런트, 썸머 SEAT COVER - 2P FRT, SUMMER	86341	C2000	1					
9 (201012 -)	루프 넷, 6P ROOF NET, 6P		86552	C5000					
10 (201012 -)	루프 넷, 2P ROOF NET, 2P		86552	C2000					
	1								

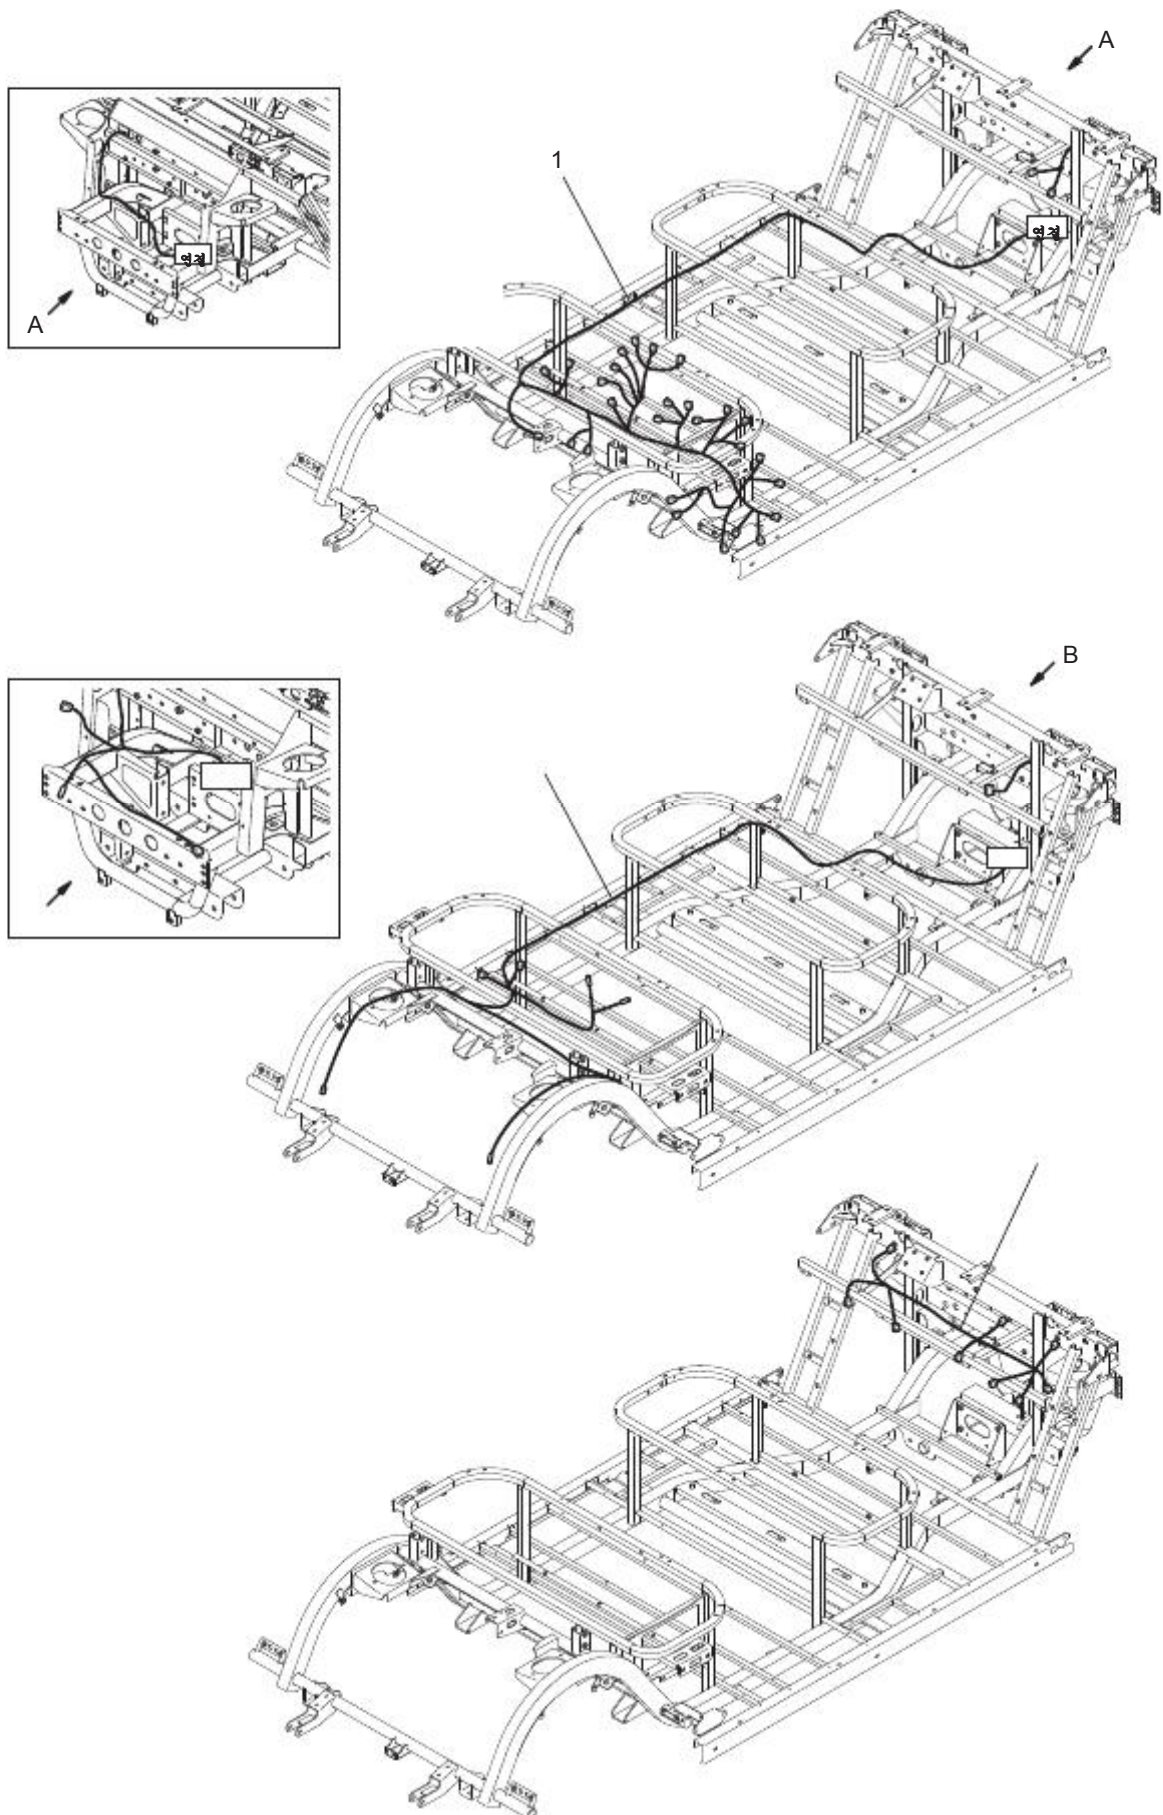


911. 메인 와이어링 / MAIN WIRING

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	와이어링 어셈블리 - 메인 WIRING ASS'Y - MAIN	91100-C2041b	1					
		91100-C5141a			1			
		91100-C5241a				1		
		91100-N2000b						
		91100-N5000b						
2 (201012 -)	와이어링 어셈블리 - UTIL WIRING ASS'Y - UTIL	91180-U2030	1					
		91180-U5030			1			
3 (201012 -)	와이어링 어셈블리 - UTIL IP WIRING ASS'Y - UTIL IP	91190-U5030			1			
	1							



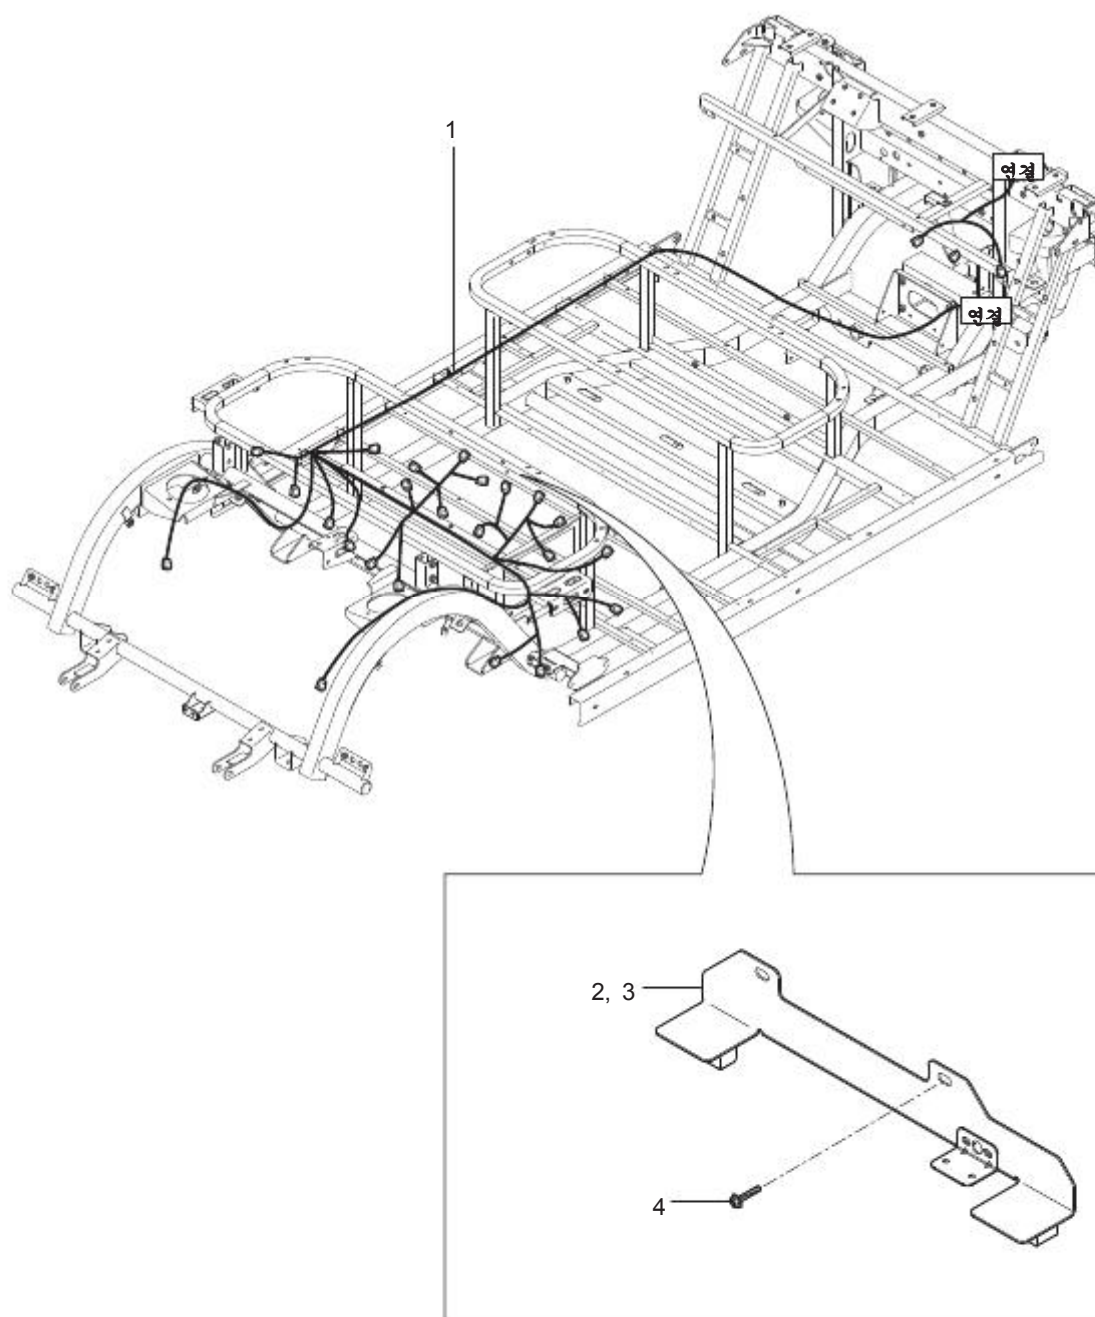


912. 와이어링 어셈블리 컨트롤러 / WIRING ASS'Y CONTROLLER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	와이어링 어셈블리 - 컨트롤러 WIRING ASS'Y - CONTROLLER	91200-N2000c 1						
		91200-N5000d 1						
2 (201012 -)	멀티 브라켓 NO.1 MULTI BRACKET NO.1	91112-N2000a 1			1			
3 (201012 -)	멀티 브라켓 MULTI BRACKET	91112-C5141 1				1	1	
4 (201012 -)	볼트 BOLT - (+)홈HEX HD, SEM'S(S/W+P/W)	H1246-0616Y 1		2	2	2	2	2


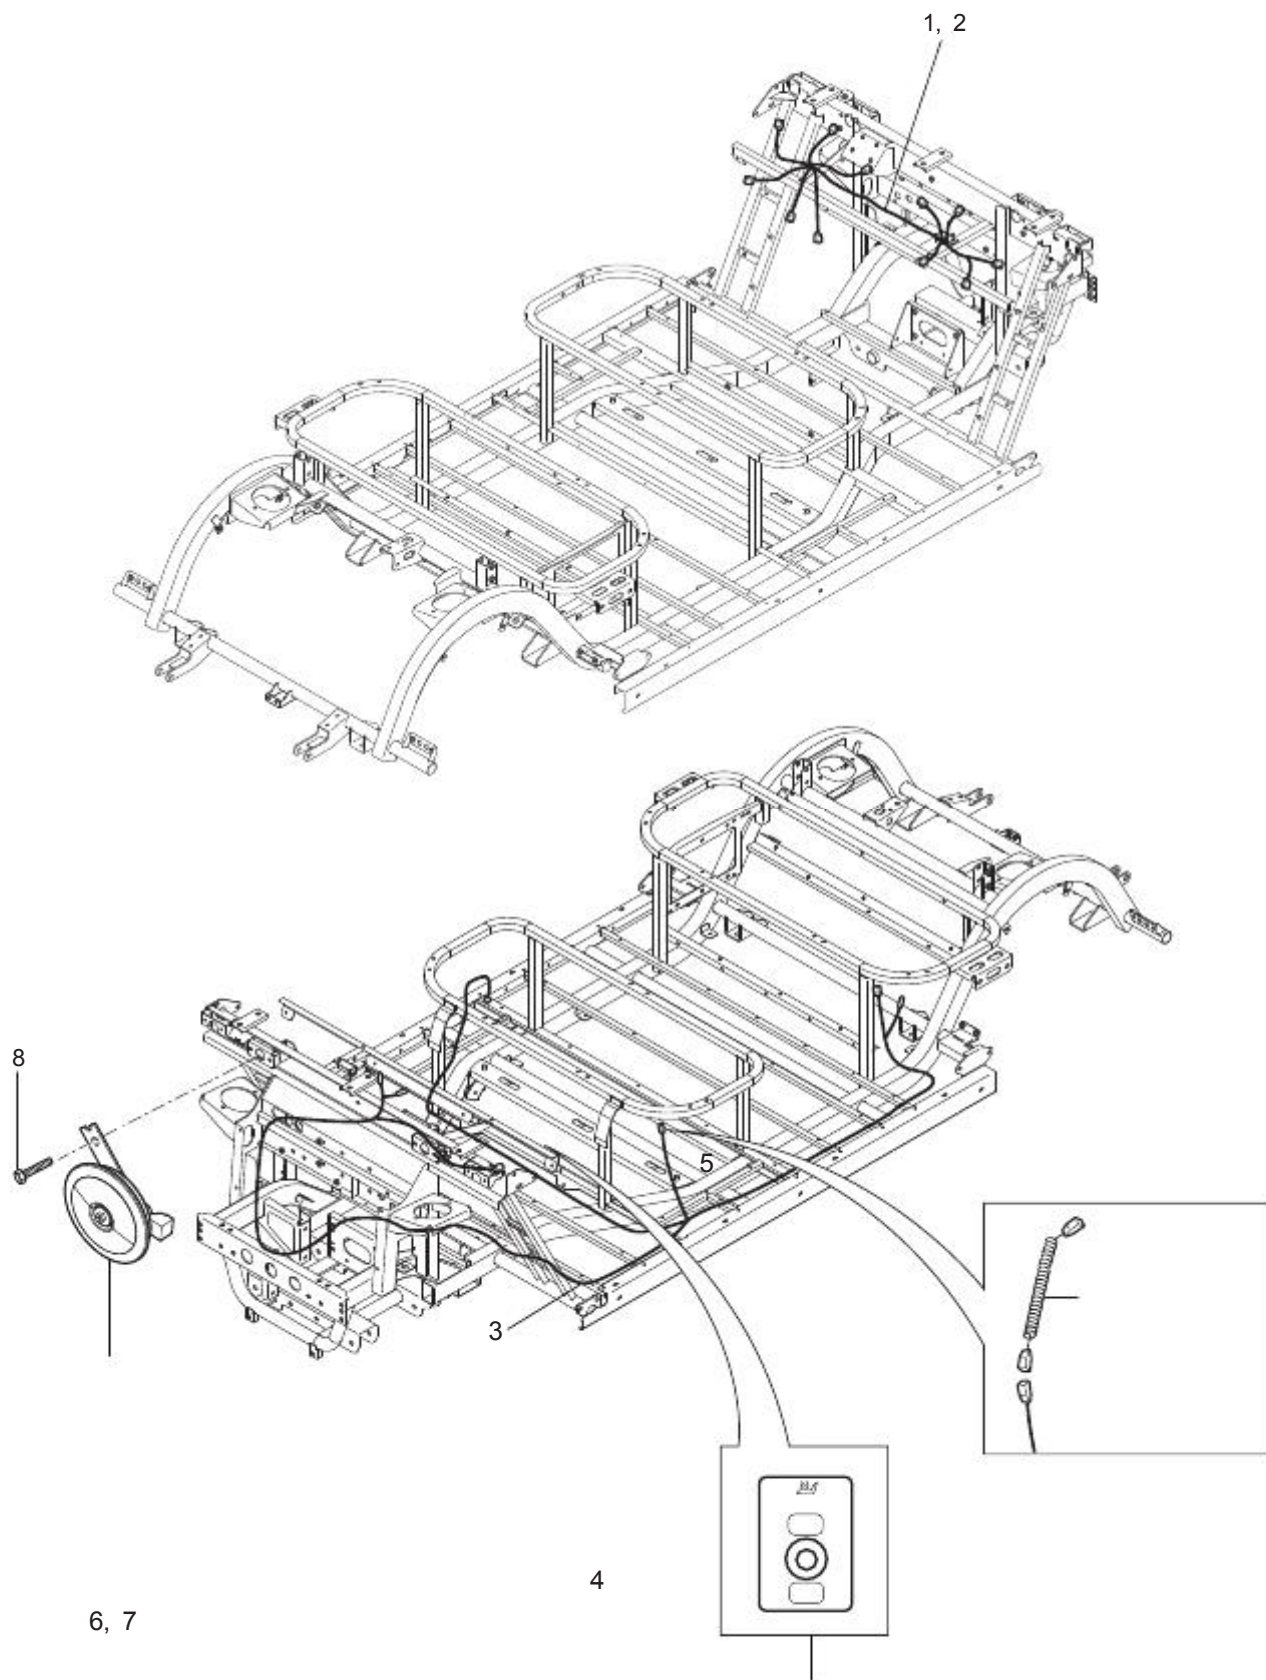


번호 (실시지) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	와이어링 어셈블리 - IP WIRING ASS'Y - IP	91300-C5141e	1	1				
		91300-C5211f				1		
2 (201012 -)	와이어링 어셈블리 - IP WIRING ASS'Y - IP	91300-N2000d						
		91300-N5000d						
3 (201012 -)	와이어링 어셈블리 - 시트 히터 WIRING ASS'Y - SEAT HEATER	91710-C2000a	1					
		91710-C5200c		1		1		
		91710-C2041						
		91710-C5141						
4 (201012 -)	와이어링 어셈블리 - 컬 WIRING ASS'Y - CURL		91720-C5200		1	2	2	
5 (201012 -)	시트 히터 스위치 어셈블리 SEAT HEATER SWITCH ASS'Y		93760-C5200		1	1	1	1
6 (201012 -)	혼 HORN		96110-U5001					
7 (201012 -)	혼 HORN		96100-U5300					
8 (201012 -)	볼트 BOLT - (+)홈 HEX HD, SEM'S(S/W+P/W), PC	H1244-0620Y			1		1	1

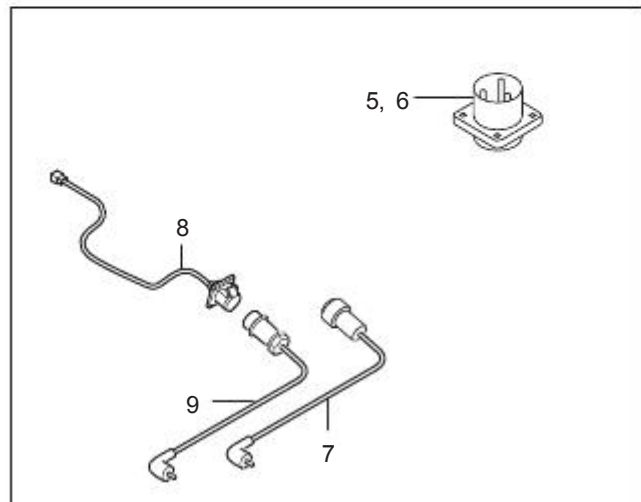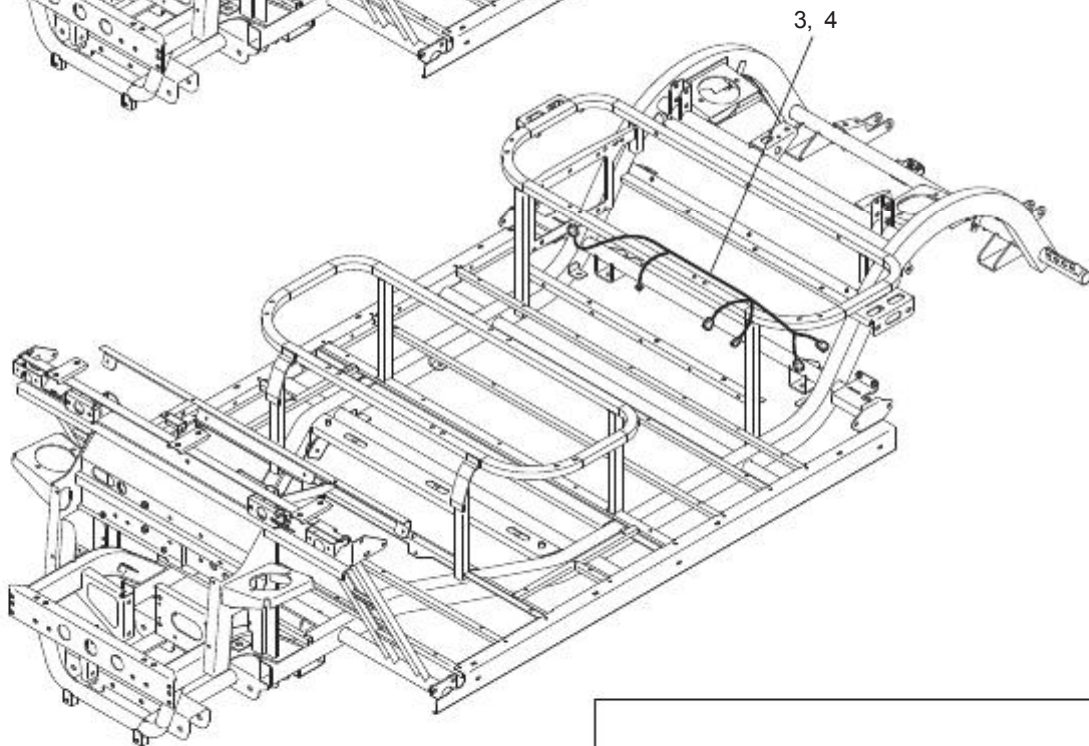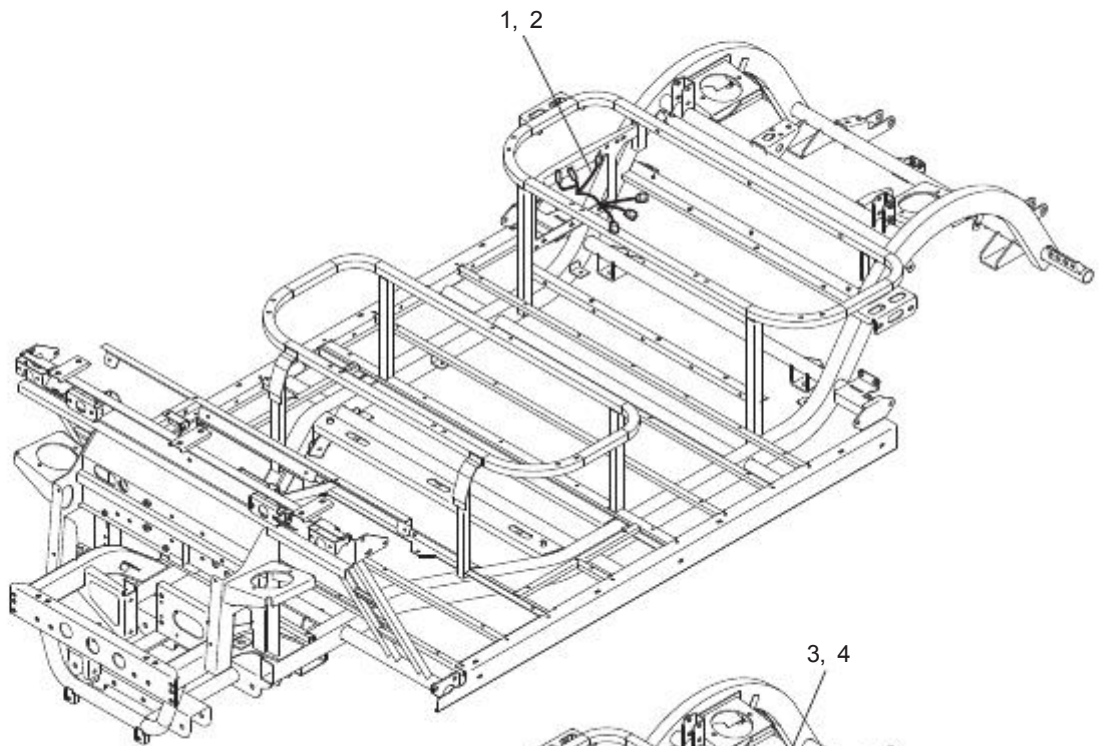


915. 와이어링 어셈블리 컨택터 & 충전기 / WIRING ASS'Y CONTACTOR & CHARGER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	와이어링 어셈블리 - 컨택터 WIRING ASS'Y - CONTACTOR	91510-C5100d	1	1				
		91510-C5200e				1		
2 (201012 -)	와이어링 어셈블리 - 컨택터 WIRING ASS'Y - CONTACTOR	91500-E2000b					1	
3 (201012 -)	와이어링 어셈블리 - 충전기(INT) WIRING ASS'Y - CHARGER(INT)	91650-C2041	1					
		91650-C5241		1		1		
4 (201012 -)	와이어링 어셈블리 - 충전기(INT) WIRING ASS'Y - CHARGER(INT)	91650-N2000						
		91650-N5000						
5 (201012 -)	소켓 어셈블리 - AC(2P) SOCKET ASS'Y - AC(2p)	97290-C2042						
6 (201012 -)	소켓 어셈블리 - AC SOCKET ASS'Y - AC	97290-C5231				1		
7 (201012 -)	플러그 어셈블리 - AC(16A) PLUG ASS'Y - AC(16A)	97280-C5231b			1	1		
8 (201012 -)	충전기 소켓 케이블 어셈블리 CHARGER SOCKET CABLE ASS'Y	97240-E2010c					1	1
9 (201012 -)	충전기 플러그 케이블 어셈블리 CHARGER PLUG CABLE ASS'Y	97260-E2000B					1	1

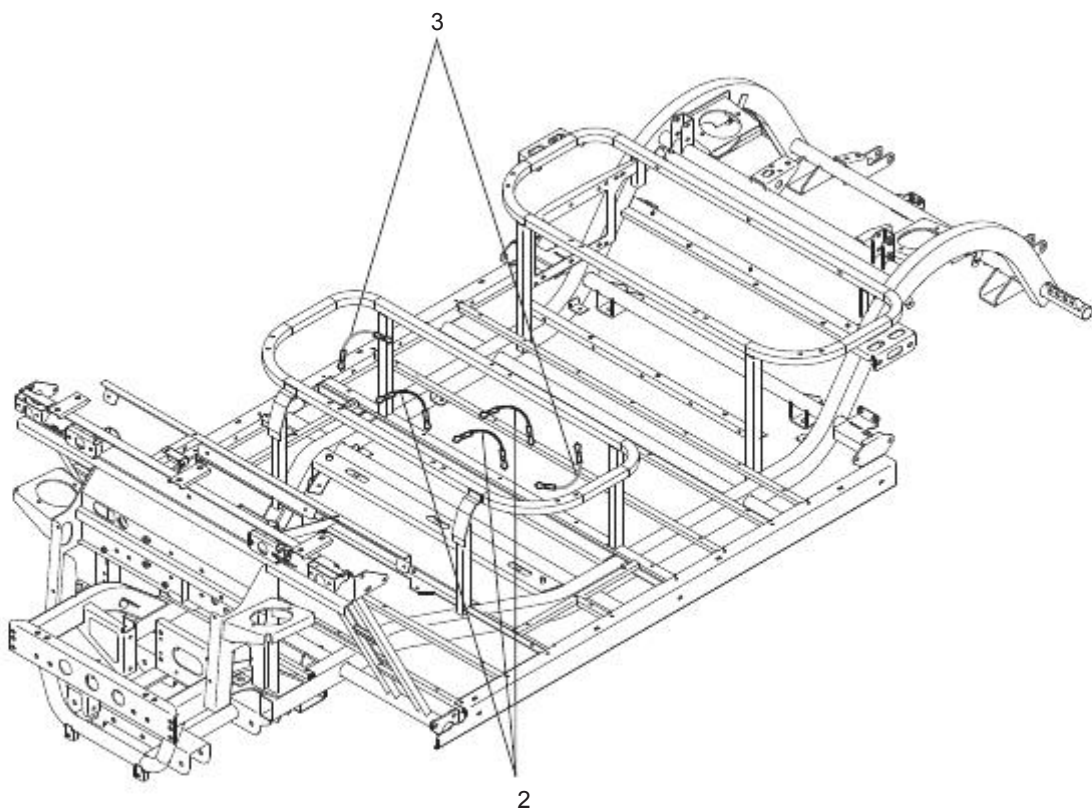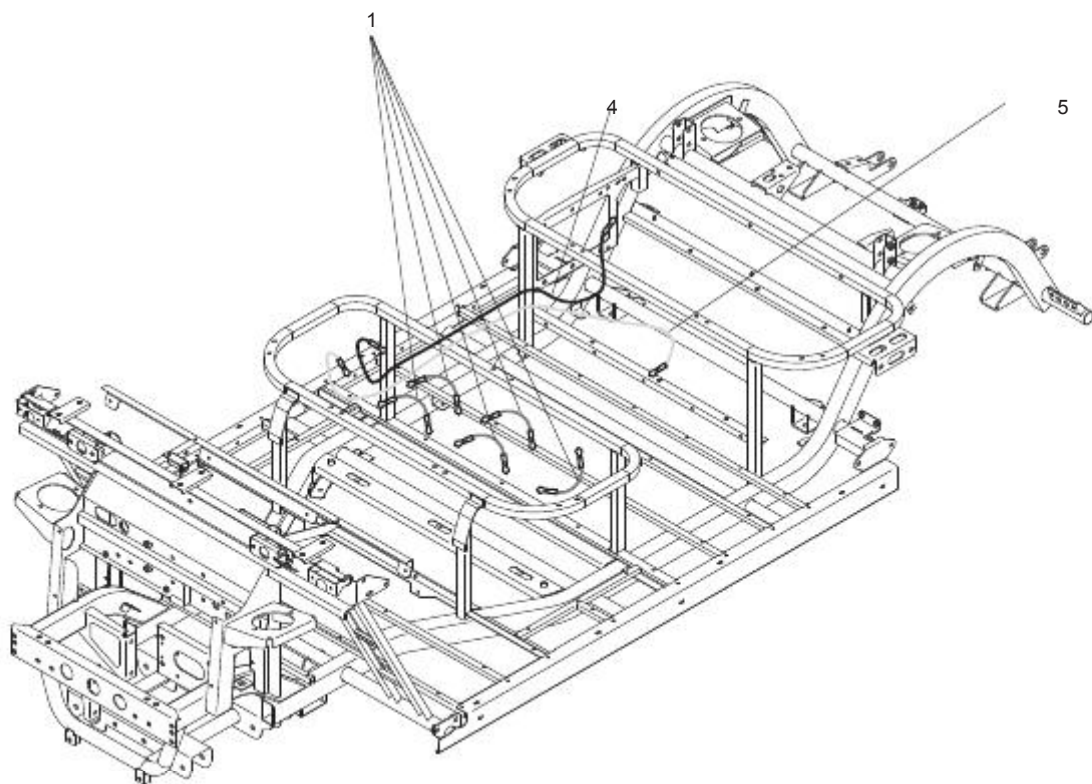


918. 배터리 케이블 / BATTERY CABLE

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	케이블 어셈블리 - 배터리 CABLE ASS'Y - BATTERY	91810-C5141α		5	5			
2 (201012 -)	케이블 어셈블리 - 배터리 1 CABLE ASS'Y - BATTERY 1	91810-N2000α				3	3	
3 (201012 -)	케이블 어셈블리 - 배터리 2 CABLE ASS'Y - BATTERY 2	91840-N2000α				2	2	
4 (201012 -)	케이블 어셈블리 - 파워(POS) CABLE ASS'Y - POWER(POS)	91820-C5141		1	1			
		91820-N5000						
		91820-C2041	1					
		91820-N2000						
5 (201012 -)	케이블 어셈블리 - 파워(NEG) CABLE ASS'Y - POWER(NEG)	91830-C5141		1	1			
		91830-N5000						
		91830-C2041	1					
		91830-N2000						

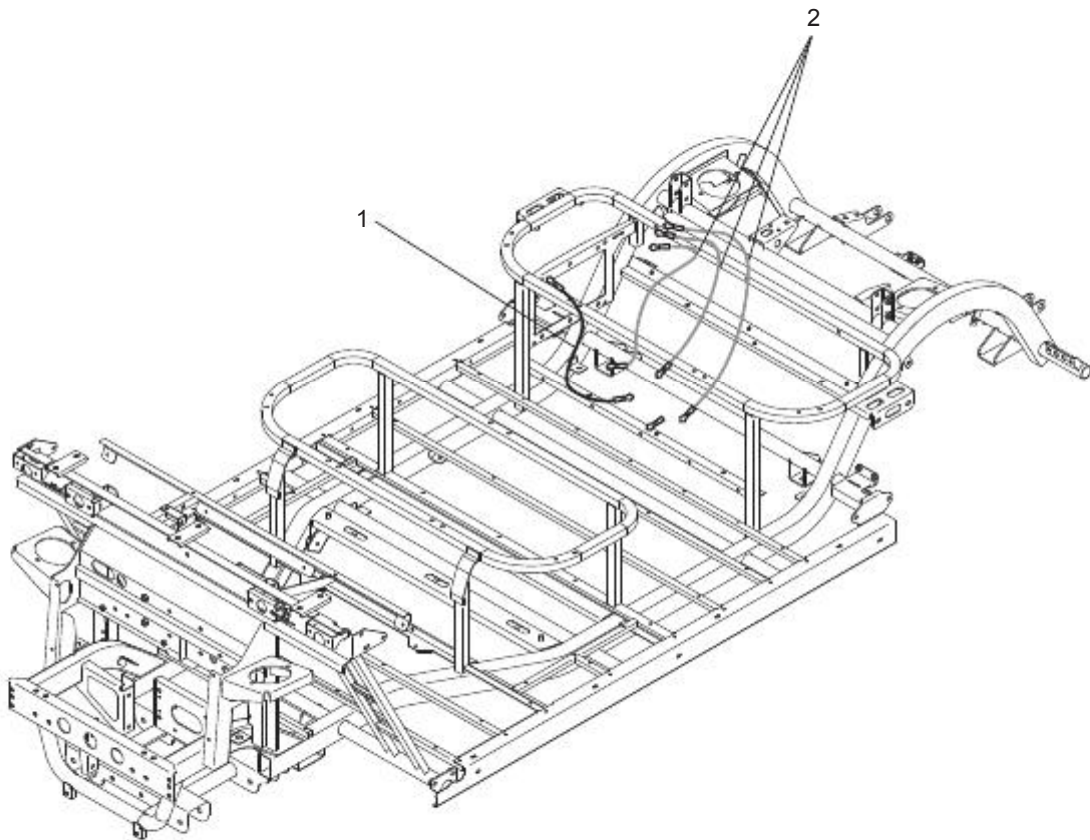



919. 모터 케이블 / MOTOR CABLE

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	케이블 어셈블리 - 모터 컨트롤러 CABLE ASS'Y - MTR. CONTROLLER	91910-C5141			1	1		
		91910-N5000						
		91910-C2041	1					
		91910-N2000						
2 (201012 -)	케이블 어셈블리 - 모터(U, V, W) CABLE ASS'Y - MOTOR(U,V,W)	91920-C5141a		1		1		
		91920-N5000						
		91920-C2041	1					
		91920-N2000						

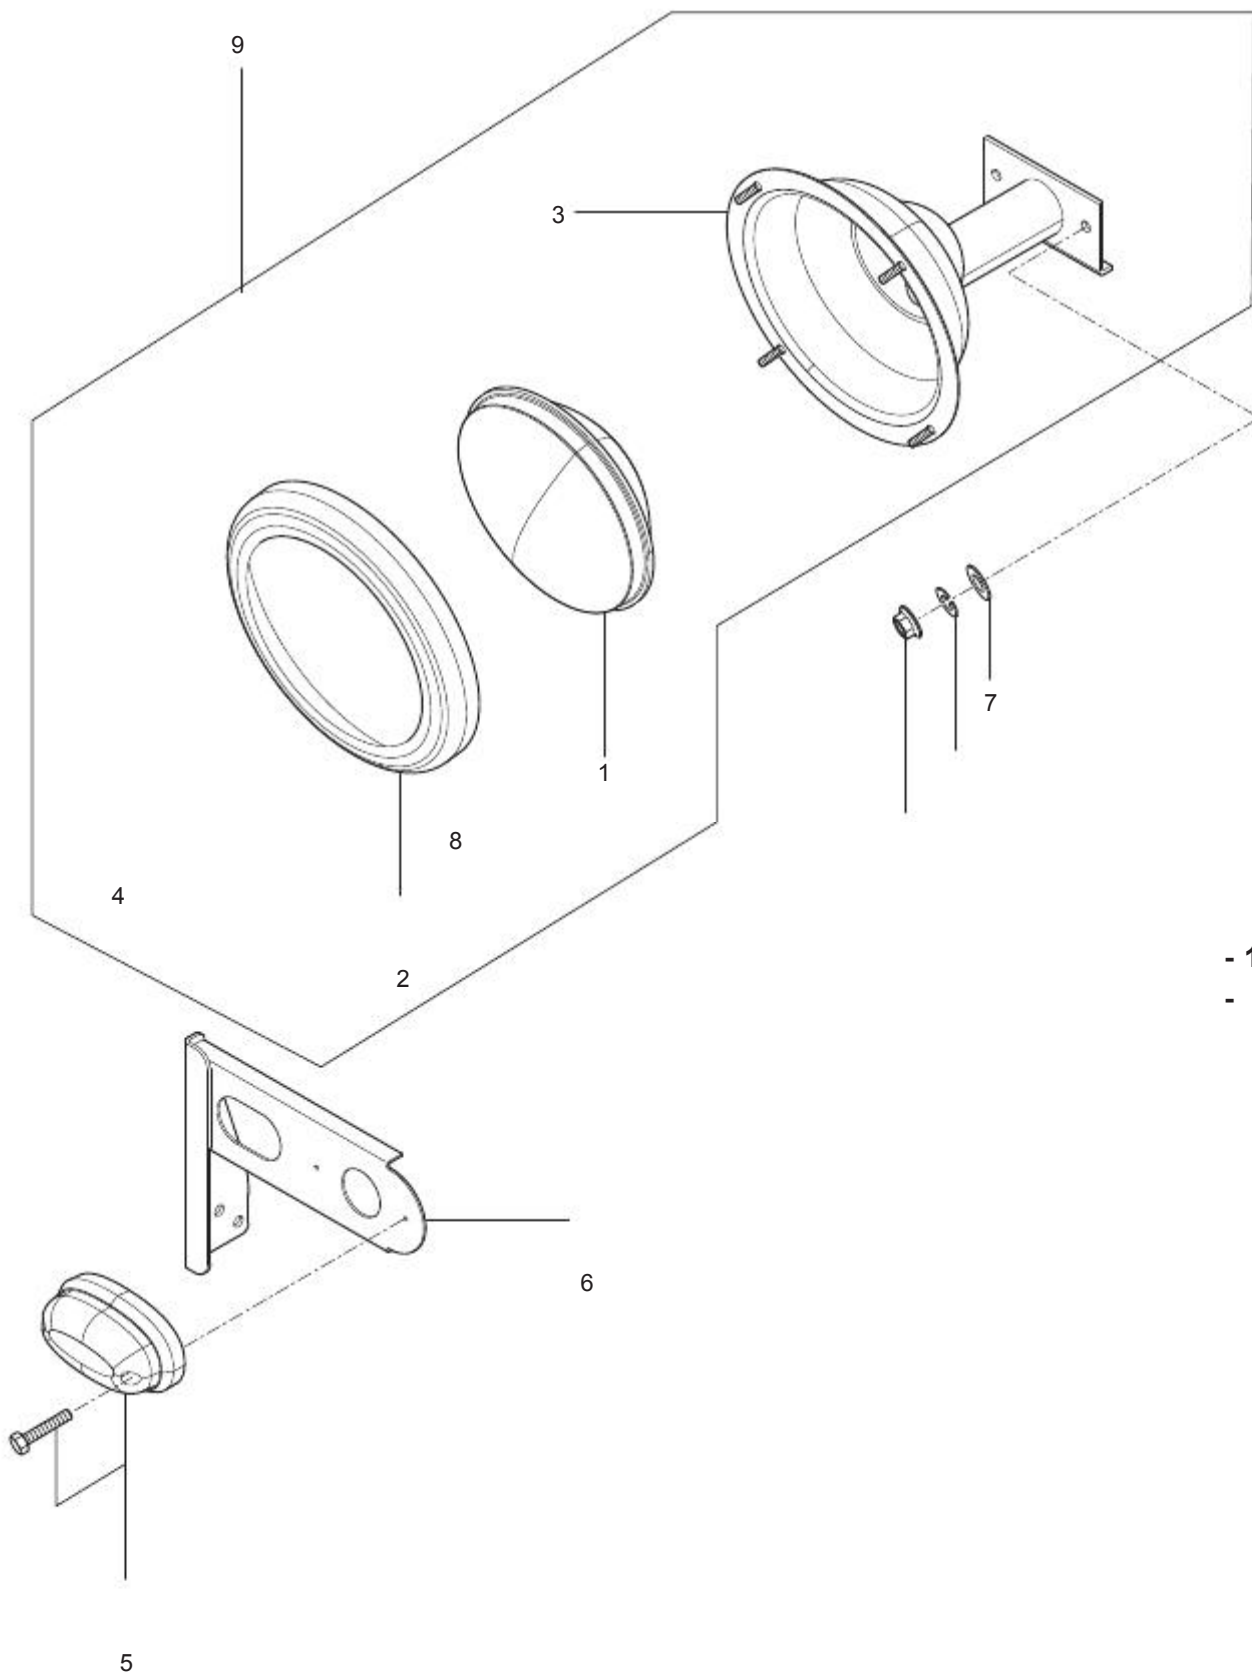


921. 프런트 램프 / FRONT LAMP

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	헤드 램프 HEAD LAMP		92110-U5000		2	2		2
2 (201012 -)	배 ² 셀 어셈블리 - 헤드 램프 VESSEL ASS'Y - HEAD LAMP	92120-U5000		2	2		2	2
3 (201012 -)	하우징 어셈블리 - 헤드 램프 HOUSING ASS'Y - HEAD LAMP	92130-U5000		2	2		2	2
4 (201012 -)	캡 너트 - 록 CAP NUT - LOCK		H3170-0600S		4	4		4
5 (201012 -)	램프 - 턴 시그널 LAMP - TURN SIGNAL		92711-U5000		2	2		2
6 (201012 -)	서 ² 포트 어셈블리 - 턴 시그널, 좌측 SUPPORT ASS'Y - TURN SIGNAL, L/H	92730-U5000		1	1		1	1
7 (201012 -)	와셔 - 플레인 WASHER - PLAIN		H1606-6000		4	4		4
8 (201012 -)	와 ⁴ 셔 - 스프링 WASHER - SPRING		H1636-6000		4	4		4
9 (201012 -)	헤 ⁴ 드 램프 어셈블리 HEAD LAMP ASS'Y		92100-U5000		2	2		2
	2							

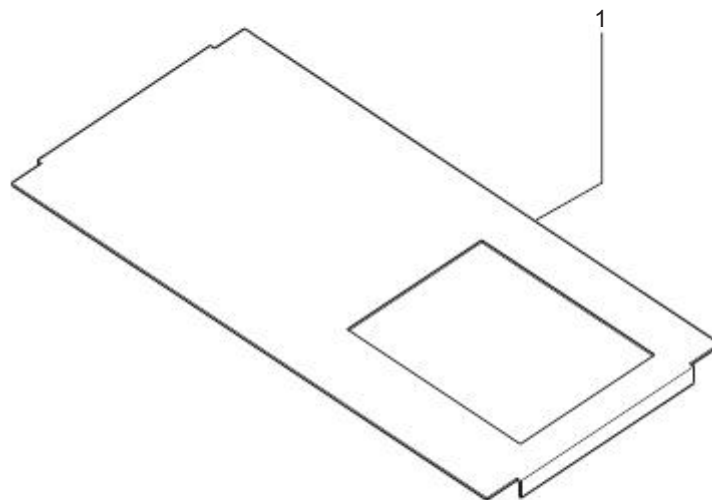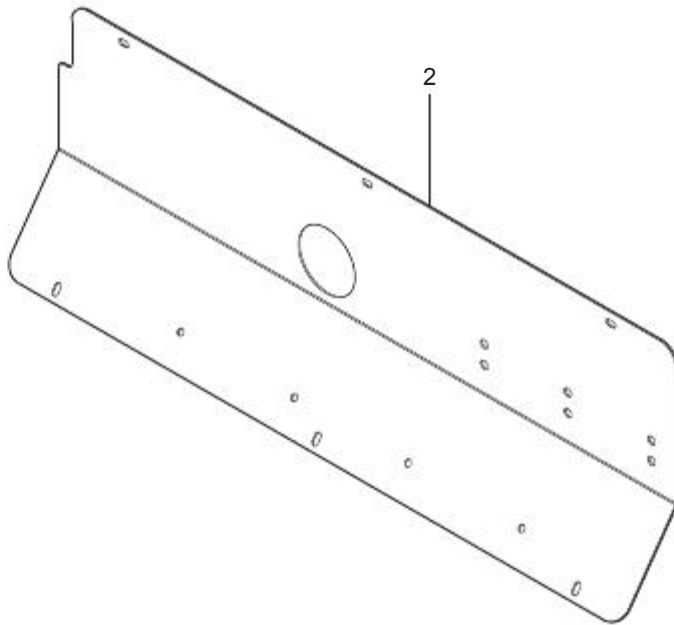



923. INST 파워 & 컨트롤 시스템 / INST POWER & CONTROL SYSTEM

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	플레이트 - 컨택터 박스 PLATE-CONTACTOR BOX		91114-C5141			1		
2 (201012 -)	플레이트 - 컨택트 박스 PLATE-CONTACT BOX		91114-N5000					
3 (201012 -)	리어 플레이트 REAR PLATE		91118-C5141a			1	1	
	1							

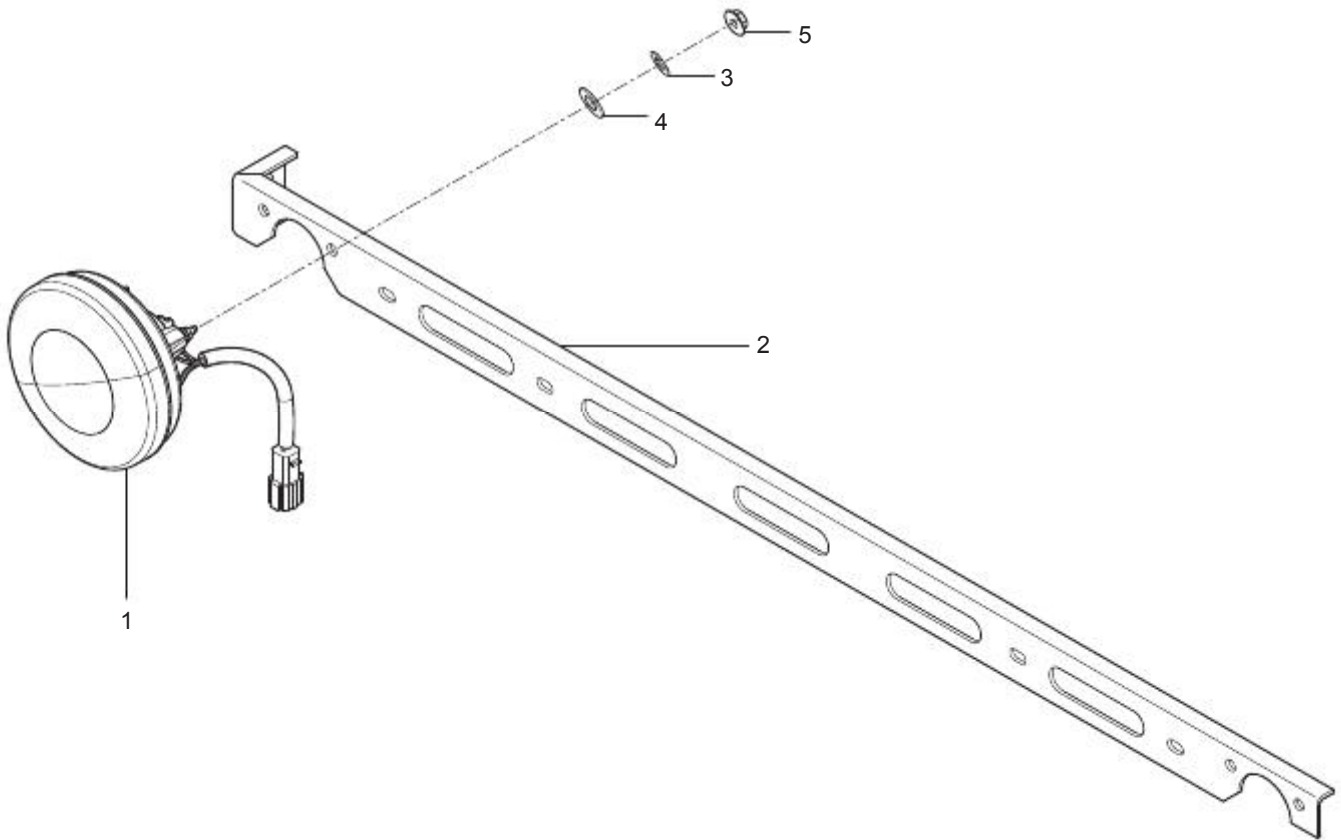



925. 리어 램프 / REAR LAMP

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리어 콤비. 램프 어셈블리 REAR COMBI. LAMP ASS'Y	92510-U5000	2	2				
		92510-N2000 2					2	
2 (201012 -)	스테이 - 리어. 콤비. 램프 STAY - RR. COMBI. LAMP	92521-U5030		1				
		92521-N5000a 1					1	
3 (201012 -)	와셔 - 스프링 WASHER - SPRING		H3102-0800S		4			
4 (201012 -)	와셔 - 플레인 WASHER - PLAIN		H3510-0800S		4			
5 (201012 -)	너트 NUT - HEX HEAD		H3105-0800S					
	4							

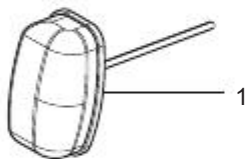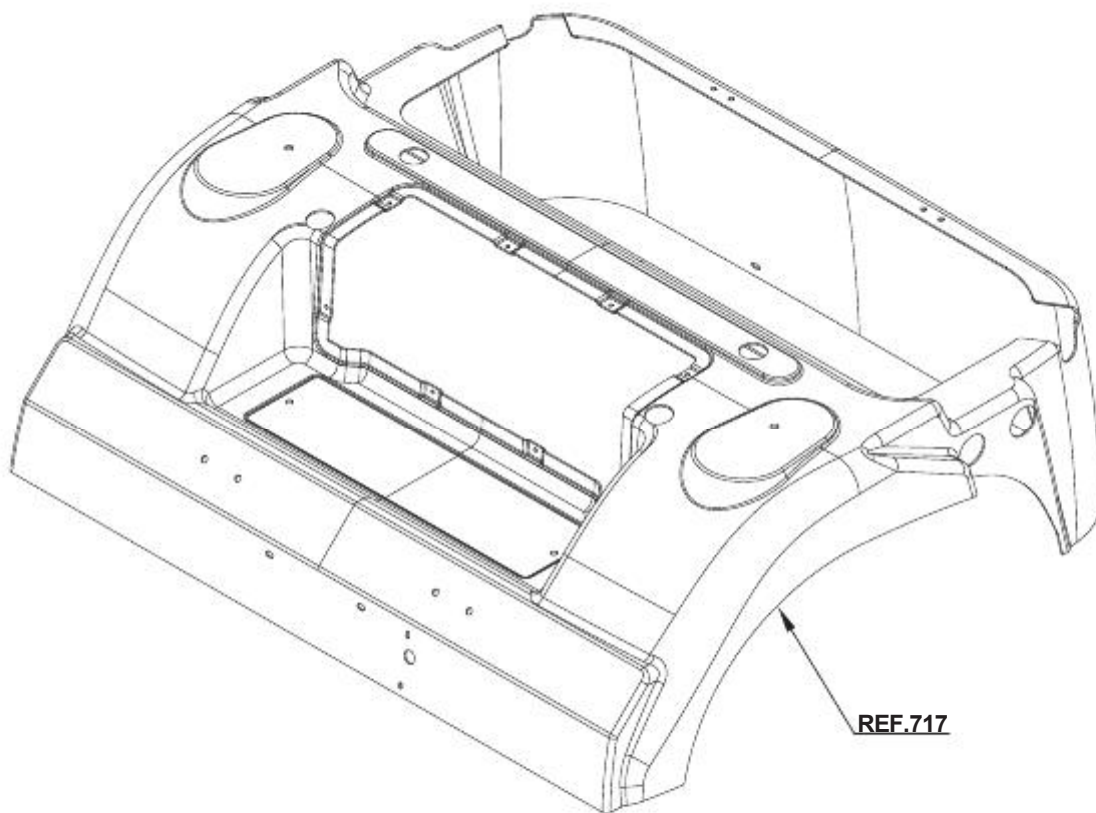


926. 라이선스 램프 어셈블리 / LICENSE LAMP ASS'Y

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	라이센스 램프 어셈블리 LICENSE LAMP ASS'Y		92600-N2000					
	1							

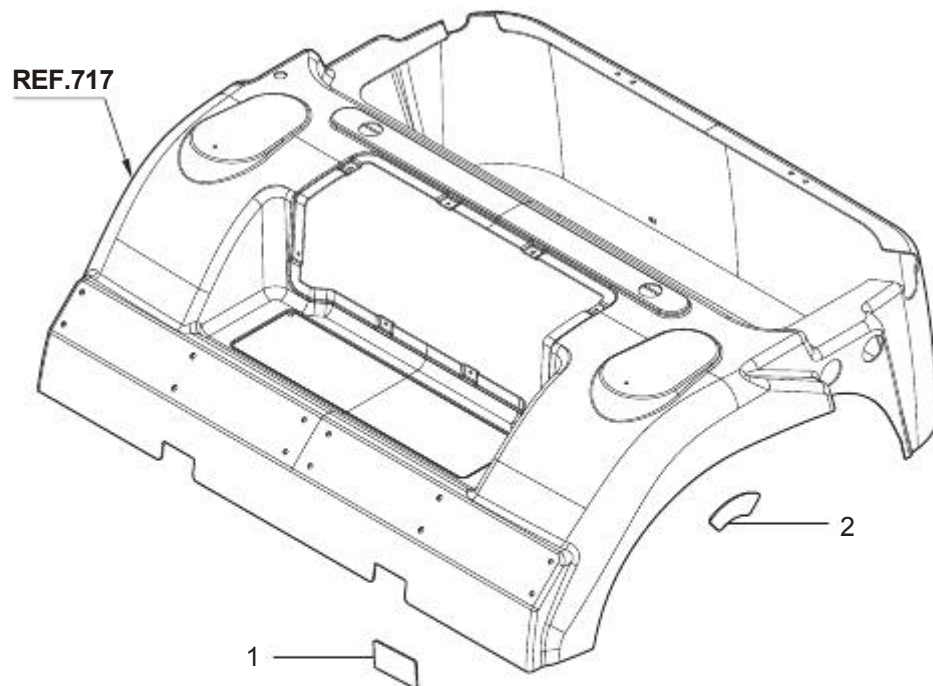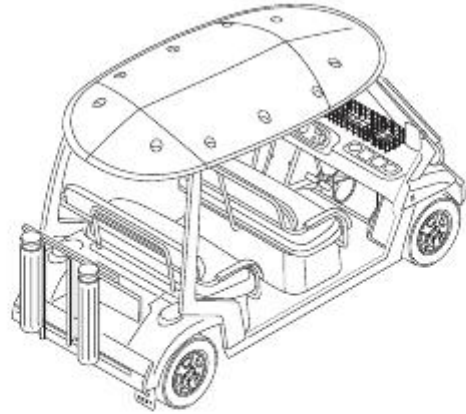


929. 리플렉터 / REFLECTOR

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	리플렉스 리플렉터 - 리어 REFLEX REFLECTOR - REAR	92900 - N2000					2	2
2 (201012 -)	리플렉스 리플렉터 - 리어 사이드 REFLEX REFLECTOR - REAR SIDE	92910 - N2000					2	2

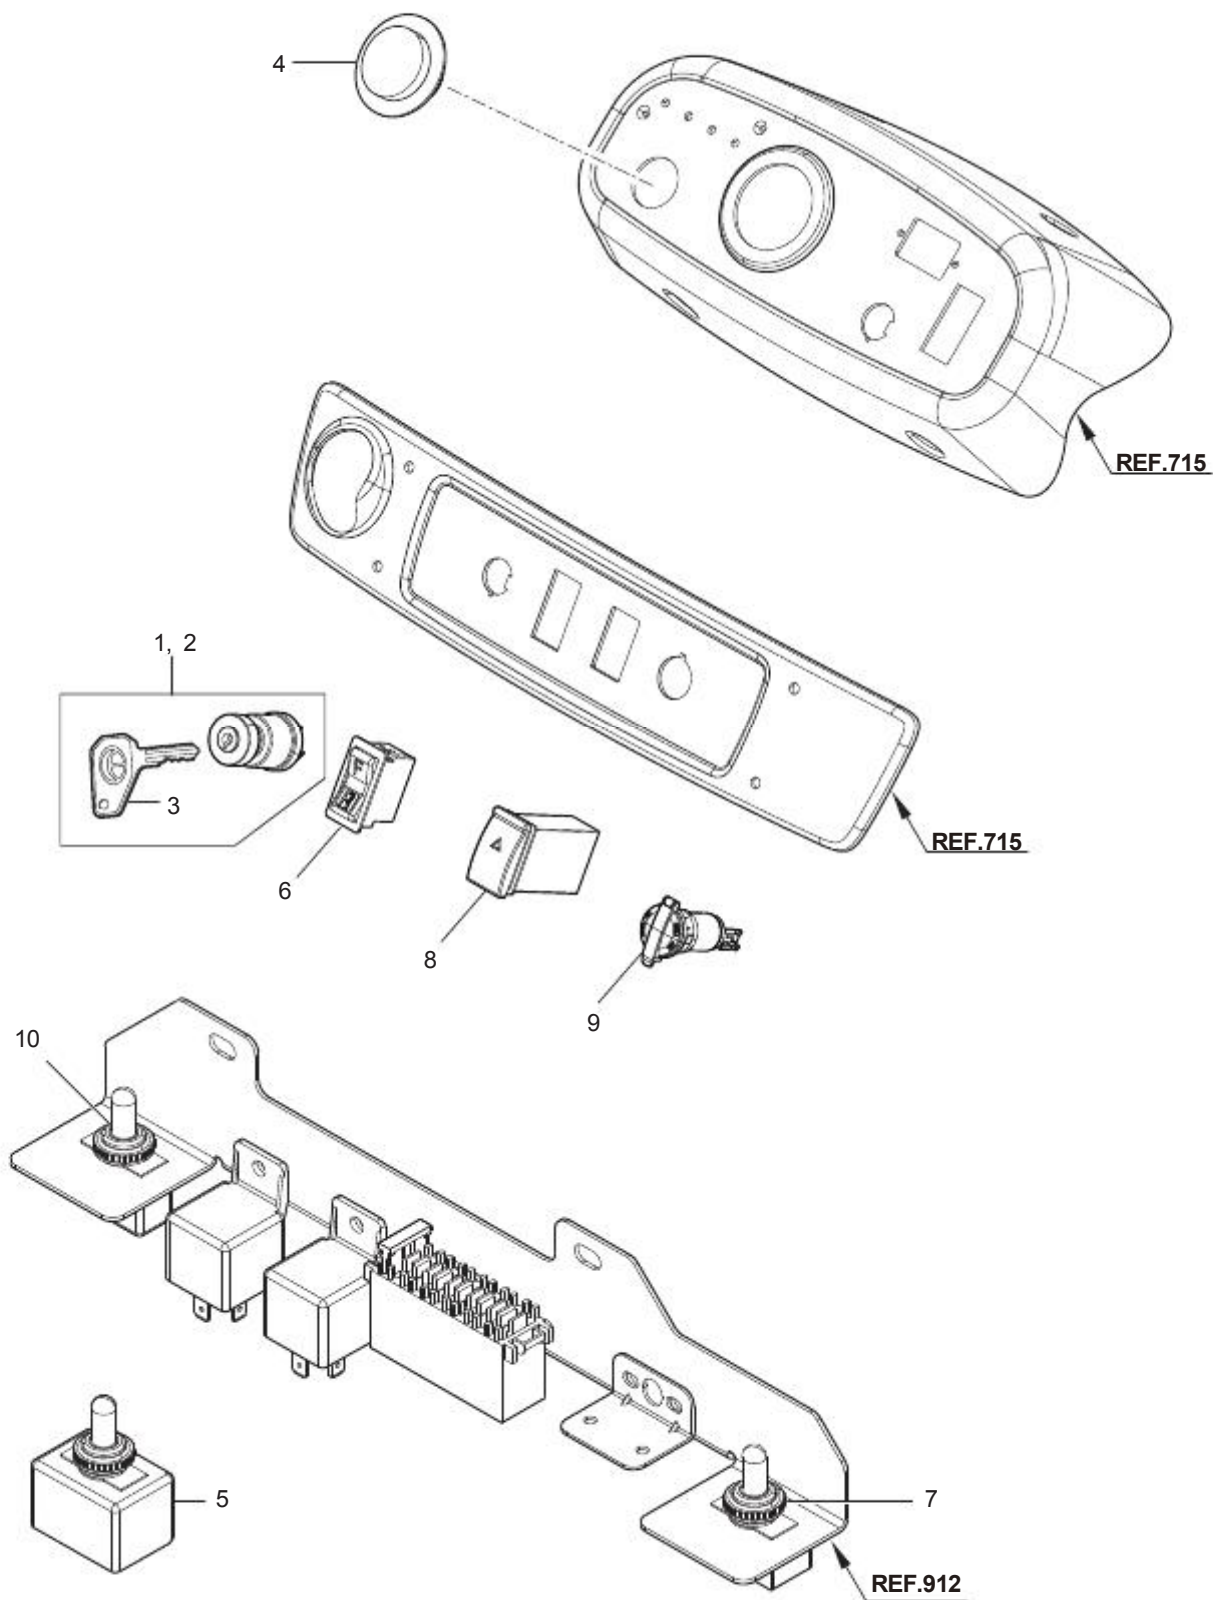


932. 스위치 어셈블리 / SWITCH ASS'Y

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	키 스위치 어셈블리 - 2 스텝 KEY SWITCH ASS'Y - 2 STEP	93200-C5100						
2 (201012 -)	키 스위치 어셈블리 - 3 스텝 KEY SWITCH ASS'Y - 3 STEP	93200-C5200				1	1	1
3 (201012 -)	키 유닛 KEY UNIT	93212-C5200					2	2
4 (201012 -)	스타트 스톱 스위치 어셈블리 START STOP SWITCH ASS'Y	93300-C5200a						
5 (201012 -)	토우 스위치 어셈블리 TOW SWITCH ASS'Y	93910-C5100b			1	1	1	1
6 (201012 -)	시프트 스위치 SHIFT SWITCH	93400-C5100			1	1	1	1
7 (201012 -)	팔로우 스위치 어셈블리 FOLLOW SWITCH ASS'Y	93750-C5241a						
8 (201012 -)	해azard 스위치 HAZARD SWITCH	93600-E2000						1
9 (201012 -)	파워 아울렛 POWER OUTLET	96500-E2001						1
10 (201012 -)	메인 스위치 어셈블리 MAIN SWITCH ASS'Y	93750-C5241A			1	1	1	1
	1							

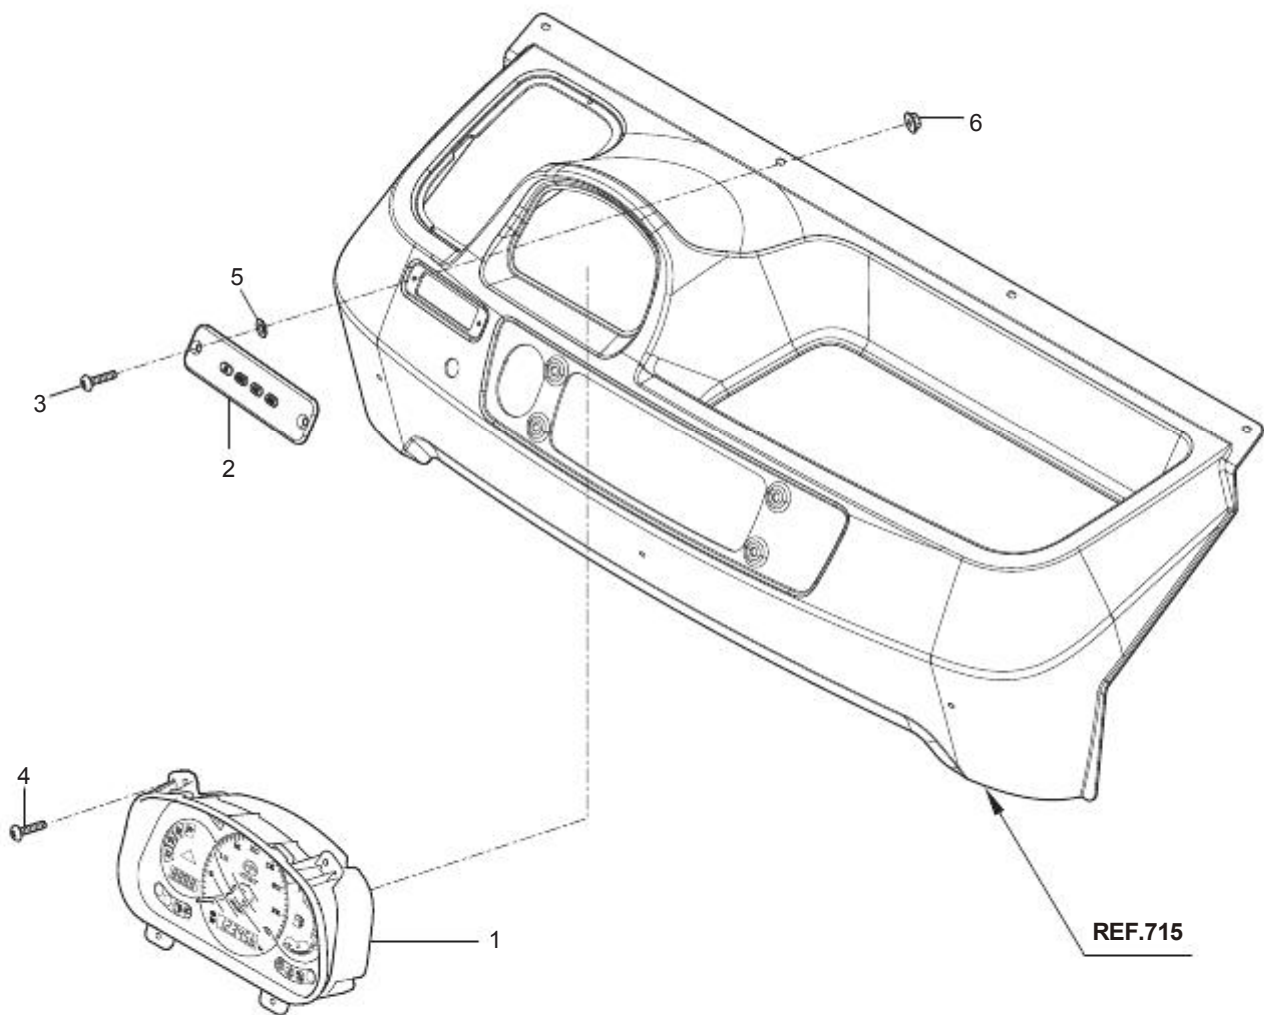


941. 클러스터 어셈블리 / CLUSTER ASS'Y

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	인스트루먼트 클러스터 어셈블리(MPH) INSTRUMENT CLUSTER ASS'Y(MPH)	94110-E2020c					1	1
2 (201012 -)	리셋 버튼 어셈블리 RESET BUTTON ASS'Y	94120-E2000					1	
3 (201012 -)	볼트 BOLT:접시 육각 M4x10mm	H2203-0410S					2	
4 (201012 -)	머신 스크류 - 트러스 헤드 MACHINE SCREW-TRUSS HEAD	H2208-0414Y					4	4
5 (201012 -)	와셔 - 플레인 WASHER-PLAIN	H3510-0400Y						2
6 (201012 -)	너트 NUT-HEX HEAD	H3105-0400Y						2
	2							

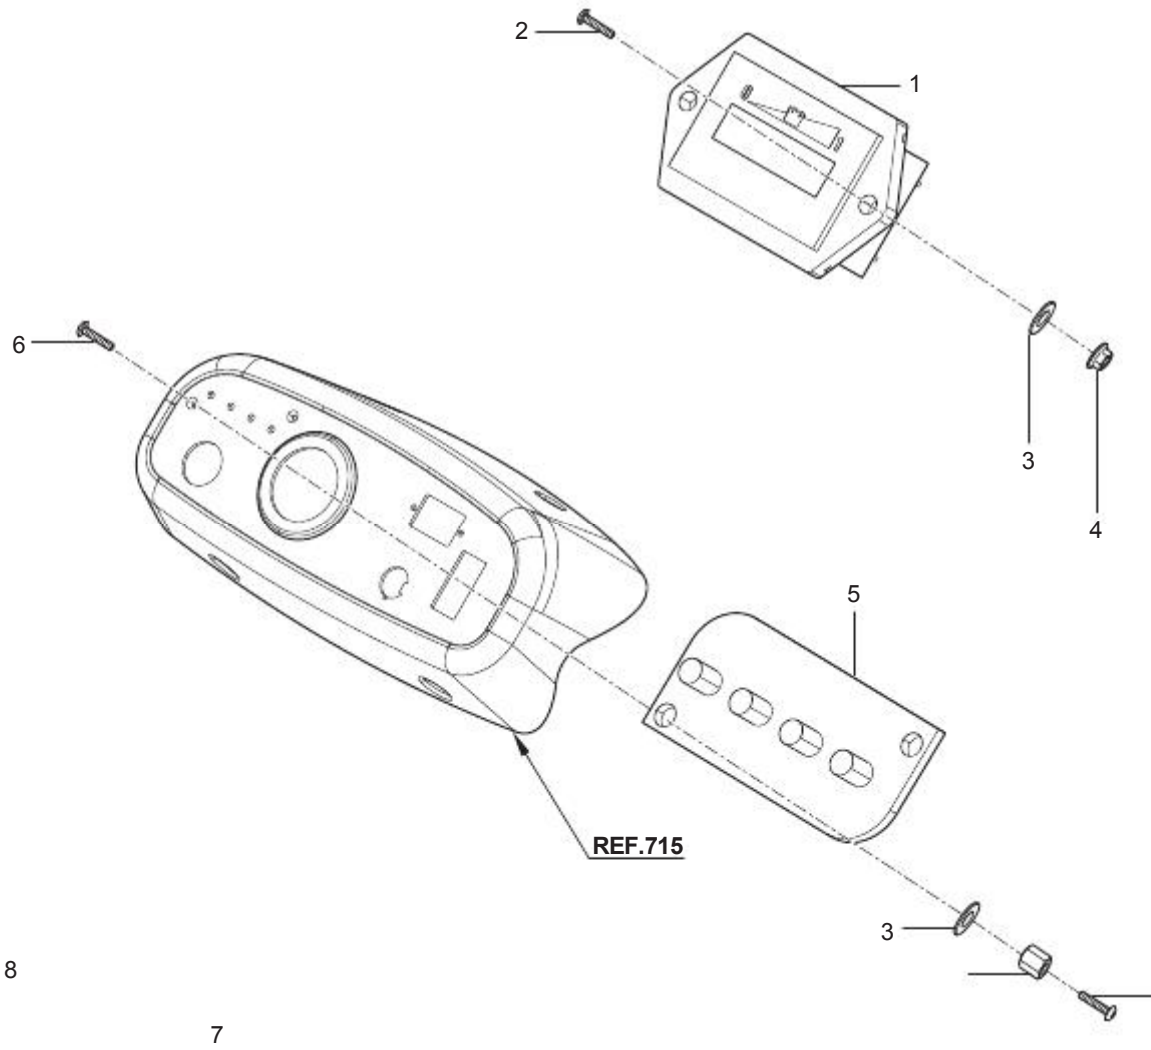


942. 인디케이터 / INDICATER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	배터리 게이지 BATTERY GAUGE		94200-C5100		1	1		
2 (201012 -)	머신 스크류 MACHINE SCREW-PAN HEAD, SEM'S(S/W+P/W)	H2291-0306S	2	2	2			
3 (201012 -)	와셔 - 플레인 WASHER - PLAIN	H3510-0300S			2	2		
4 (201012 -)	너트 NUT - HEX HEAD	H3105-0300S			2	2		
5 (201012 -)	AGV 스테이츠 디스플레이 유닛 AGV STATUS DISPLAY UNIT	94220-C5200						
6 (201012 -)	머신 스크류 MACHINE SCREW-FLAT HEAD	H2203-0305S				2		
7 (201012 -)	머신 스크류 MACHINE SCREW - PAN HEAD, SEM'S(S/W+P/W)	H2291-0306S			2			
8 (201012 -)	PCB 스페이서 M3*12mm-SUS PCB SPACER M3*12mm-SUS	H3000-0312S				2		

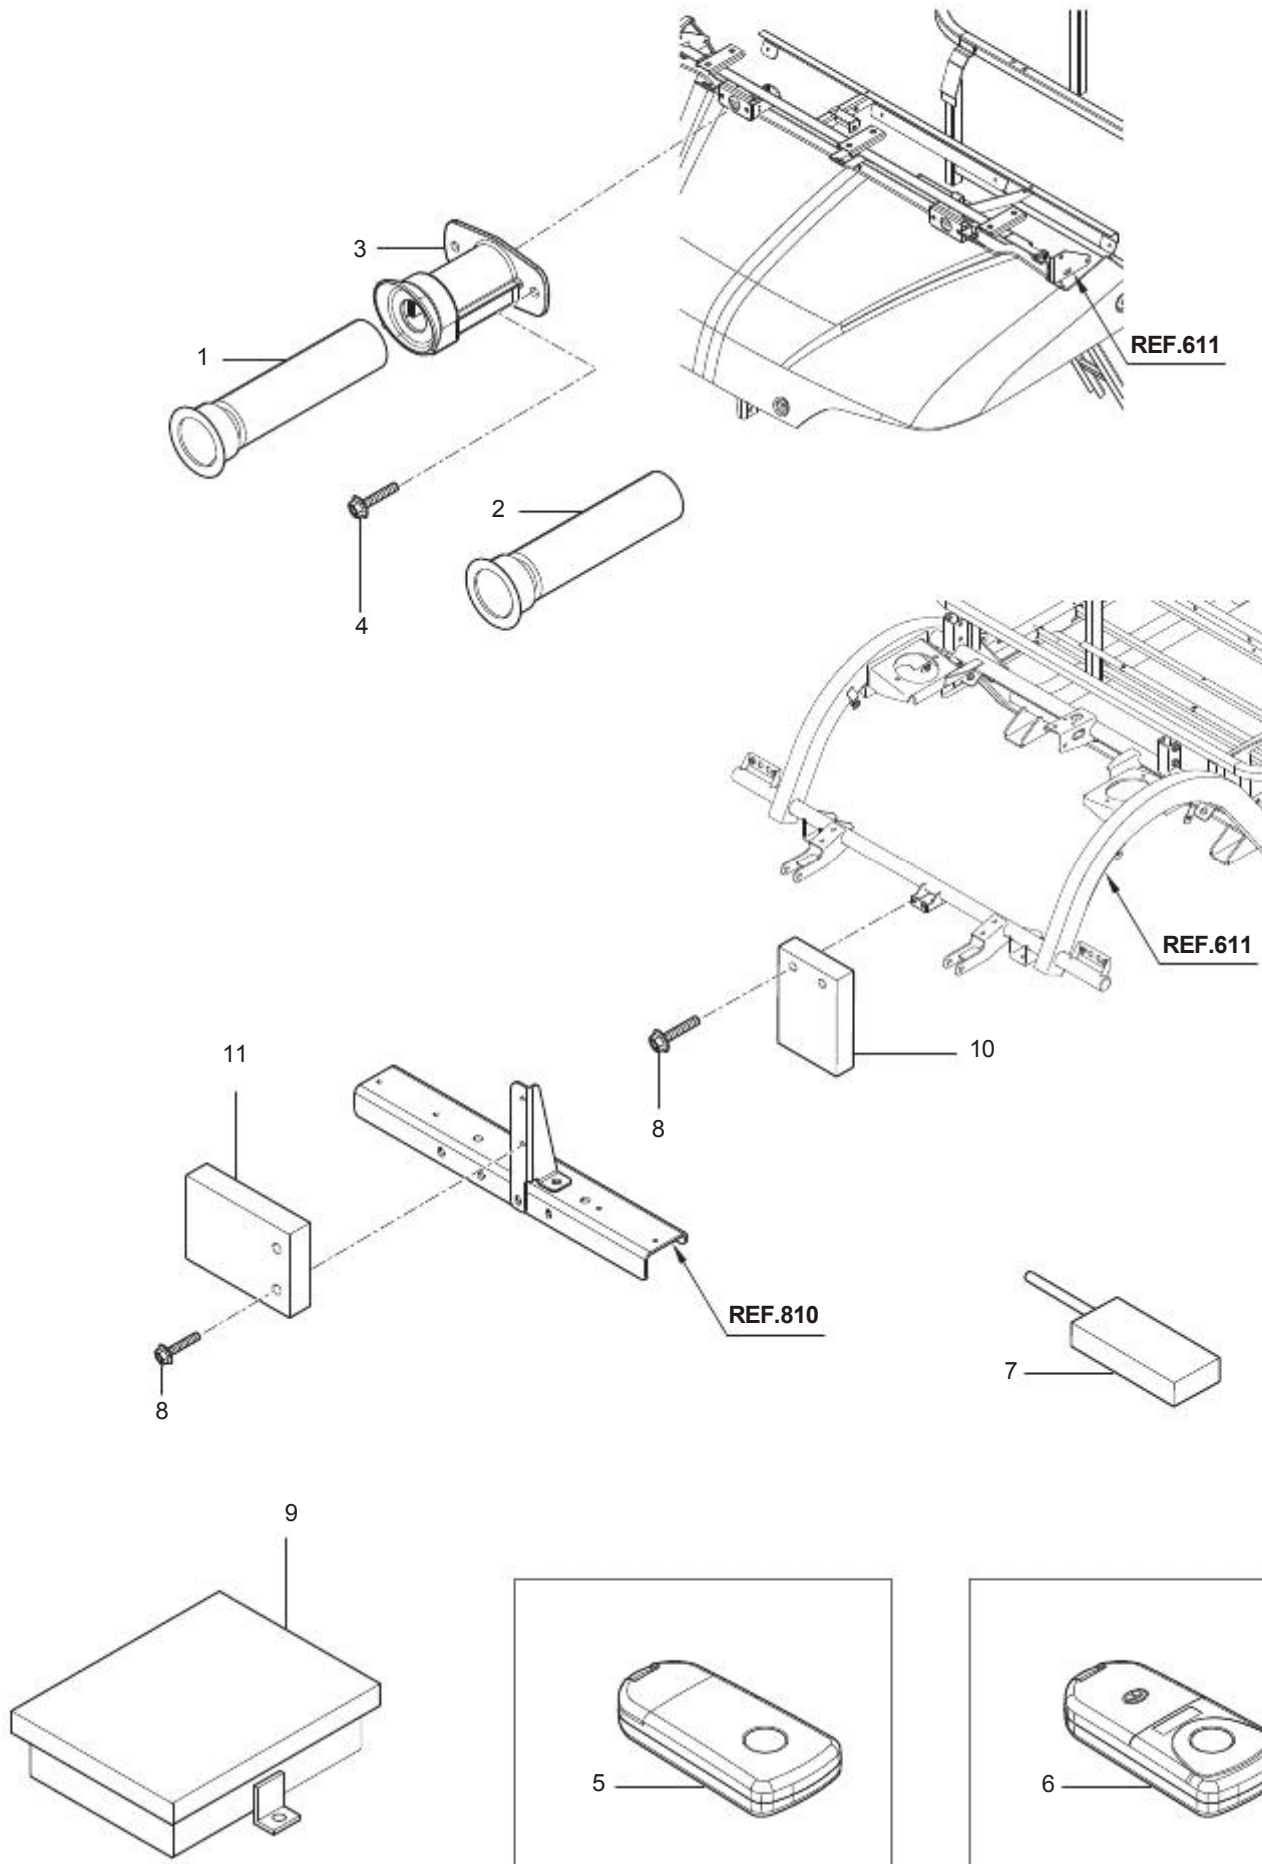


944. 센서 / SENSOR

[illegible]

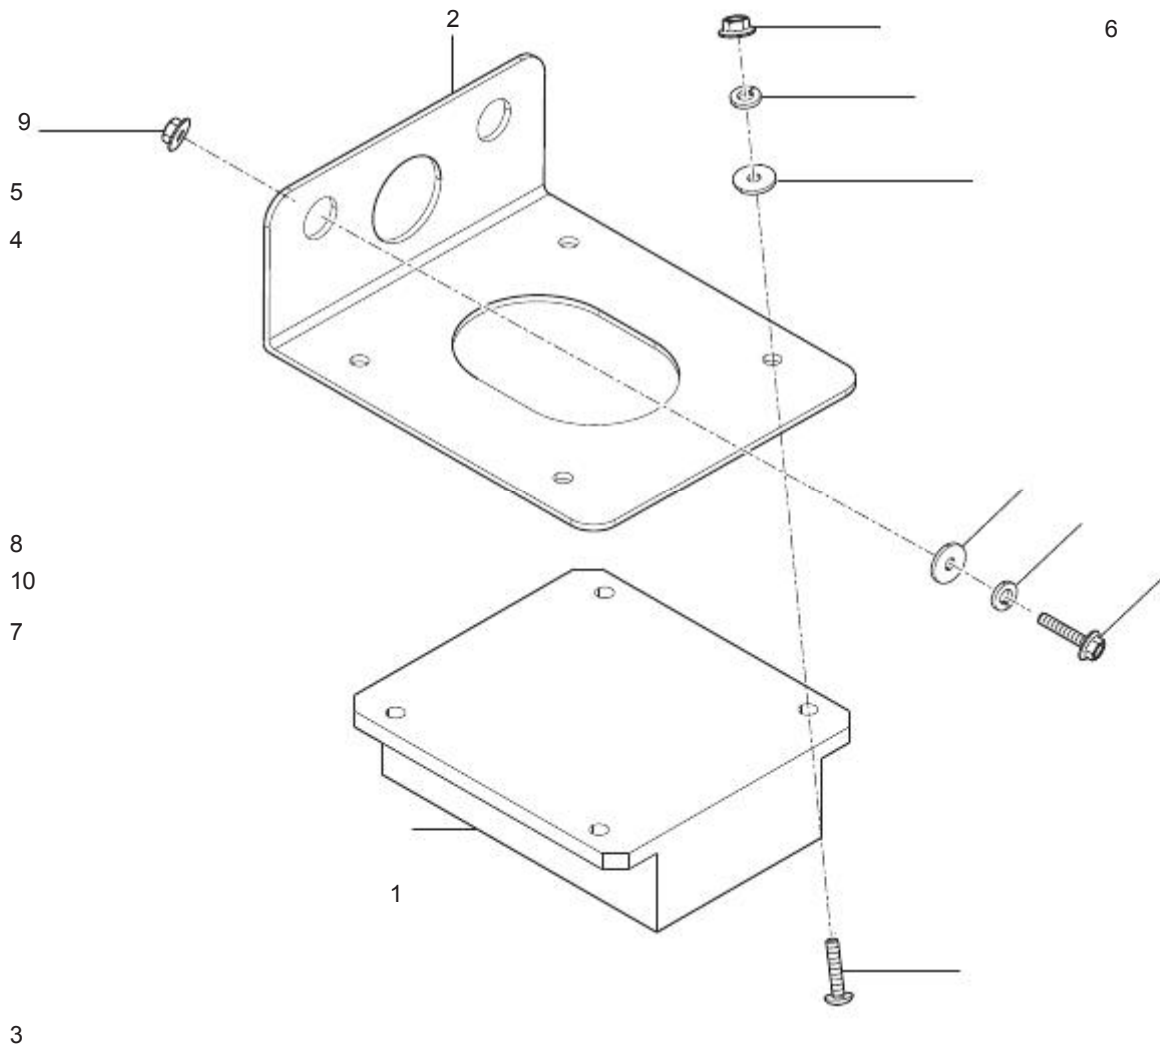


945. 마그넷 센서 / MAGNET SENSOR

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	마그넷 센서 MAGNET SENSOR	94450-C5200 VCT				1		
		94450-C5210 CT				1		
2 (201012 -)	브라켓 - 마그넷 센서 BRACKET - MAGNET SENSOR	94432-C5200a				1		
3 (201012 -)	머신 스크류 - 트러스 헤드 MACHINE SCREW - TRUSS HEAD	H2208-0414Y				4		
4 (201012 -)	와셔 - 플레인 WASHER - PLAIN	H3510-0400Y						
5 (201012 -)	와셔 - 8스프링 WASHER - SPRING	H3102-0400Y						
6 (201012 -)	너트 4 NUT - HEX HEAD	H3105-0400Y						
7 (201012 -)	볼트 4 BOLT - HEX HD	H1205-0820Y						
8 (201012 -)	와셔 - 2플레인 WASHER-PLAIN	H3510-0800Y						
9 (201012 -)	너트 2 NUT - HEX HEAD	H3105-0800Y						
10 (201012 -)	와셔 - 2스프링 WASHER - SPRING	H3102-0800Y						
	2							

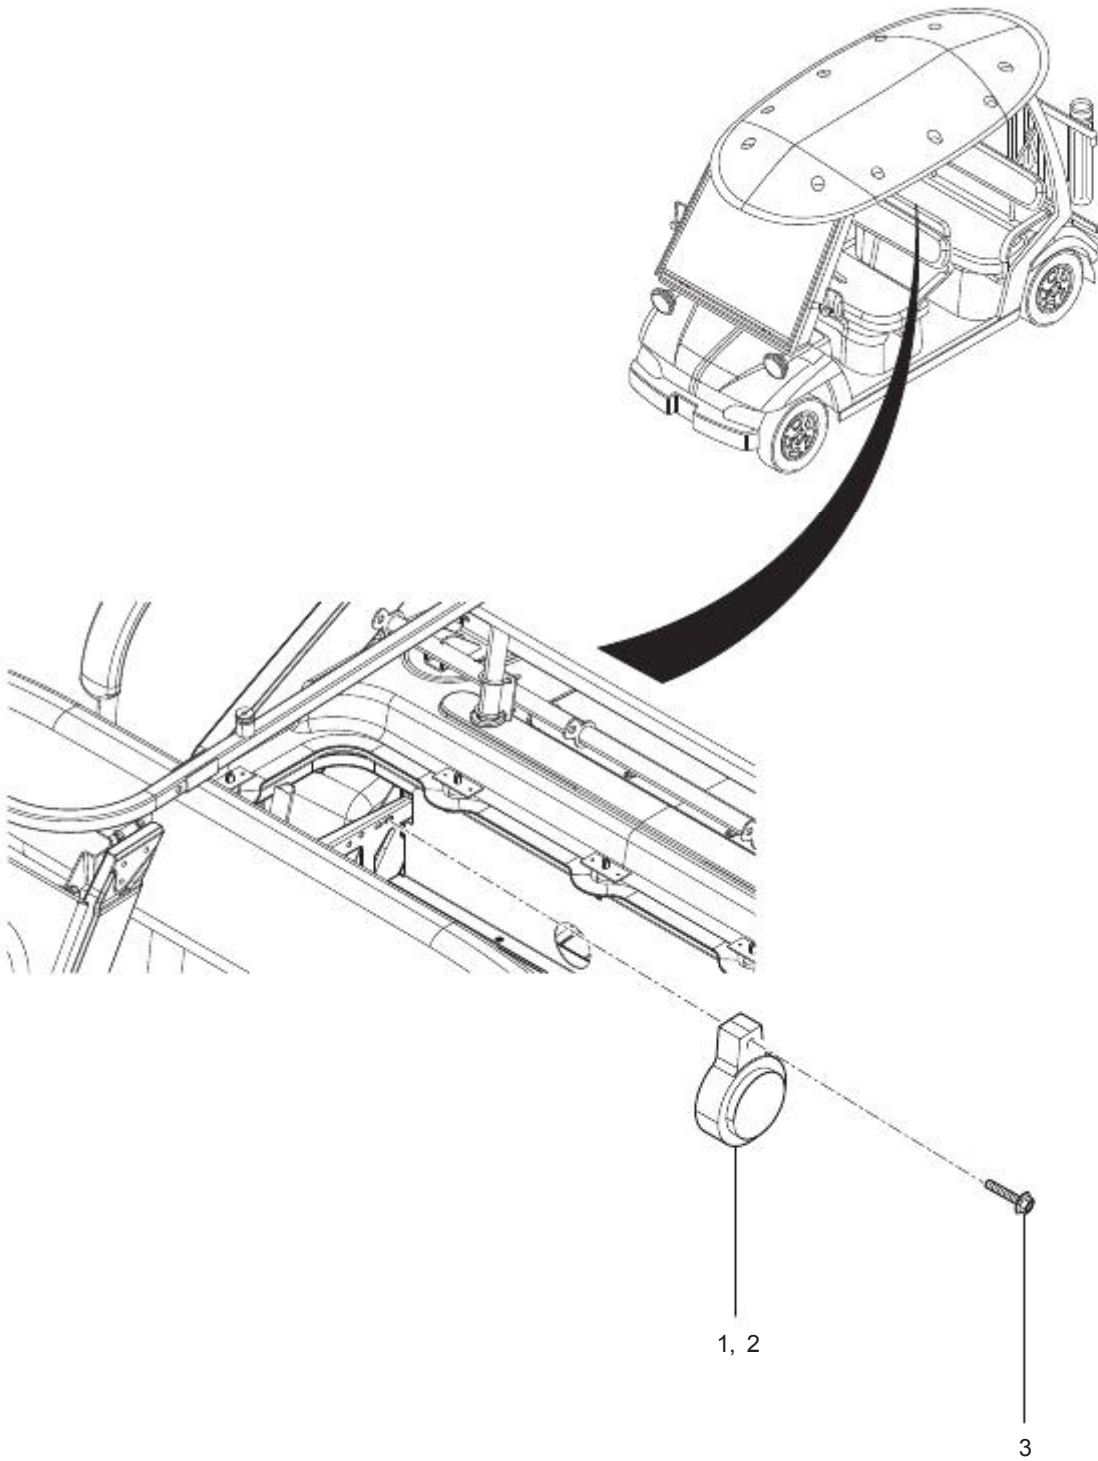


947. 백업 버저 / BACKUP BUZZER

[illegible]

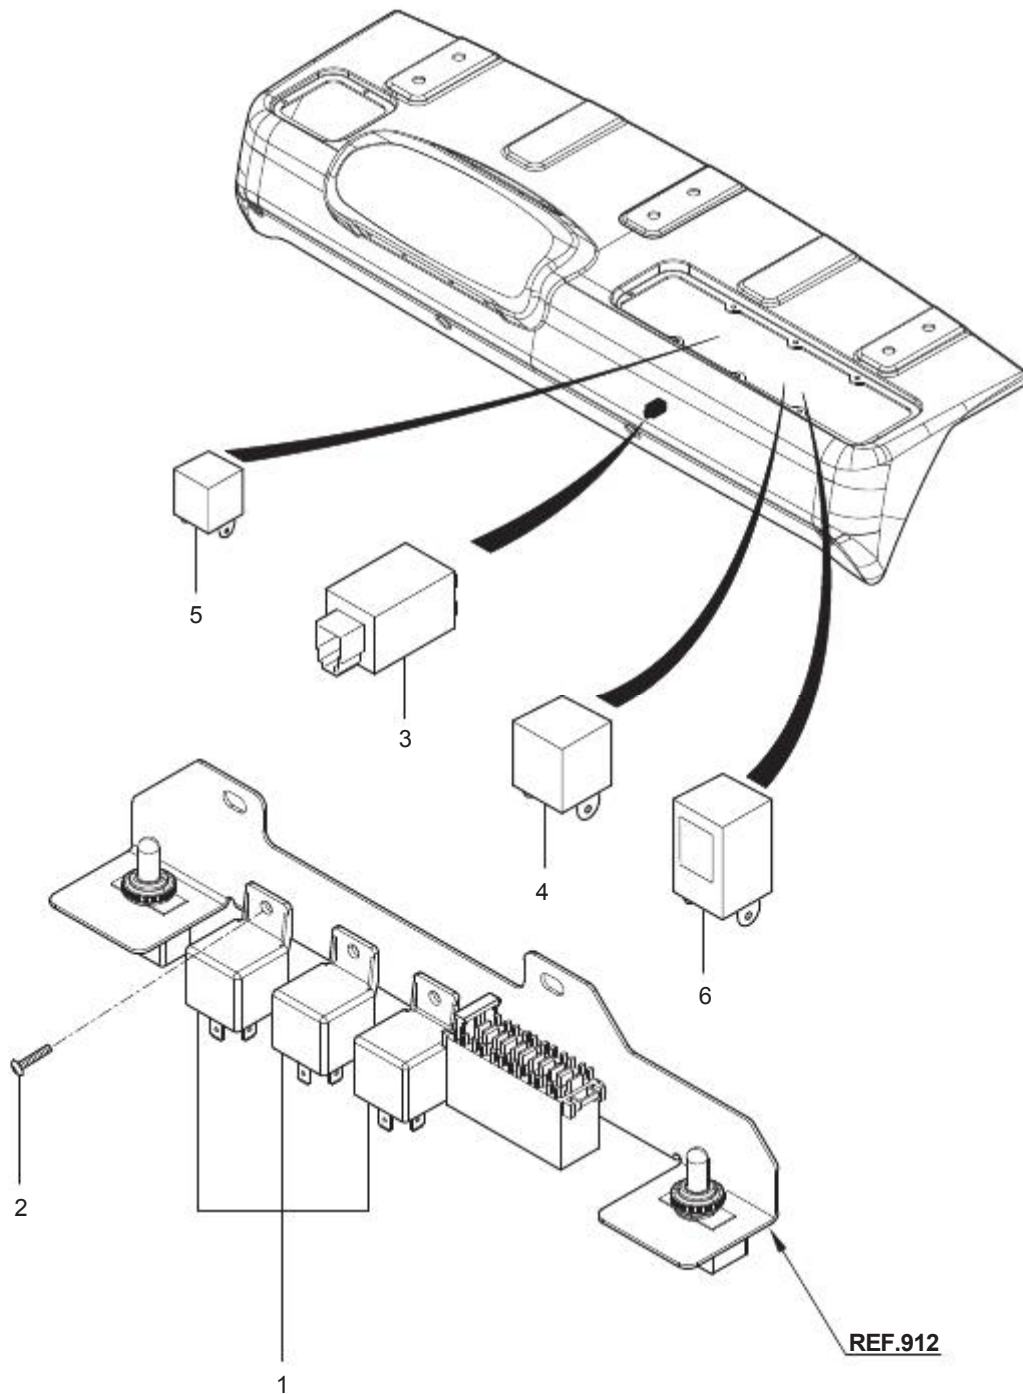


951. 릴레이 / RELAY

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	릴레이 - 48V 5P RELAY - 48V 5P		95111-C5101		3	3		
2 (201012 -)	머신 스크류 - 트러스 헤드 MACHINE SCREW-TRUSS HEAD	H2208	0620Y	3	3	2		
3 (201012 -)	플래셔 유닛 FLASHER UNIT		95300-U5000			1		1
4 (201012 -)	릴레이 - 12V 4P RELAY - 12V 4P		95411-U5001					
5 (201012 -)	5P 릴레이 5P RELAY		95110-E2000					1
6 (201012 -)	12V 마이크로 릴레이 12V MICRO RELAY		95120-E2000					5
	5							

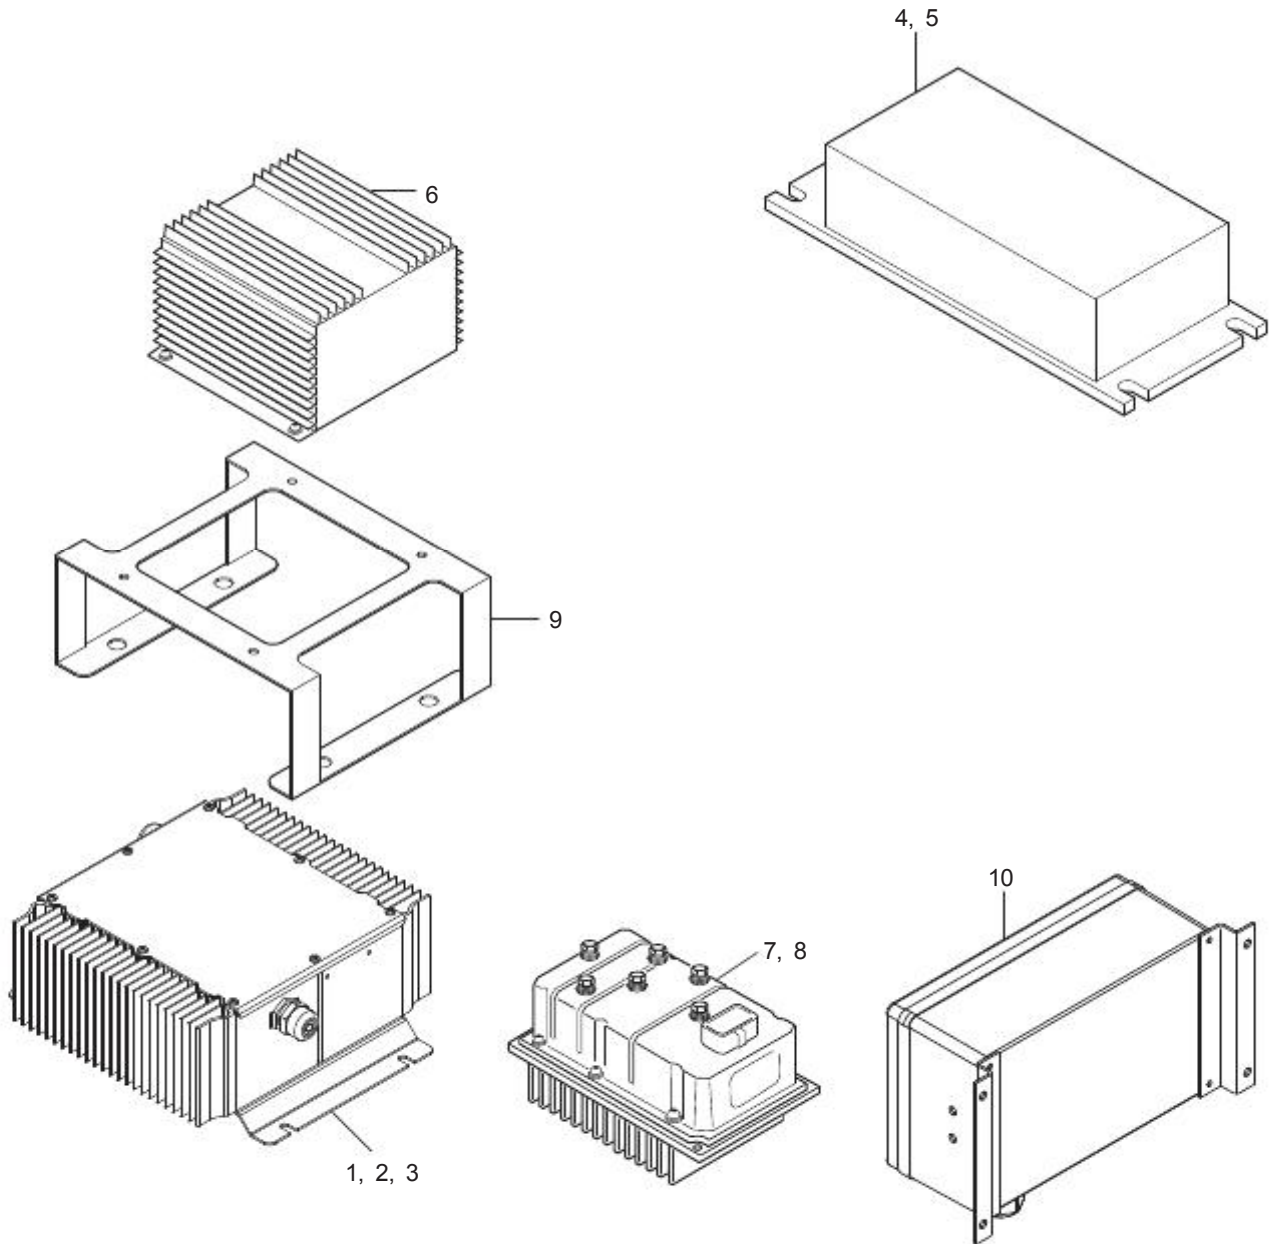

972. 충전기 / CHARGER

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	충전기 어셈블리 온보드 CHARGER ASS'Y ONBOARD(Delta-q)	97220-E2000a 1						
		97220-E2000a 1						
2 (201012 -)	충전기 어셈블리 - 온 보드 CHARGER ASS'Y - ON BOARD(DELTA-Q)_N	97270-C5231b	1		1			
3 (201012 -)	충전기 어셈블리 - 온 보드 CHARGER ASS'Y - ON BOARD(SIGNET)	97270-C5101		1	1	1		
4 (201012 -)	DC DC 컨버터 DC DC CONVERTER	97710-U5900			1			
5 (201012 -)	DC DC 컨버터, 72V DC DC CONVERTER, 72V	97700-E2001						2
6 (201012 -)	2 AGV 컨트롤러 AGV CONTROLLER	97800-C5210 VCT				1		
		97800-C5241 CT				1		
7 (201012 -)	트랙션 컨트롤러 TRACTION CONTROLLER	97630-C5141a		1				
8 (201012 -)	트랙션 컨트롤러 어셈블리 - SEVCON TRACTION CONTROLLER ASS'Y - SEVCON	97610-E2001					1	
9 (201012 -)	서포트 - AGV 컨트롤러 SUPPORT - AGV CONTROLLER	97231-C5230				1	1	1
10 (201012 -)	컨택터 박스 어셈블리 CONTACTOR BOX ASS'Y	97300-C2000	1					
		97300-C5100						
		97300-C5200 1						
		97300-N2000 1						
		97300-N5000 1						

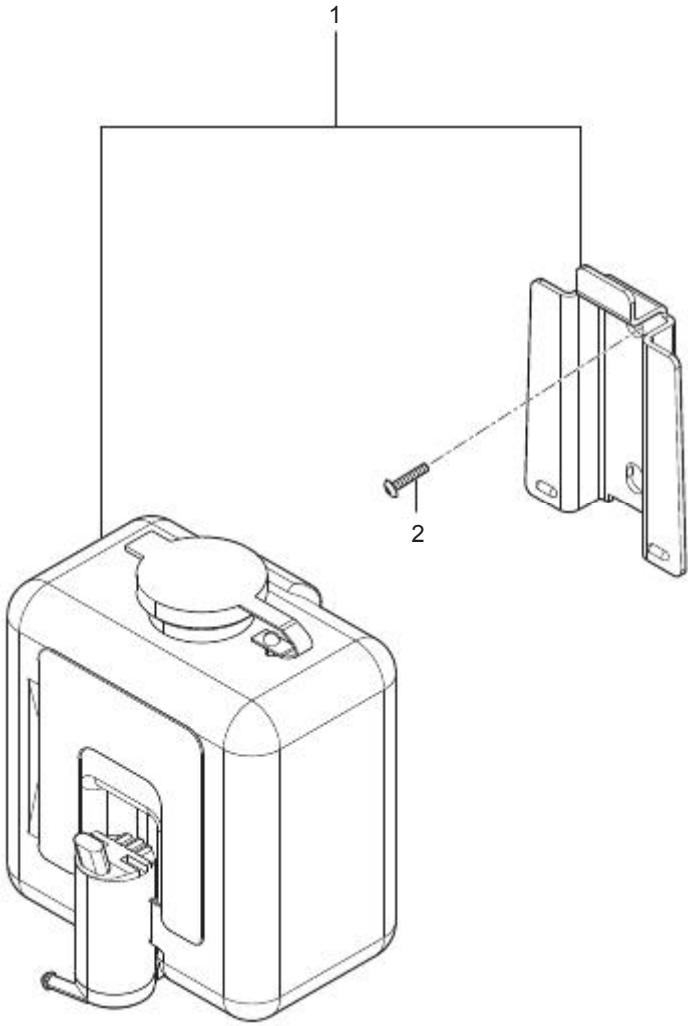

980. 워셔 탱크 / WASHER TANK

번호 (실시기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	윈드실드 워셔 탱크 어셈블리 WINDSHIELD WASHER TANK ASS'Y	99200-E2000					1	
2 (201012 -)	볼트 BOLT:SAM'S M6x20mm	H1246-0620Y					2	
	2							

4

수동 운전 조작 요령

1. 브레이크 페달을 밟은 상태에서 키 스위치를 "MANUAL"으로 놓은 후 방향선택 스위치를 원하는 방향으로 두십시오. 수동이 선택되면 "MANUAL" 램프가 점등됩니다.(P-전진, R-후진, 중립-중립)
2. 주행방향에 장애물이나 위험성이 있는지 확인하시기 바랍니다.
3. 브레이크 페달에서 발을 떼고 전진히 역선회하다 페달을 밟으면 차가 움직이기 시작하며, 페달을 밟아 가속하십시오.
4. 주행 중에는 절대로 키 스위치를 "OFF" 하지 마십시오.
(급정지의 위험이 있을 수 있습니다.)
5. 차량을 멈추려면 역선회하다 페달에서 발을 떼고 브레이크 페달을 밟으십시오.
6. 차량이 정지하면 주차 브레이크가 자동적으로 작동합니다.
7. 전, 후진스위치의 변경은 차량이 완전히 멈춘상태에서 선택하여 주십시오
8. 출발시 역선회하다 페달을 밟으면 주차브레이크가 풀립니다.
9. 사물하지 감출때에는, 전, 후진 스위치를 중립으로 하시고 키를 "OFF"로 돌리고 뱉주십시오.
10. 차량이 완전히 정지한 후 승,하차하여 주십시오.
11. 안전상, 가까운 길에서는 차량을 정지하지 않도록 해 주십시오.
12. 견인시에는 견인스위치를 "견인"으로 위치를 변경하십시오.

자동 운전 조작 요령

1. 차량을 유도선상 위에서 유도선과 나란하게 정렬합니다.
2. 자동운전은 견인번호입니다. KEY 스위치 "AUTO"(자동) 상태에서 방향선택 스위치를 반드시 "F"(전진)으로 해 주십시오. 차량이 선택되면 "AUTO"램프가 점등됩니다. 차량이 유도선 위에 있으면 "AG"램프가 점등됩니다.
3. 차량의 출발, 정지는 "출발/정지"(GO/STOP, 녹색) 버튼 또는 인도번호로 조작해 주십시오.
4. 자동운전 중에는 핸들 및 역선회 페달의 조작은 불가능합니다. 브레이크 페달로 정지만 조작 가능합니다.
5. 차량이 정지하면 주차브레이크가 자동적으로 작동합니다. 또 출발시는 자동적으로 해제됩니다.
6. 안전상, 주행속도는 상황에 따라 자동적으로 가속, 감속합니다.
7. 정해진 정지장에서는 차량은 자동적으로 정지합니다. 또, 추돌 방지 기능이 작동하면 자동적으로 정지합니다.
8. 자동운전에서 주행 중에 전방의 차량에 접근했을 경우 페달을 밟아 정지해 주십시오.
(차간거리 4m이상 띄어 주십시오) 접근하면 추돌 방지와 안전장치가 작동하여 급정지합니다.
9. 자동 운전시 정지시라도 키 스위치를 "OFF"로 놓지 않도록 하십시오.
추돌을 방지하면 안전장치의 기능이 정상입니다.
10. 수동전환은 반드시 정지 상태에서만 가능합니다.
11. 이상을 감지하면 차량은 자동적으로 정지하고, "ALARM"(경고, 적색) 램프가 점등됩니다.

견인시 주의사항

1. 견인시는 견인스위치를 반드시 "견인"에 두십시오.
("주행"에 두었을 경우 견인중에 주요 전기 부품이 소손될 수 있습니다.)
2. 차량의 항상 운행시에는 견인 스위치를 반드시 "주행"에 두십시오.
3. 견인에서 견인스위치를 작동할 경우 차량의 브레이크가 해제되어 차량이 굴러 내려 갈 수 있으므로 주의바랍니다.

주의사항

1. 운행하기 전에 사용설명서에 명시된 조작 제어방법과 안전사항을 숙지 하십시오.
2. 운행전 조향장치 및 브레이크의 작동을 확인하십시오
3. 승차후 반드시 앉고신고 신체가 차량으로 나오지 않도록 하고, 손잡이를 잡아주십시오.
4. 출발시 승차인원 적인, 전방 및 후방의 안전을 확인하고 출발하십시오.
5. 경사로, 커브, 기타 위험한 지역에서는 진행 전에 안전을 재확인하고 운행하십시오.
6. 견인이 멈출 때까지 의자에서 일어나거나 내려서는 안되며, 되고 내려를 주의하십시오.

2

경고 운행중 위험하오니 손잡이를 꼭 잡으십시오.

3

경고 후속차 주의 후속차 충돌 위험

7

경고


물 세척 금지

6

충전시 주의사항

1. 충전시 견인스위치는 반드시 "OFF" 위치로 해 주십시오.
2. 충전은 반드시 규정한 전류 및 전압으로 하십시오.
3. 만 충전시, 불충전, 과충전, 과방전을 피하고 통풍이 잘되는 곳에서 하십시오.
4. 과충전의 위험이 있으므로 빛은 손으로 콘센트나 충전기를

12

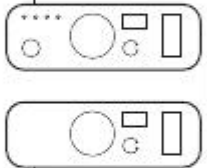

13

14

(P) PARKING

16

SEAT HEATER
ON
OFF

11

주의

1. Battery의 정비 및 취급은 대단히 위험하므로 사용설명서의 내용을 충실히 숙지하신 후 작업하십시오.
2. 전압측은 높은 충전력으로, 강한 독성 및 부식성을 포함하므로 인체 및 차량에 닿지 않도록 주의하십시오.
3. 인체, 물건을 감투에는 절대 사용하지 마십시오.
4. 전압측의 바늘 및 수위를 정기적으로 점검하여 가운데 미달시 충전 및 중류수 보충을 하십시오.
5. Battery의 연결선은 양사의 규격품을 사용하시고, 임의 변경 및 오용은 심각한 사고를 유발할 수 있습니다.
6. 화기의 점근은 Battery 폭발의 원인이 될 수 있으므로 절대 관하여 주십시오.

정상

켜짐

견인

켜짐

추진

켜짐

꺼짐

OFF

주행

켜짐

OFF

꺼짐

991. DECAL(국문)

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	데칼 - 핸들 작동 지침 DECAL-OPERATING INSTRUCTION HANDLE	99111-C5100	1		1			
2 (201012 -)	데칼 - 핸드 그립 경고 DECAL-Hand Grip 경고	99112-C5100			1	1		
3 (201012 -)	데칼 - 후속차 주의 DECAL-후속차 주의	99113-C5100			1			
4 (201012 -)	데칼 - 운전요령 수동 DECAL-운전요령 수동	99114-C5100			1	1		
5 (201012 -)	데칼 - 운전요령 유도 DECAL-운전요령 유도	99114-C5200			1	1		
6 (201012 -)	데칼 - 충전기 지침 DECAL-Charging Instruction	99115-C5100			1	1		
7 (201012 -)	데칼 - 물 주의 DECAL-Water Warning	99116-C5100			1	1		
8 (201012 -)	데칼 - 드라이브 S/W DECAL-Drive S/W	99117-C5100			1	1		
9 (201012 -)	데칼 - 견인 S/W DECAL-Tow S/W	99118-C5100			1	1		
10 (201012 -)	데칼 - 견인 지침 DECAL-Tow Instruction	99119-C5100			1	1		
11 (201012 -)	데칼 - 배터리 경고 DECAL-Battery Warning	99121-C5100			1	1		
12 (201012 -)	데칼 - 컬럼 커버 매뉴얼 DECAL-Column Cover MANUAL	99122-C5100			1			
13 (201012 -)	데칼 - 컬럼 커버 AGV DECAL-Column Cover AGV	99122-C5200						
14 (201012 -)	데칼 - 주차 브레이크 DECAL-Parking brake	99123-C5100			1			
15 (201012 -)	데칼 - 지시 S/W DECAL-Follow S/W	99124-C5200						
16 (201012 -)	데칼 - 시트 히터 S/W DECAL-SEAT HEATER S/W	99125-C5100c			1	1		

4

How to drive in the manual mode.

1. While the brake pedal is pressed, shift the key switch to 'Manual.' After that, shift the direction selection switch to the desired position. If the manual mode is selected, the 'Manual' lamp will be lit.
(F=Forward, R=Backward, Middle=Neutral)
2. Check if any obstacle or danger lies in the direction of driving.
3. Release the brake pedal and press the accelerator pedal gradually. The vehicle will start moving. Accelerate your vehicle by pressing the accelerator pedal.
4. Do not ever turn off the key switch.
(It may lead to the dangerous sudden-stop.)
5. If you want to stop your vehicle, release the accelerator pedal and stop on the brake pedal.
6. When the vehicle stops, the parking brake is activated automatically. For your safety, your foot must remain on the brake until the vehicle stops completely and the parking brake is activated.
7. Before shifting the forward/backward switch, you must wait until your vehicle is stopped completely.
8. Before driving your vehicle, press the accelerator pedal to release the parking brake.
9. When you don't use the vehicle, shift the forward/backward switch to 'Neutral.' And, turn the key to 'OFF' and remove the key.
10. Get in or out of your vehicle after it is completely stopped.
11. For your safety, do not stop your vehicle on a slope.
12. When you tow a vehicle, shift the tow switch to the 'Tow' mode.

How to drive in the auto mode

1. Have your vehicle stop on the guide line. Line up your vehicle with the guide line.
2. In the auto mode, you may only move forward. When the key switch in the 'Auto' mode, shift the direction selection switch to 'Forward.' If the auto mode is selected, then the 'Auto' lamp will be lit.
3. To start/stop your vehicle, use the 'Start/Stop' button (green) or the remote control unit.
4. During auto driving, you may not maneuver the handle or the accelerator. You may only use the brake pedal.
5. When the vehicle stops, the parking brake is activated automatically. When the vehicle starts moving, it is released automatically.
6. For your safety, the driving speed is accelerated or decelerated automatically depending on the circumstance.
7. The vehicle will stop at the location which was specified beforehand. If the rear end collision prevention function is activated, it will also stop automatically.
8. If your vehicle approaches the vehicle in front of it, you may press the brake pedal to stop your vehicle. (The distance between two vehicles must be 4 m or more.) If two vehicles are too close to each other, then the rear end collision prevention system will be activated to initiate the sudden-stop.
9. During auto driving, do not leave the key switch in the 'OFF' mode even when the vehicle is stopped. It will deactivate the rear end collision prevention system.
10. You may switch to the manual mode only when the vehicle is already stopped.
11. If any type of defect is detected, the vehicle will stop automatically, the 'Alarm(warning,red) lamp will be lit.

10

Cautions for Towing

1. When you tow your vehicle, you must shift the tow switch to 'Tow'. (If it is in the 'Drive' mode, the main electrical components may be damaged while towing your vehicle.)
2. For normal driving, shift the tow switch to 'Drive'.
3. If you maneuver the tow switch when your vehicle on the slope, the brake may get released and the vehicle may slide down.

1

CAUTIONS

1. Before driving this vehicle, be aware of all the control methods and the safety instructions specified in this manual.
2. Before driving, check the operation of steering device and brake.
3. After getting in the vehicle, please, remain seated. Hold the handle tightly and don't let any part of your body stick out of the vehicle.
4. Before starting your vehicle, check if all the passengers are seated and if the front and the rear are cleared.
5. When you drive in dangerous areas such as uphill/downhill, a sharp turn and etc., check your safety first before you proceed.
6. Do not stand up from your seat or get out of your vehicle until it is stopped completely. Be careful when you get in or out of your vehicle.

2

Warning

Hold the handle tightly while driving your vehicle. Otherwise, it is very dangerous.

3

Warning

Watch out for the vehicle in the back. Danger of rear end collision.

7

Warning


Water-washing strictly prohibited

6

Cautions for Charging

1. When you charge the battery, shift the tow switch to 'OFF.'
2. Use the voltage and the current in spec for charging.
3. When you charge the battery, avoid an airtight place and do it in the place where airflow is smooth.
4. Do not touch the consent or the charger with wet hands. You may get an electric shock.

12

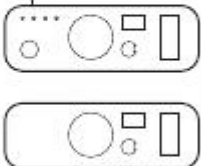

13

14

(P)
PARKING

16



11

Warning

1. It is a very dangerous task to handle the battery. You must be well aware of all the contents in user's manual before you do so.
2. Electrolyte is a thin sulfuric acid and it contains a strong toxicity and corrosiveness. Do not expose your body or vehicle to it. If you're exposed to it, wash very carefully with water.
3. Check the level and the weight of electrolyte periodically. If it's below the standard, recharge it or refill the distilled water.
4. Please, use our company's product for wiring of battery. An arbitrary remodeling or wrong connection may lead to a serious accident.
5. Do not approach the heat of fire. It is the main cause for explosion.

8



9



15

992. DECAL(영문)

번호 (실지기) NO. (From - To)	부품 명칭 PART NAME	부품 번호 PART NUMBER	Q'TY					비고 REMARK
			CU2	CU6	CA6	CN2	CN6	
1 (201012 -)	데칼 - 핸들 작동 지침 DECAL-OPERATING INSTRUCTION HANDLE	99211-C5100	1		1			
2 (201012 -)	데칼 - 핸드 그립 경고 DECAL-Hand Grip 경고	99212-C5100			1	1		
3 (201012 -)	데칼 - 후속차 주의 DECAL-후속차 주의	99213-C5100			1			
4 (201012 -)	데칼 - 운전요령 수동 DECAL-운전요령 수동	99214-C5100			1	1		
5 (201012 -)	데칼 - 운전요령 유도 DECAL-운전요령 유도	99214-C5200			1	1		
6 (201012 -)	데칼 - 충전기 지침 DECAL-Charging Instruction	99215-C5100			1	1		
7 (201012 -)	데칼 - 물 주의 DECAL-Water Warning	99216-C5100			1	1		
8 (201012 -)	데칼 - 드라이브 S/W DECAL-Drive S/W	99217-C5100			1	1		
9 (201012 -)	데칼 - 견인 S/W DECAL-Tow S/W	99218-C5100			1	1		
10 (201012 -)	데칼 - 견인 지침 DECAL-Tow Instruction	99219-C5100			1	1		
11 (201012 -)	데칼 - 배터리 경고 DECAL-Battery Warning	99221-C5100			1	1		
12 (201012 -)	데칼 - 컬럼 커버 매뉴얼 DECAL-Column Cover MANUAL	99122-C5100			1			
13 (201012 -)	데칼 - 컬럼 커버 AGV DECAL-Column Cover AGV	99122-C5200						
14 (201012 -)	데칼 - 주차 브레이크 DECAL-Parking brake	99223-C5100			1			
15 (201012 -)	데칼 - 지시 S/W DECAL-Follow S/W	99124-C5200						
16 (201012 -)	데칼 - 시트 히터 S/W DECAL-SEAT HEATER S/W	99125-C5100c			1	1		

